

User Manual

LED Rock Lights
1 drag 8

We're here for you. Please reach out with any questions


Specification

Product name	-----	LED rock lights
Material	-----	ABS plastic
Input Voltage	-----	12V DC
Wattage	-----	10 Watts
Service Life	-----	50,000 Hours
Control Mode	-----	Bluetooth APP + RF remote
Protection Level	-----	IP68

Remote Control

Use the included remote to to:

- Turn lights on/off
- Adjust speed and brightness
- Select colors and lighting modes
- Activate auto-mode or group management

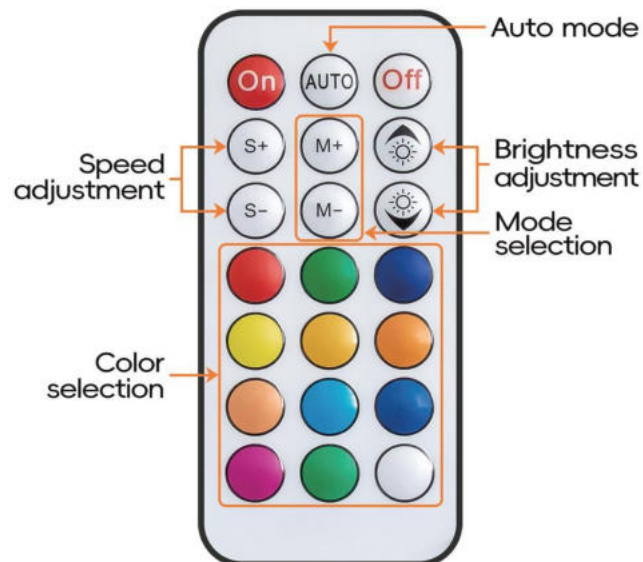


First Steps After Unboxing

Before installation, perform a simple functional test to ensure all components are working correctly:

- 1 Connect one LED rock light to a 12V power source (e.g., car battery) using the provided wires and connectors
- 2 Verify that the light turns on and responds to the included RF remote
- 3 If any light is faulty or accessories are missing, contact our support team. We typically respond within 24 hours

Bluetooth App Control – Magic Lantern

- 1 Scan the QR code in the manual with your smartphone to download the Magic Lantern app
- 2 Install the app and enable Bluetooth on your phone
- 3 Open the app and tap on the detected LED light to pair
- 4 Tap the menu icon (≡) in the top-left corner and select "My Devices"
- 5 Once connected, use the app to turn lights on/off, adjust colors, brightness, modes, and more


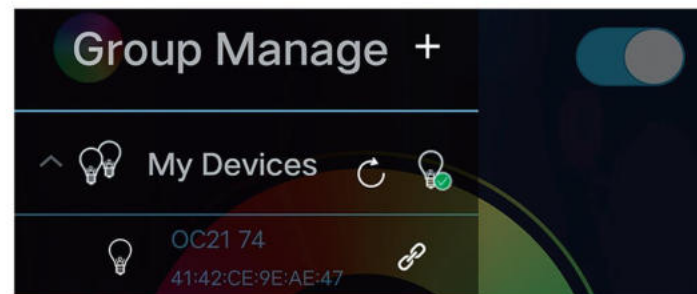


Scan for APP

Installation Guide



Installation illustration

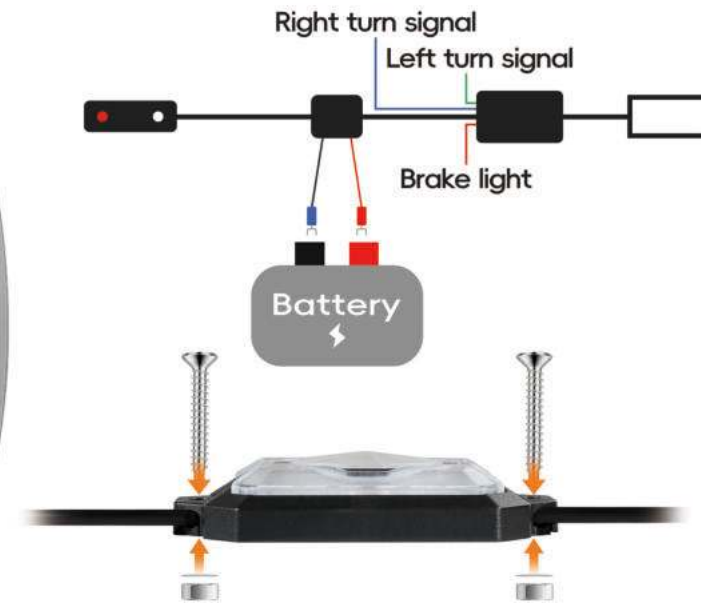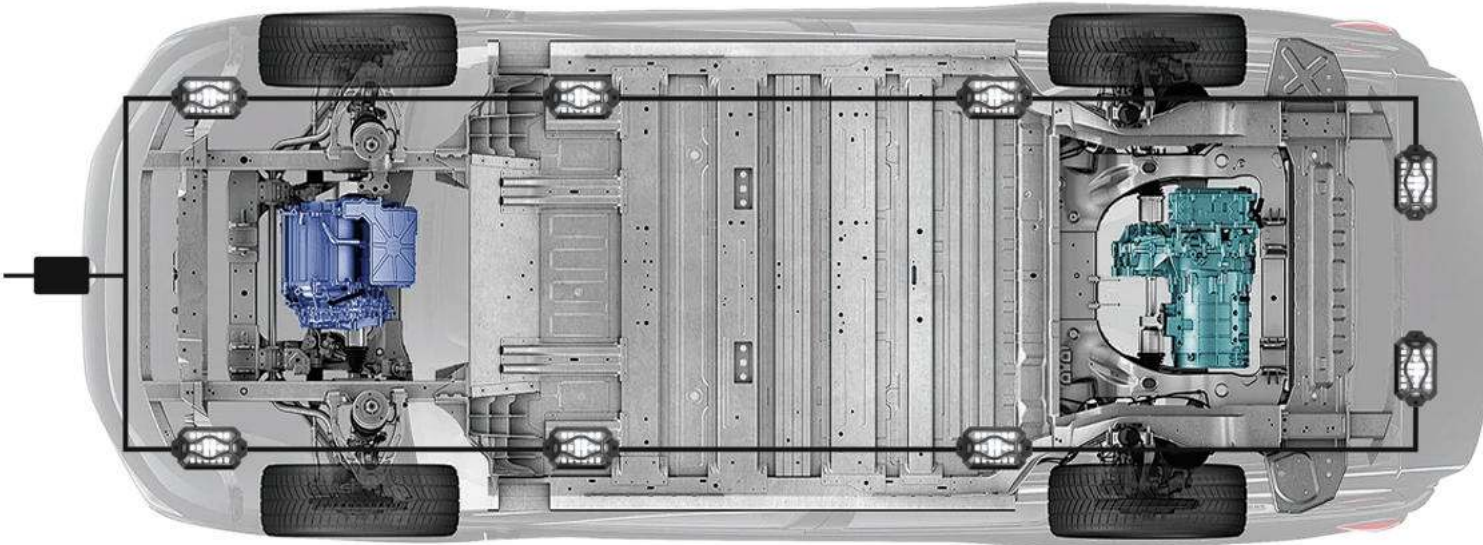

Follow these steps for a secure and professional installation

- 1 Pre-Installation Test:** Temporarily connect the light to the car battery using the supplied wires. Confirm it powers on and responds to the app or remote control
- 2 Prepare Surface:** Clean and dry the mounting areas on the vehicle's underside to ensure proper adhesion
- 3 Mark & Drill:** Hold each light in the desired position and mark the screw holes. Drill a 1/4" hole at each mark
- 4 Mount Lights:** Apply the adhesive tape to the back of the light, then secure it to the surface using the provided screws
- 5 Route Wires:** Run the main power cable along the vehicle's frame. Secure it neatly with cable ties, keeping wires away from moving parts or heat sources
- 6 Connect to Battery:** Attach the power cable's positive (+) wire to the positive battery terminal and the negative (-) wire to the negative terminal
- 7 Final Check:** Organize any excess cable and perform a final test of all lights and functions with the app or remote

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.