


LAIA CUTE 12X/30X


P/N: C12X/30X

User manual

1 Product looking

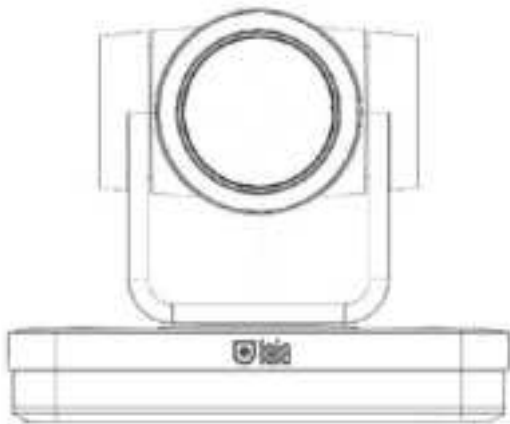

2 Pack

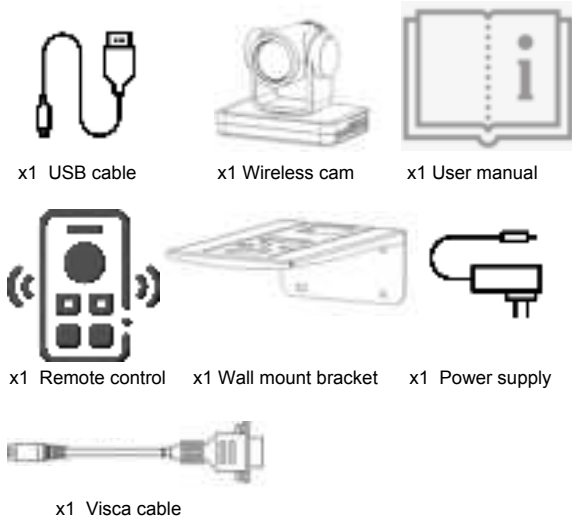

3 Product features

Full HD resolution
1/2.8 inch high quality CMOS sensor. Resolution is up to 1920x1080 with frame rate up to 60 fps.

Multiple optical zoom lens
12X/30X optical zoom lens to ensure good quality video.

Autofocus technology
Fast, accurate and stable auto focusing technology.

Low noise and high SNR
Super high SNR image is achieved with low noise CMOS. Advanced 2D/3D noise reduction technology further reduces the noise while ensuring high image clarity.

Multiple video output interfaces
HDMI, USB3.0, LAN. Simultaneously output audio and video signal via HDMI and LAN. LAN interface support POE, USB 3.0 support dual code stream.

USB3.0 Support Dual Coding Stream
Support main stream and sub-stream, simultaneous output and supports YUY2, MJPEG, H.264, NV12, H.265 video coding format.

Built-in Gravity Sensor: support PTZ auto-flip function and easy installation.

Multiple Network Protocol: support ONVIF,GB/T28181,RTSP,RTMP,VISCA OVER IP,IP VISCA,RTMPS,SRT protocols; Support RTMP push mode,easy to be connected to streaming server (Wowza,FMS); Support RTP multicast mode.

Control Interface: RS422 is compatible with RS485, RS232-IN, RS232-OUT, and the RS232 interface supports cascading.

Multiple Control Protocol: Support VISCA,PELCO-D,PELCO-P protocols. Camera also supports automatic identification protocols.

Quiet Pan / Tilt Movement: with high accuracy step driving motor, camera can pan / tilt extremely quiet and smooth.

Various remote controls: Users can choose infrared remote control or wireless remote control according to the environmental conditions used. The 2.4G wireless remote control is not affected by angle, distance, and infrared interference. Support the remote control signal transparent transmission function, which is convenient for back-end equipment to use.

Multiple Application: Online-education, Lecture Capture, Webcasting, Video conferencing, Tele-medicine, Unified Communication, Emergency command and control systems, etc.

4 Safety precautions

Avoid damage to product caused by heavy pressure, strong vibration or immersion during transportation, storage and installation.

Housing of this product is made of organic materials. Do not expose it to any liquid, gas or solids which may corrode the shell.

Do not expose the product to rain or moisture.

To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.

Do not use the product beyond the specified temperature, humidity or power supply specifications.

Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed. Do not use strong or corrosive detergents to avoid scratching the lens and affecting the image.

This product contains no parts which can be maintained by users themselves. Any damage caused by dismantling the product by user without permission is not covered by warranty.

Installation and use of this product must strictly comply with local electrical safety standards.

The power supply of the product is $\pm 12V$, the max electrical current is 2A.

Do not rotate the camera head violently, otherwise it may cause mechanical failure.

This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display inclined image.

Ensure there are no obstacles within rotation range of the holder.

Do not power on before completely installation.

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in household application. Appropriate measure is required.

5 Product specifications

Camera Parameter		
Parameter/Model	12X 30X	
Focus	3.9 ~ 48.8mm 4.2 ~ 129mm	
FOV	6.3° (N) 72.5° (W) 2.11° (N) 58.9° (W)	
Aperture Value	F1.8 ~ F2.4 F 1.6 ~ F4.7	
Effective Pixels	2.07, 1/2.8-inch high-quality CMOS sensor	
Video Format	HDMI Output: 1080P60, 1080P50, 1080P30, 1080P25, 720P60, 720P50, 1080P59.94, 1080P29.97, 720P59.94, USB3.0 Output Mainstream: YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@30/25/20/15/10/5fps; MJPG/H264: 1920×1080/1800×896/1280×720/1024×576/800×600/800×448/720×576/720×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps; Substream: YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@30/25/20/15/10/5fps; MJPG/H264: 1920×1080/1800×896/1280×720/1024×576/800×600/800×448/720×576/720×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps	
	Minimum Illumination	0.5Lux(F1.8, AGC ON)
	DNR	2D + 3D
	AWB	Automatic, manual, one-key white balance, specified color temperature
Focus mode	Automatic, manual, one-key focus	
Exposure mode	Auto, manual, shutter priority, aperture priority, brightness priority	
Iris value	F1.8 ~ F11, CLOSE	
Shutter Speed	1/25 ~ 1/10000	
BLC	on/off	
Dynamic range	DR, 1-B	
Image adjustment	Brightness, chroma, saturation, contrast, sharpness, black and white mode, gamma curve	
SNR	>50dB	
Interface		
Product interface	HDMI, LAN (PoE), USB3.0 (TypeB compatible with USB2.0), SD (A-IN, RS232-IN, RS232-OUT, RS422 (compatible with RS485) rotary switch, DC12V Power, Power Switch	
Video Encoding Format	LAN interface: Support main stream and sub-stream H.265, H.264 USB3.0 Interface: main stream support YUY2, MJPEG, H.264, NV12	
Audio input interface	Dual channel 3.5mm linear input	
Audio output interface	HDMI, SD, LAN, USB3.0	
Audio compression	AAC, MP3, G.711A	
LAN interface	10M/100M adaptive Ethernet port, support PoE power supply, support audio and video output	
Network protocol	RTSP, RTMP, ONVIF, GB/T28181, VISCA OVER IP, IP VISCA, RTMP, SRT Support remote upgrade, remote restart, remote reset	
Control interface	RS232-IN, RS232-OUT, RS422 compatible with RS485	
Serial communication protocol	VISCA/Pelco-D/Pelco-P; support baud rate 115200/38400/9600/4800/2400	
USB communication protocol	UVC (video communication protocol), UAC (audio communication protocol)	
Power interface	HEC3850 Power socket (DC12V)	
Power adapter	Input AC110V-AC220V; output DC12V/2.5A	
Input voltage	DC12V±10%	
Input current	<1A	
Consumption	<12W	

PTZ	
Pan rotation	-170° ~ +170°
Tilt rotation	-30° ~ +90°
Pan speed	0.1°/s ~ 100°/s
Tilt speed	0.1°/s ~ 45°/s
Preset speed	Pan: 100°/s, Tilt: 45°/s
Preset quantity	Maximum 255 preset positions can be set (10 via remote controls)
Other Parameter:	
Storage temperature	-10°C ~ +70°C
Storage humidity	20% ~ 95%
Working temperature	-10°C ~ +50°C
Working humidity	20% ~ 80%
Dimension	181mm×115mm×149mm
Weight	1.15kg
Environment	Indoor

6 Remote control

One to one code matching

Press the "set" and "*" keys combined for 3 seconds, LED indicator starts flashing. Camera receive the signal and power on, LED indicator will go off if code matching successfully. The camera can be controlled by this wireless remote control only after one to one code pairing. Otherwise please clear the code matching of this remote control, or use other remote control to pair with the camera again.

If one to one code matching failed, the red LED light flashes for 20 seconds and then goes off, camera will stop code match and turn on sleep mode; Press any key to wake up the camera and re-match code.

Note: After code matching successfully, please select the camera address to control it.

Clear code

Press the "set" and "*" keys combined for 3 seconds, LED indicator starts flashing. Camera will power off and on, the LED indicator will go off if clear code successfully.

Sleep and Wake up mode

Press any key to wake up the camera from sleep mode.

Note: In this manual, "press the key" means a click rather than a long-press, and a special note will be given if a long-press for more than one second is required.

When a key-combination is required, do it in sequence. For example, " [*] + [#] + [F1]" means press " [*]" first and then press " [#]" and last press " [F1]" .



Stand by key

The camera enters standby mode if long press 3s on standby key.

Long press 3s again on the standby key, the camera will self-check again and return to HOME position (If preset 0 position is set, the camera will return to preset 0 position).

Camera selection



Select the camera address to control

Focus control



Auto: auto focus mode
Manual: manual focus mode
Focus + (near): Press [FOCUS +] key (Valid only in manual focus mode)
Focus - (far): Press [FOCUS -] key (Valid only in manual focus mode)
 Press and hold the keys, the action of focus will keep continue and stop as soon as the key is released.

Zoom control



ZOOM +: press [ZOOM +] key to zoom in
ZOOM -: press [ZOOM -] key to zoom out
 Press and hold the keys, the action of focus will keep continue and stop as soon as the key is released.

Set and clear presets



Set Preset: press [SET PRESET] button, and then press the number key 0-9 to set preset positions.

Note: 10 presets via remote control.

Call Preset: Press a number key 0-9 directly to call a preset position.

Clear Preset: press [CLEAR PRESET] button, and then press the number key 0-9 to clear preset positions.

Note : press the [#] key three times continually to clear all presets.

Pan/Tilt control



Up: press **Down:** press
Left: press **Right:** press
Back to middle position: press " [HOME] "

Press and hold the up/down/left/right key, the pan/tilt movements will keep running, from slow to fast, until it runs to the endpoint; stop as soon as the key is released.

Menu setting



[MENU] : Open / close the OSD menu
[HOME] : Camera lens back to the middle position, confirm button and enter next menu.
[↑] [↓] : Choose item
[←] [→] : Modify values
[BLC ON/OFF] : Turn on or off the back light compensation.

Camera remote control address setting



[*] + [#] + [F1] : Camera Address No.1
[*] + [#] + [F2] : Camera Address No. 2
[*] + [#] + [F3] : Camera Address No. 3
[*] + [#] + [F4] : Camera Address No. 4

Key combination




- 1) [#] + [#] + [#] : Clear all presets
- 2) [*] + [#] + [6] : Restore factory defaults
- 3) [*] + [#] + [3] : Menu set to Chinese
- 4) [*] + [#] + [4] : Menu set to English
- 5) [*] + [#] + [9] : Flip switch
- 6) [*] + [#] +Auto: Enter aging mode
- 7) [#] + [*] +Auto: Exit aging mode
- 8) [*] + [#] +Manual: Restore the default user name, password, and IP address


- 9) [#] + [#] + [0] : Switch the video format to 1080P60
- 10) [#] + [#] + [1] : Switch the video format to 1080P50
- 11) [#] + [#] + [2] : Switch the video format to 1080I60
- 12) [#] + [#] + [3] : Switch the video format to 1080I50
- 13) [#] + [#] + [4] : Switch the video format to 720P60
- 14) [#] + [#] + [5] : Switch the video format to 720P50
- 15) [#] + [#] + [6] : Switch the video format to 1080P25
- 16) [#] + [#] + [7] : Switch the video format to 1080P25
- 17) [#] + [#] + [8] : Switch the video format to 720P30
- 18) [#] + [#] + [9] : Switch the video format to 720P25

Note: If the address of former remote control is not address 1 but another one from 2, 3, 4, the corresponding camera address will restore to address 1 when all parameters are restored to factory default. User should change the remote control address to address 1.


7 Connection and installation

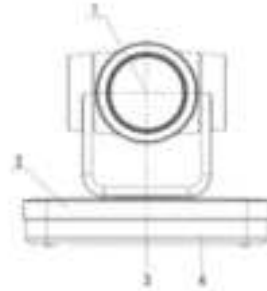

1. Camera lens
2. Camera base
3. Remote control receiving indicator
4. Infrared receiver

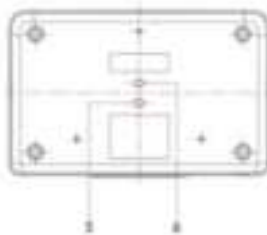


5. Tripod screw hole
6. Tripod screw hole

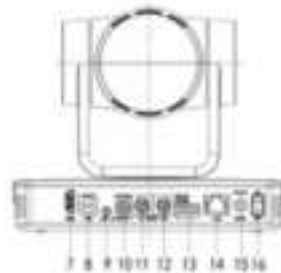

7. HDMI output interface
8. USB 3.0 interface
9. Audio input interface (Line in)
10. Rotary dial switch
11. RS232 input interface
12. RS232 output interface
13. RS422 compatible with RS485 interface
14. Lan port
15. Power input socket (12V)
16. Power switch button

INTERFACES

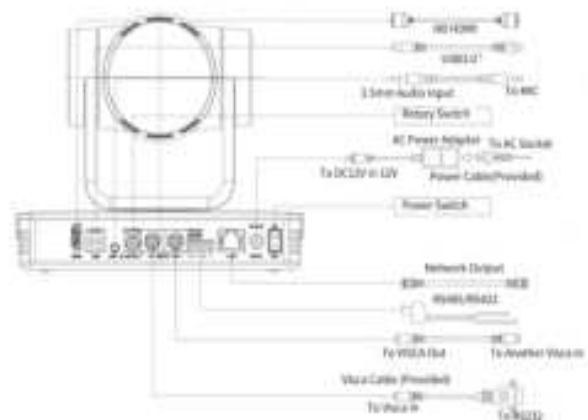


1) After power on and self-check, the camera will automatically return to the preset 0 position if it's pre-set.

2) The default address for the IR remote control is 1#. If the menu restored to factory defaults, the remote control default address will restore to 1#.


WALL MOUNTING

Note: Ceiling or wall mounting brackets can only be mounted on template and concrete wall. For safety reason, plasterboard is not recommended.

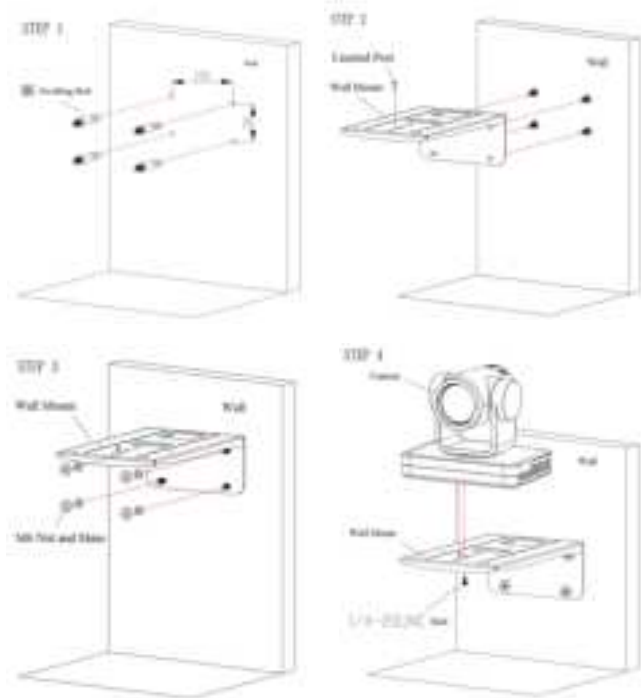

CEILING MOUNTING

Note: Ceiling or wall mounting brackets can only be mounted on template and concrete wall. For safety reason, plasterboard is not recommended.

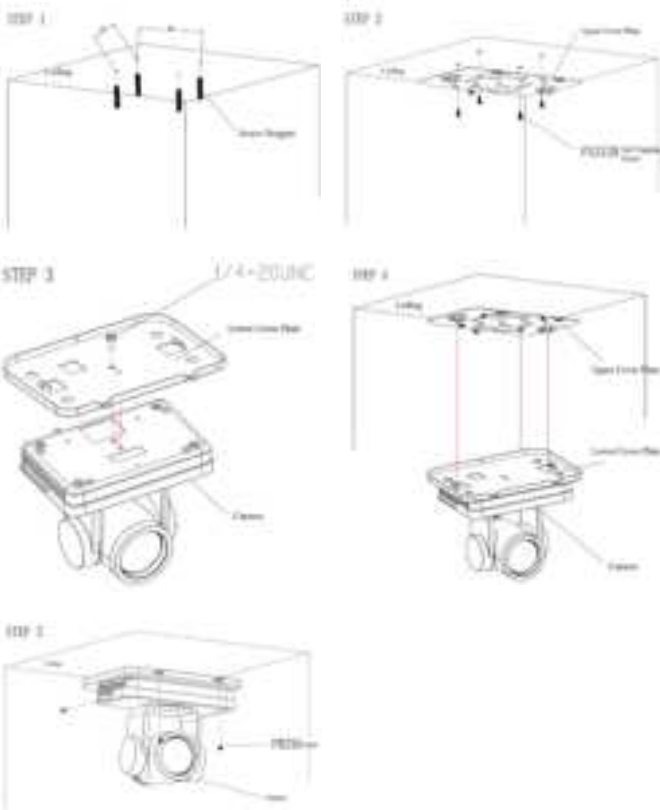

8 RS-232 interface

Connection to PC or Camera Controller

Camera	WindowsDB-9
1.DTR	1.DCD
2.DSR	2.RXD
3.TXD	3.TXD
4.GND	4.DTR
5.RXD	5.GND
6.GND	6.DSR
7.IR OUT	7.RTS
8.NC	8.CTS
	9.RI

NO.	Port	Definition
1	DTR	Data Terminal Ready
2	DSR	Data Set Ready
3	TXD	Transmit Data
4	GND	Signal Ground
5	RXD	Receive Data
6	GND	Signal Ground
7	IR OUT	IR Commander Signal
8	NC	No Connection

NO.	Port	Definition
1	DCD	Data Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	System Ground
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator

9 Rotary dial switch

0: Video Format: 1080P60	B: Video Format: 1080P56.94
1: Video Format: 1080P50	9: Video Format: 1080P59.94
2: Video Format: 1080I60	A: Video Format: 1080P29.97
3: Video Format: 1080I50	B: Video Format: 720P56.94
4: Video Format: 1080P30	C: Video Format: 720P29.97
5: Video Format: 1080P25	F: Menu video format
6: Video Format: 720P60	
7: Video Format: 720P50	

10 Menu introduction

Note: The modification valid only if exit menu before save and power off.

MENU CONTROL

- [MENU] : Enter / exit the OSD menu or return to the previous menu
- [HOME] : Enter next menu
- [↑] [↓] : Choose item
- [←] [→] : Modify values

ENGLISH MENU



After camera power on and self-check, follow the steps above to verify network connection.

Open DOS command window, ping 192.168.5.163 and press Enter key.

IE LOGIN

Client login

Input the default IP address 192.168.5.163 in the browser and click Enter button to enter into Web Client login page. User can login as administrator and normal user. If login as administrator (Default User name/Password: admin), users can preview, playback, and set configuration in the Web Client; If login in as normal user (Default User name/Password:user1 or user2), users can only preview, playback and logout, no option for configuration.

Note: Web access support IE based browsers: IE, 360 browsers and etc. Chrome login is available after firmware update, but only support basic configuration and preview video, no functions of record video, voice volume, video capture and playback.

Download and install Plug in for IE login

If it's the first time to login via IE browser, the login page will prompt "Playback plug-in is not installed, please download and install!" Click on this message, download and install MRWebXinstall.exe according to the information.

Web page login

After installing the plug-in, enter the user name and password, click login (the initial default user name and password are: "admin", you can change the user name and password after entering), enter the Web client management interface.

Enter user name and password (default user name and password: "admin"). Users can manage and change user name, password and etc.

11 Network configuration

Direct connection: Connect the camera and computer by network connecting cable.

Internet connection mode: Connect the camera to Internet by Router or Switcher and user can login the device by browser web page.

Note: Please do not put the power cable and network cable in places where can be easily touched, to prevent video unstable signal transmission due to poor contact of cables.


The computer must have the network segment where the camera IP address belongs to. The device will not be accessible if without the segment. The camera default IP address is 192.168.5.163, segment 5 must be added in the computer.

First, open the window of Local Area Connection Properties on computer, select the "Internet protocol version 4(TCP/IPv4)". Double click or click the property "Internet" protocol version 4 (TCP/IPv4) to enter into the Internet Protocol Version 4(TCP/IPv4) Properties window; select "Advanced" to enter into the Advanced TCP/IP Setting and add IP and subnet mask. Click the "Confirm" to finish the adding of IP segment. User can add the corresponding network segment according to the revised IP address of the camera.

Note: The IP address to be added cannot be same with that of other computers or devices. The existence of this IP address needs to be verified before adding.

To verify whether the network segment has been successfully added, click the "Start" and select "Operation" to input cmd, then click CONFIRM and open DOS command window, ping 192.168.5.26 and press

Enter key to display information as shown below:

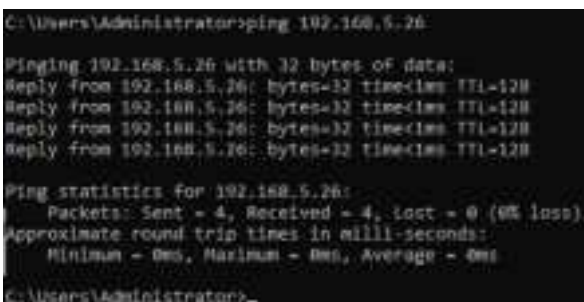

12 Serial communication control

Under normal working conditions, the device can be controlled through the RS232/RS485 interface. The RS232 serial port parameters are as follows: Baud rate: 2400/4800/9600/38400/115200 bit/sec; start bit: 1 bit; data bit: 8 bits; stop bit: 1 bit; parity bit: none

After power on, the device first turns to the lower left and then back to the middle position. The zoom lens is pulled to the farthest position, and then pulled back to the most recent self-check to complete. If the device has saved No. 0 preset after initialization, the device will be set to No. 0 preset.

At this point, the user can use the serial port command to control the device.

VISCA PROTOCOL RETURN COMMAND

Auto/Completion Message	Command Packet	Note
ACK	Ⓜ 41 FF	Returned when the command is accepted.
Completion	Ⓜ 51 FF	Returned when the command has been executed.
Z = Camera Address + 3		
Error Messages	Command Packet	Note
Syntax Error	Ⓜ 60 00 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Not Executable	Ⓜ 61 41 FF	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

VISCA Protocol control command

Command	Function	Command Packet	Note
AddressSet	Broadcast	88 30 0p FF	p: Address setting
IF_Clear	Broadcast	88 31 30 31 FF	IF_Clear
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	p: Zoom Position
	Tele(Standard)	8x 01 04 07 02 FF	
	Wide(Standard)	8x 01 04 07 03 FF	
	Tele(Variable)	8x 01 04 07 2p FF	
	Wide(Variable)	8x 01 04 07 3p FF	
CAM_Focus	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqr: Focus Position
	Stop	8x 01 04 08 00 FF	p = 0(tele) - 7(high)
	Far(Standard)	8x 01 04 08 02 FF	
	Near(Standard)	8x 01 04 08 03 FF	
	Far(Variable)	8x 01 04 08 2p FF	
	Near (Variable)	8x 01 04 08 3p FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	
Auto Focus	8x 01 04 38 02 FF		
CAM_Zoom Focus	One Push mode	8x 01 04 35 04 FF	pqr: Zoom Position uvw: Focus Position
	Direct	8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	

Command	Function	Command Packet	Note	
CAM_AF_Sensitivity	High	8x 01 04 56 01 FF	Focus sensitivity Setting	
	Normal	8x 01 04 56 02 FF		
CAM_AF_Zone	Top	8x 01 04 5A 00 FF	Focus Region Setting	
	Center	8x 01 04 5A 01 FF		
	Bottom	8x 01 04 5A 02 FF		
	ALL	8x 01 04 5A 03 FF		
	One Push mode	8x 01 04 35 04 FF		
CAM_WB	One Push Trigger	8x 01 04 70 05 FF	One Push WB Trigger(Enabled) during One Push WB mode	
	CAM_WB Mode	8x 01 04 35 04 FF	pc = 00-30 WBMode	
CAM_AWB_Sensitivity	Low	8x 01 04 A8 00 FF	WB Sensitivity Setting	
	Normal	8x 01 04 A8 01 FF		
CAM_RGain	High	8x 01 04 A9 02 FF	Manual Control of R Gain	
	Reset	8x 01 04 03 00 FF		
	Up	8x 01 04 03 02 FF		
	Down	8x 01 04 03 03 FF		
	Direct	8x 01 04 43 00 00 0p 0q 0r FF		pc: R Gain
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of B Gain	
	Up	8x 01 04 04 02 FF		
	Down	8x 01 04 04 03 FF		
	Direct	8x 01 04 44 00 00 0p 0q 0r FF		pc: B Gain
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode	
	Manual	8x 01 04 39 03 FF	Manual Control mode	
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode	
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode	
CAM_Shutter	Bright	8x 01 04 39 0D FF	Bright mode	
	Reset	8x 01 04 0A 00 FF	Shutter Setting	
	Up	8x 01 04 0A 02 FF		
	Down	8x 01 04 0A 03 FF		
	Direct	8x 01 04 4A 00 00 0p 0q 0r FF		pc: Shutter Position
Reset	8x 01 04 0B 00 FF	Iris Setting		
Up	8x 01 04 0B 02 FF			
Down	8x 01 04 0B 03 FF			
Direct	8x 01 04 4B 00 00 0p 0q 0r FF		pc:Iris Position	
CAM_Gain Limit	Reset	8x 01 04 0C 00 FF	Gain Limit Setting	
	Up	8x 01 04 0C 02 FF		
	Down	8x 01 04 0C 03 FF		
CAM_Bright	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position	
	Reset	8x 01 04 0D 00 FF	Bright Setting	
	Up	8x 01 04 0D 02 FF		
	Down	8x 01 04 0D 03 FF		
	Direct	8x 01 04 4D 00 00 0p 0q 0r FF		pc: Bright Position
CAM_ExpComp	On	8x 01 04 3E 02 FF		Exposure Compensation ON/OFF
	Off	8x 01 04 3E 03 FF		
	Reset	8x 01 04 0E 00 FF	Exposure Compensation Amount Setting	
	Up	8x 01 04 0E 02 FF		
	Down	8x 01 04 0E 03 FF		
Direct	8x 01 04 4E 00 00 0p 0q 0r FF	pc: ExpComp Position		

Command	Function	Command Packet	Note
CAM_Back Light	On	8x 01 04 32 02 FF	Back Light
	Off	8x 01 04 32 03 FF	Compensation
	Reset	8x 01 04 21 00 FF	WDR Level Setting
Up	8x 01 04 21 01 FF		
CAM_WDRStrength	Down	8x 01 04 21 02 FF	p: WDR Level Position
	Direct	8x 01 04 51 00 00 0p 0q FF	
	2D	8x 01 04 53 0p FF	
CAM_NR	3D	8x 01 04 54 0p FF	Phi-3 3.OFF
	2D	8x 01 04 54 0p FF	Phi-3 5.OFF
CAM_Gamma		8x 01 04 5B 0p FF	p = 0 - 4 0: Default 1: 0.45 2: 0.50 3: 0.55 4: 0.63
CAM_Low-Light Mode	On	8x 01 04 2D 01 FF	Low-Light Mode Setting
	Off	8x 01 04 2D 00 FF	
CAM_Gain		8x 01 04 4C 00 00 0p 0q FF	pc: 0-15
		8x 01 01 3p FF	p: 1-10
CAM_Flicker	OFF	8x 01 04 23 00 FF	OFF
	50HZ	8x 01 04 23 01 FF	50HZ
	60HZ	8x 01 04 23 02 FF	60HZ
	Reset	8x 01 04 23 03 FF	
CAM_Aperture	Up	8x 01 04 62 02 FF	Aperture Control
	Down	8x 01 04 62 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	
CAM_Picture effect	BSW-Mode	8x 01 04 63 0p FF	Picture effect Setting
	OFF	8x 01 04 63 00 FF	
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	pc: Memory Number(0 to 254) Corresponds to 0 to 9 on the Remote Commander
	Set	8x 01 04 3F 01 0p FF	
	Recall	8x 01 04 3F 02 0p FF	
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal ON/OFF
CAM_PictureFlip	On	8x 01 04 68 02 FF	Image Flip Vertical ON/OFF
	Off	8x 01 04 68 03 FF	
CAM_ColorSaturation	Direct	8x 01 04 49 00 00 0p 0q FF	p=0-7 p=0-1 or pc: ColorSaturation Position
CAM_STWAVE		8x 01 04 22 0p 0q 0r 0s FF	pqr: Camera ID (1000 to 9999)
IRV_Menu	On	8x 01 04 66 00 02 FF	Turn on the menu screen
IR_Receive	Off	8x 01 04 66 00 03 FF	Turn off the menu screen
	On	8x 01 04 66 02 FF	(Remote commander)receive On/Off
CAM_SettingReset	Reset	8x 01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pc: Brightness Position
CAM_Contrast	Direct	8x 01 04 A2 00 00 0p 0q FF	pc: Contrast Position
CAM_Flip	Off	8x 01 04 AA 00 FF	Single Command For Video Flip
	Flip-H	8x 01 04 AA 01 FF	
	Flip-V	8x 01 04 AA 02 FF	
CAM_VideoSystem	Flip-HV	8x 01 04 AA 03 FF	P: 0-E Video System 2:1080P60 1:1080P30 3:Invalid Command 4:720P60
	Set camera video system	8x 01 58 38 00 0p FF	

Command	Function	Command Packet	Note
			3:720P60 4:1080P30 7:1080P25 A:1080P60M B:Invalid Command C:720P60M D:1080P30M E:Invalid Command
Pan_Speed	Up	8x 01 08 01 0V 0W 03 01 FF	VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low speed) to 0x14 (high speed) TXXX: Pan Position ZZZZ: Tilt Position
	Down	8x 01 08 01 0V 0W 03 02 FF	
	Left	8x 01 08 01 0V 0W 03 03 FF	
	Right	8x 01 08 01 0V 0W 03 04 FF	
	Upright	8x 01 08 01 0V 0W 03 05 FF	
	Downright	8x 01 08 01 0V 0W 03 06 FF	
	DownLeft	8x 01 08 01 0V 0W 03 07 FF	
	Stop	8x 01 08 01 0V 0W 03 08 FF	
	AbsolutePosition	0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 08 04 FF	
	Reset	8x 01 08 05 FF	
Pan-tilt LimitSet	Set	8x 01 08 07 00 0W	W: Up Right; 0: Down Left YYYY: Pan Limit Position(T80) ZZZZ: Tilt Limit Position(T80)
	Clear	0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
		0Z 0Z 0Z 0Z 0Z 0Z 0Z 0Z FF	

13 Streaming

Video Stream Capture

Configurations -> Video Configure-> Video Encode



Configure the parameters according to the network environment.

Note: stream name live/av0 (live/ XXX)

For example:

The default IP address of the camera is 192.168.5.163. The way to obtain the

RTSP video stream is as below

rtsp://192.168.5.163:554/live/av0 (av0 main stream)

rtsp://192.168.5.163:554/live/av1 (av1 sub stream)

The default IP address of the camera is 192.168.5.163. the way to obtain

RTMP video stream is as below

rtmp://192.168.5.163:1935/live/av0 (av0 main stream)

rtmp://192.168.5.163:1935/live/av1 (av1 sub stream)

Push video stream

Configurations -> Video Configure-> Stream Publish



Push RTMP stream to public network server, the stream camera must be on the public network, otherwise it will fail to connect to server.

Host address: server address, which can be either a domain name or an IP address.

Host port: server default port number.

Stream name: live/test (live/ XXX).

Username and password: the username and password set by the server, or leave it empty.

Access url : rtmp://host domain name: host port/live/xxx or (rtmp://host IP address: host port/live/xxx).

SOFTWARE UPGRADE

1). Log in to the web page and manage camera settings. The default page is preview interface, where users can PTZ control, record video, preset camera positions and etc.

2). Configurations -> System Configure-> Update



3). Click "browse" to select .mrg update file, then click upgrade button to finish software upgrading.

4). Camera reboot after completion of firmware update. It prompts with "successful upgrade".

Log in to check the firmware version to make sure software upgrade successful.

Then click "restore factory default", reboot and restore parameters to factory default (default IP 192.168.5.163, user name: admin; password admin).

1) First of all, you need to connect the camera to the network and adjust it according to your own network environment. You can choose DHCP, or set your own IP address and DNS.



2) Create an event on YouTube/Facebook and get the following information: "stream key" and "stream URL".



14 Camera tracking

1. After login, enter into the management interface and turn on Tracking below "Monocular Tracking"
2. On the right top is PTZ control area, in which you can set the preset region of Regional Tracking. Interface is as below.



3) Youtube: Fill these two parameters in the "Host Address" and "Stream Name" of the camera as you will see in the following image.




3.1) Facebook: Fill these two parameters in the "host address" and "stream name" of the camera, and change the port to 443.



IMPORTANT: If the camera reboots, you will need to click on "save" to republish to streaming.


Some models may need to open the audio settings to launch the broadcast normally. If you can't broadcast the audio according to the above method, please try to activate the audio according to the image below.

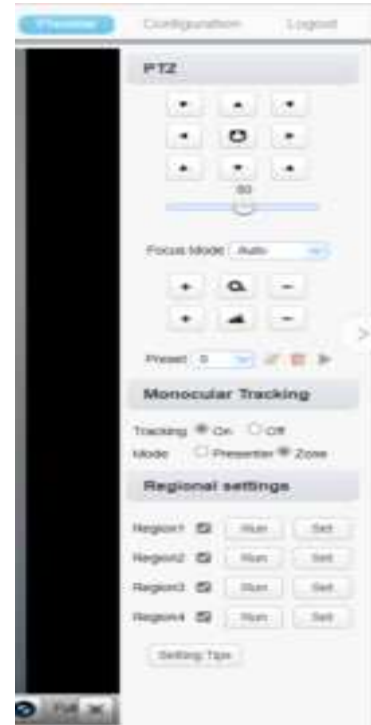

1. On the PTZ Area, adjust image by clicking direction buttons to select one region.
2. After finishing region 1 setting, click "Set" to complete the Region 1 Tracking. Other region settings are same as region1 setting steps.

You can set 4 different regions, and minimum 2 regions. The Regional Tracking settings can only be configured through the webpage. Call out the regional tracking: Click "Run" of corresponding region on the "Regional settings" area.

1. Each preset preview image must be continuous from left to right and overlap when setting the tracking regions.
2. You need to tick next to the region number to save the setting location when you setting the region.

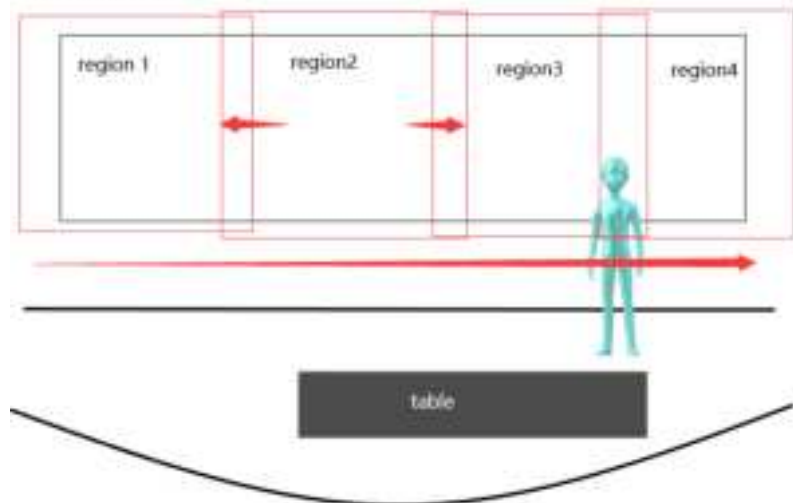

15 Maintenance and troubleshooting

MAINTENANCE

- 1) Please power off the camera and disconnect the power adapter and socket, if it's not used for a long run.
- 2) Use soft cloth or tissue to clean the camera cover.
- 3) Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed. Do not use strong or corrosive detergents to avoid scratching the lens and affecting the video quality.

TROUBLESHOOTING

1) No video output

- a. Check whether the camera power supply is connected, the voltage is normal, the power indicator is lit.
- b. Whether the machine could do self-check after restarted.
- c. Check whether the bottom of the DIP switch is the normal operating mode (see Table 2.2 and Table 2.3)
- d. Check whether the video output cable or video display is normal

2) Image flickering issue.

- a. Check whether the video output cable or video display is normal

3) Video dithering when zoom-in or zoom-out

- a. Check whether the camera installation position is solid
- b. Whether there is shaking machine or objects around the camera

4) Remote control not works

- a. Remote control address is set to 1 (if the machine is set back to the factory defaults, remote control addresses need to be back to 1 too)
- b. Check whether the battery is installed on the remote controller or low .
- c, Check the camera working mode is the normal operating mode (see Table 2.2 and Table 2.3)
- d. Check the menu whether is closed, camera control through remote controller is only available after exiting the menu. If video output from LAN, menu will not be displayed, menu will automatically exists 30s later, and then it can be controlled by remote controller.

5) Serial port not works

- a. Check whether the camera serial device protocol, baud rate, address is consistent
- b. Check whether the control cable is connected properly
- c. Check whether the camera working mode is the normal operating mode

6) Web pages cannot log in.

- a. Check if the camera outputs video normally by connecting directly to the screen.
- b. Check whether the network cable is connected properly (Ethernet port yellow light flashes to indicate normal network cable connection)
- c. Check whether your computer is added the segment and the segment is consistent with the IP address of the camera
- d. Click "Start" and select "Run" and then type "cmd" in the computer; Click "OK" then turn on a DOS command window to enter ping 192.168.5.163.

```
C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Users\Administrator>
```