


# LANCOM 1793VAW

## Quick Reference Guide



**LANCOM**  
Systems

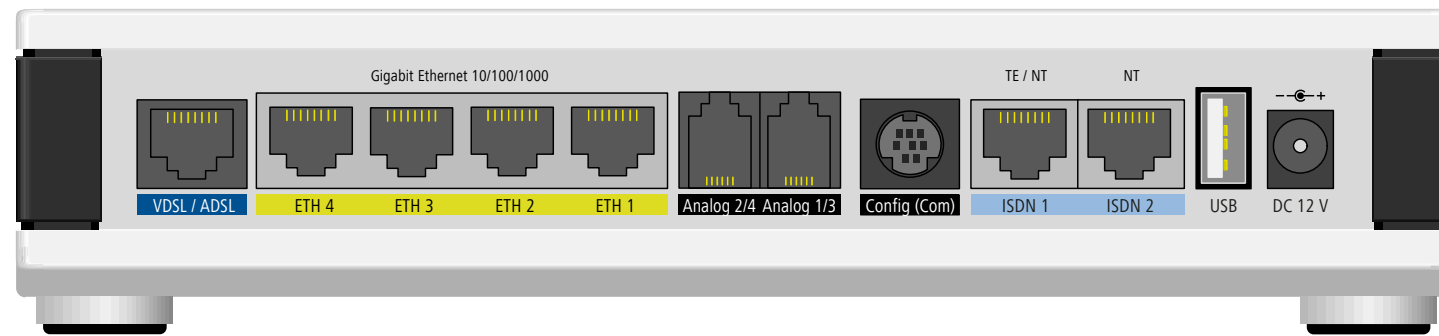

- ① **VDSL / ADSL interface**  
Use the supplied DSL cable for the IP-based line to connect the VDSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.
- ② **Ethernet interfaces**  
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.
- ③ **Analog interfaces**  
Connect analog terminal devices to the analog interfaces either directly via RJ11, or with the help of the enclosed TAE adapters, either directly or via the additionally enclosed RJ11 twin adapters. The RJ11 twin adapters are wired as listed below when looking into the ports with contacts at the bottom:  
when connected to router port 1/3: port 1 left, port 3 right,  
when connected to router port 2/4: port 2 left, port 4 right
- ④ **Configuration interface**  
Use a serial configuration cable to connect the serial interface (COM) to the serial interface of the device you want to use for configuring / monitoring (separately available).
- ⑤ **ISDN interfaces**  
ISDN 1:  
Internal (NT) or external (TE) ISDN bus.  
This feature is controlled by LCOS.  
ISDN 2:  
Internal (NT) ISDN bus.  
  
A 100-Ohm resistor for line termination is switchable in LCOS.
- ⑥ **USB interface**  
You can use the USB interface to connect a USB printer or a USB memory stick.
- ⑦ **Power**  
After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place.  
Use only the supplied power adapter.



- Please observe the following when setting up the device**
- > Do not rest any objects on top of the device
  - > For devices to be operated on the desktop, please attach the adhesive rubber footpads
  - > In case of wall mounting, use the drilling template as supplied




- > Keep the ventilation slots on the side of the device clear of obstruction
- > Rack installation with the optional LANCOM Rack Mount (separately available)



**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**  
Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

MOUNTING AND CONNECTING THE DEVICE

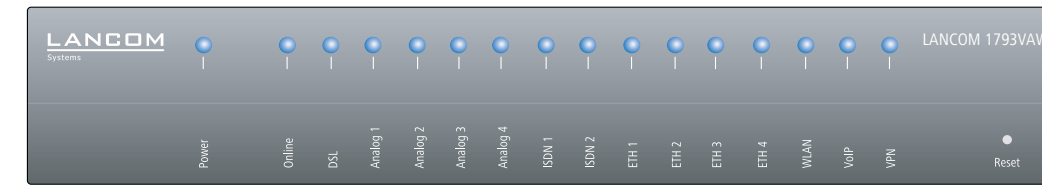

① Power	⑤ ISDN
Off	Interface deactivated
Green, permanently*	D-channel active
Green, flickering	ISDN data transfer
Red / green blinking	ISDN transfer error
Red blinking	ISDN hardware error
1x green inverse blinking*	
2x green inverse blinking*	
3x green inverse blinking*	
② Online	⑥ ETH
Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Red, permanently	Data transmission
③ DSL	⑦ WLAN
Off	No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons.
Green, permanently	At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons.
Green, flickering	DFS scanning or other scan procedure
Red, flickering	
Red / orange, blinking	
Orange, blinking	
Orange, permanently	
Green, blinking	
④ Analog	⑧ VoIP
Off	No SIP accounts defined or VCM is off
Green, permanently	All defined and active SIP accounts (outgoing) were successfully registered
Orange, blinking	Not all defined and active SIP accounts were registered (possibly still in process)
Green, blinking	Number of currently used lines (connecting or connected)
⑨ VPN	⑩ Reset
Off	Reset button
Green, permanently	Operated e.g. with a paper clip
Green, flashing	> short press: Restart the device
	> long press: Reset the device

\*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

Hardware	
Power supply	12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection
Power consumption	Max. ca. 17 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	1 quiet fan
Interfaces	
WAN: VDSL2	> VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 35b > VDSL Supervectoring as per ITU G.993.2 (Annex Q) > VDSL2 vectoring as per ITU G.993.5 (G.Vector) > Compatible to VDSL2 from Deutsche Telekom > Compatible to U-R2 from Deutsche Telekom (1TR112) > ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO, ITU G.992.3, and ITU G.992.1 > ADSL2+ over POTS as per ITU G.992.5 Annex A/M with DPBO, ITU G.992.3, and ITU G.992.1 > Supports just one virtual connection at a time in ATM (VPI-VCI pair)
Wi-Fi	> Frequency band: 2400-2483.5 MHz (ISM) or 5150-5825 MHz (restrictions vary between countries) > Radio channels 2.4 GHz: Up to 13 channels, max. 3 non-overlapping (2.4-GHz band) > Radio channels 5 GHz: Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required)
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration.
USB	USB 2.0 hi-speed host port for connecting USB printers (USB print server), serial devices (COM-port server) or USB drives (FAT file system)
ISDN 1 / ISDN 2	ISDN 1: Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS. According to the settings, connect the light-blue ISDN cable either to the NTBA or the ISDN terminal device. ISDN 2: Internal (NT) ISDN bus. Use the light-blue ISDN cable to connect the ISDN device to the ISDN interface.
Analog 1 / Analog 3 Analog 2 / Analog 4	Use the cable of your analog devices to connect them with the analog interfaces. If necessary, use the enclosed adapter.
Config (Com) / V.24	Serial configuration interface/COM-port (8-pin mini-DIN); 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.
WAN protocols	
VDSL, ADSL, Ethernet	PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN
ISDN	DSS1 (Euro-ISDN), PPP, X75, HDLC, ML-PPP, V.110/GSM/HSCSD
Declaration of Conformity	
Hereby, LANCOM Systems GmbH   Adenauerstrasse 20/B2   D-52146 Wuerselen, declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.lancom-systems.com/ce/">www.lancom-systems.com/ce/</a>	
Package content	
Manual	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 Ethernet cable, 3 m (kiwi colored connectors); 1 DSL cable for an IP-based line, 4.25 m; 1 ISDN cable, 3 m (light-blue connectors)
Adapters	4 TAE adapters (RJ11 - TAE), 2 RJ11 twin adapters
Power adapter	External power supply adapter (230 V); NEST 12 V / 2 A DC/S; barrel / bayonet (EU), LANCOM item no. 111303 (not for WW devices)

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras -> License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.