

TOSHIBA

SERVICE MANUAL

COLOUR TELEVISION

21N21E2

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-5
DISASSEMBLY INSTRUCTIONS	
1.REMOVAL OF ANODE CAP	B1-1
2.REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C-1
CONFIRMATION OF HOURS USED	C-1
WHEN REPLACING EEPROM(MEMORY) IC	C-1
ELECTRICAL ADJUSTMENTS	D-1~D-5
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN/CRT	F-1~F-4
SCHEMATIC DIAGRAMS	
MICON/TUNER	G-1, G-2
IF/CHROMA	G-3, G-4
21PIN/AV SW	G-5, G-6
SOUND AMP	G-7, G-8
DEFLECTION/CRT	G-9, G-10
POWER	G-11, G-12
WAVEFORMS	H-1~ H-3
MECHANICAL EXPLODED VIEW	I-1
MECHANICAL REPLACEMENT PARTS LIST	J1-1
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~ J2-7

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	21 inch / 544.5mmV
			CRT Type	NORMAL
			Deflection	90 degree
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		PAL/SECAM
		Speaker		1 Speaker
			Position	Front
			Size	1.5 x2.7 Inch
		Sound Output	Impedance	8 ohm
			MAX	5.0 W
			10%(Typical)	4.0 W
		DDR SECAM		No
G-2	Tuning System	NTSC3.58(AV)+NTSC4.43		Yes
		PAL60Hz		Yes
		Broadcasting System		CCIR System B/G D/K I
		Tuner and Receive CH	System	1Tuner
			Destination	Hyper
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
		CH Coverage		E2 - E4, X - Z+2, S1 - S10, E5 - E12, S11 - S41, E21 - E69
		Intermediate Frequency		B/G, D/K, I
			Picture(FP)	38.9 , 38.9, 38.9 MHz
			Sound(FS)	33.4 , 32.4, 32.9 MHz
		Preset CH	FP-FS	5.5 , 6.5, 6.0MHz
				100
G-3	Power	Stereo/Dual TV Sound		No
		Tuner Sound Muting		Yes
		Power Source	AC	230V-240V AC 50Hz
		Power Consumption	DC	
			at AC	
G-4	Regulation			<u>60 W at AC 230 V 50 Hz</u>
				<u>3 W at AC 230 V 50 Hz</u>
				<u>-- kWh/Year</u>
G-5	Temperature	Stand by (at AC)		
		Per Year		
G-6	Operating Humidity	Protector		Yes
		Power Fuse		Yes
G-4	Regulation	Safety		CE(EN60065:98)
		Radiation		CE
		X-Radiation		-
G-5	Temperature	Operation		+5oC ~ +40oC
		Storage		-20oC ~ +60oC
G-6	Operating Humidity			Less than 80% RH

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Menu Type	Yes
				Character	
		Picture			Yes
		Contrast			Yes
		Brightness			Yes
		Colour			Yes
		Tint (NTSC Only)			Yes
		Sharpness			Yes
		Audio			No
		Bass			No
		Treble			No
		Balance			No
		BBE On/Off			No
		Stable Sound On/Off			No
		CH Tuning			Yes
		Manual			Yes
		Auto			Yes
		CH MAPPING			Yes
		CH Allocation			No
		Text Langage(East/West)			Yes
		Language			Yes
		Clock Set			No
		On/OffTimer Set			Yes
		On Timer Set			No
		Pin Code Registration			No
		Panel Lock			Yes
		Nicom Auto Off			No
		AV Colour System			Yes
		Sound System			No
		Auto 4:3 Default			No
		AV2 Output			No
		Output Source			No
		Source			No
		Control Level			Yes
		Volume			Yes
		Brightness			Yes
		Contrast			Yes
		Colour			Yes
		Tint (NTSC Only)			Yes
		Sharpness			Yes
		Tuning			Yes
		Bass			No
		Treble			No
		Balance			No
		Back Light			No
		Nicom ST			No
		G(A2)Stereo			No
		Tone 1/2 (A/B)			No
		Surround On/Off			No
		Pin Code			No
		AV			Yes
		Skip			Yes
		Channel			Yes
		Broadcasting Station Name			Yes
		Hotel Lock			No
		Sleep Timer			No
		Selectable Picture			Yes
		Wide Mode			No
		Sound Mute			Yes
G-8	OSD Language			English , French , Spanish Germany , Italian Polski , Turkey , Sweden Netherland , Portgal Norway , Finland , Denmark Czech , Slovak , Hungarian Russian , Greek Yugoslavian , Bulgarian , Romanian Slovenian , Croatian	
G-9	Clock and Timer	Sleep Timer	Max Time	- Min	
			Step	- Min	
		Clock		No	
		On Timer	Program(On Tim)	Yes	
		Off Timer	Program(Off Tim)	Yes	
		Wake Up Timer		No	
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec	

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GX
		Glow in Dark Remocon	No
		Format	NEC
		Custom Code	40-BF h
		Power Source	3V
		Voltage(D.C)	UM-4 x 2 pcs
		UM size x pcs	
		Total Keys	34 Keys
		Keys	
		Power	Yes
		1/Rename	Yes
		2/Move	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		Volume Up / +	Yes
		Volume Down / -	Yes
		Previous	Yes
		Select Picture	Yes
		Menu	Yes
		OK(Enter)	Yes
		EXIT	Yes
		Audio Select	No
		On/OffTimer	Yes
		Mute	Yes
		DSP/surround/Virtual Dolby	No
		Woofers/Bass	No
		Picture Size	No
		TTEXT Keys	
		TEXT / MIX / TV	Yes
		CH Up / Page Up	Yes
		CH Down / Page Down	Yes
		Red	Yes
		Green	Yes
		Yellow	Yes
		Cyan	Yes
		TEXT F/T/B	Yes
		Reveal	Yes
		TIMED PAGE(SUB PAGE)	Yes
		CALL / TEXT INDEX	Yes
		INPUT SELECT	Yes
		TEXT HOLD	Yes
		TIME / TXCL	Yes

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss		Yes	
		Auto Shut Off		Yes	
		Canal+		No	
		CATV		No	
		Anti-theft(Back Up 30 Min.)		No	
		Memory(Last CH)		Yes	
		Memory(Last Volume)		Yes	
		BBE		No	
		Auto Search		Yes	
		ITS		No	
		CH Allocation		No	
		CH MAPPING		Yes	
		Just Clock Function		No	
		Game Position		No	
		CH Label		No	
		VM Circuit		No	
		Full OSD		No	
		Noise Blue Back		No	
		T'Text		Yes	
		Text type		Fastext	
		Text Language		English , French, Swedish, Hungarian Finnish, Turkish, German, Dutch Portuguese, Spanish, Italian, Greek Polish, Russian, Bulgarian, Czech Slovak, Romanian, Slovenian Croatian, Yugoslavian	
		Premiere		No	
		Comb Filter		No	
				Lines	
		Auto CH Memory		No	
		Stable Sound		No	
		Auto Set Up		No	
		FBT Leak Test Protect		Yes	
		Power ON Memory		Yes	
		Previous (Quick View)		Yes	
		Panel Lock		Yes	
		Double Focus & Dynamic Focus		No	
		Wss Signal Wide Change		No	
Virtual Dolby Surround		No			
Hotel Lock		No			
G-12	Accessories	Owner's Manual	Language	Polish,Hungarian,Czech,Rumanian, Bulgarian,Russian,Slovenian,Croatian, English	
			w/Guarantee Card	No	
		Remote Control Unit		Yes	
		Rod Antenna		No	
			Poles	-	
			Terminal	-	
		Loop Antenna		No	
			Terminal	-	
		U/V Mixer		No	
		DC Car Cord (Center+)		No	
		Guarantee Card		No	
		Warning Sheet		No	
		Circuit Diagram		No	
		Antenna Change Plug		No	
		Service Facility List		No	
		Important Safeguard		Yes (Owner's Manual In)	
		Dew/AHC Caution Sheet		No	
		AC Plug Adapter		No	
		Quick Set-up Sheet		Yes	
		Battery		Yes	
			UM size x pcs	UM-4 x 2 pcs	
			OEM Brand	No	
		AC Cord		No	
		AV Cord (2Pin-1Pin)		No	
		Registration Card		No	
		PTB Sheet		No	
		300 ohm to 75 ohm Antenna Adapter		No	

GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power (Tact Sw)	No
				System Select	No
				Main Power SW	Yes
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	No
				Stand-by	No
				Stand-by/ON	Yes(Red)
				On Timer	Yes(Green)
		Terminals	Front	Video Input	Yes(RCA)
				Audio Input	Yes(RCA)
				Other Terminal	Head Phone(MONO)
			Rear	Video Input(Rear1)	No
				Video Input(Rear2)	No
				Audio Input(Rear1)	No
				Audio Input(Rear2)	No
				Video Output	No
				Audio Output	No
				Euro Scart(21Pin)	No
				S-INPUT	
				Euro Scart(21Pin)	Yes (x1)
				RGB-INPUT	Yes (x1)
				Component Input	No
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	D Type
				AC Outlet	No
G-14	Set Size			Approx. W x D x H (mm)	506.5 x 484 x 464.5
G-15	Weight			Net (Approx.)	21.0 kg (--- lbs)
				Gross (Approx.)	23.8kg (---lbs)
G-16	Carton		Master Carton		No
				Content	---- Sets
				Material	-- /--
				Dimensions W x D x H(mm)	-- x -- x --
				Description of Origin	---
			Gift Box		Yes
				Material	Double/Brown
				Dimensions W x D x H(mm)	580 x 575 x 555
				Design	As per Buyer's
				Description of Origin	No (Assembled in U.K.)
			Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	46
				Container Stuffing	320 Sets/40' container
G-17	Material		Cabinet	Front	PS 94HB
				Rear	PS 94HB
				Holder	PS 94V0 NON-DECABROM
			PCB	Non-Halogen Demand	Yes
				Eyelet Demand	Yes
G-18	Environment		Pb Free	Lead-free Solder	No
				Other	No
			Cd Free		No

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

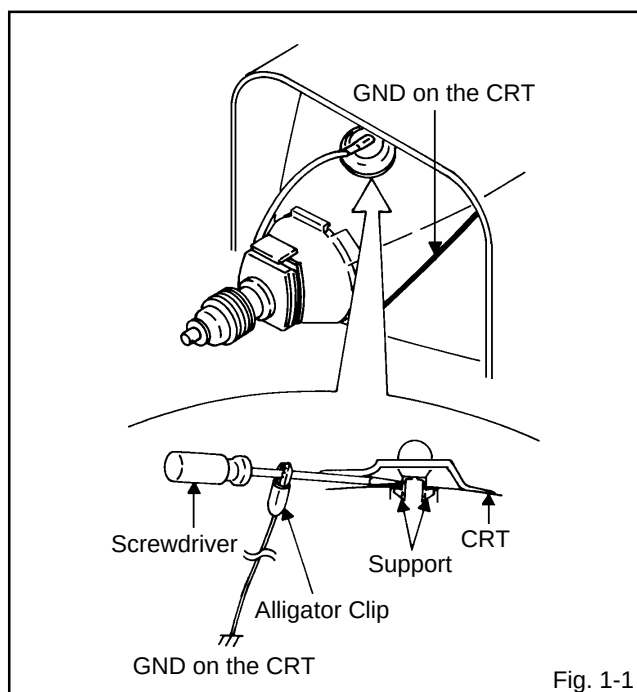


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

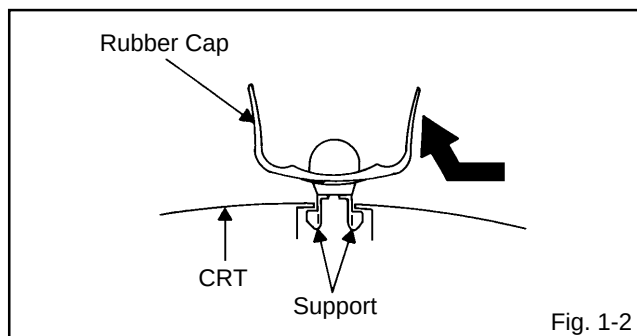


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

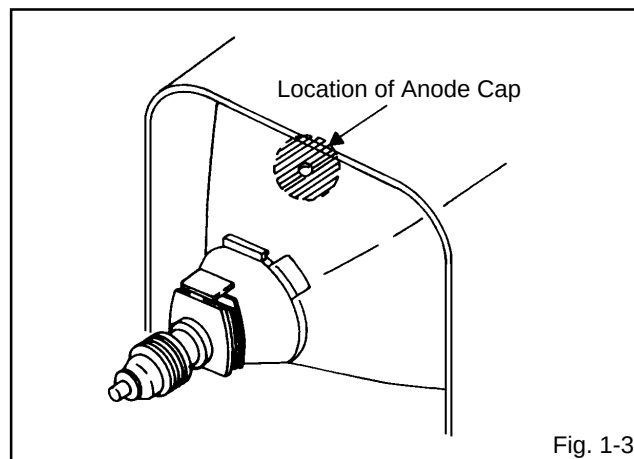


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

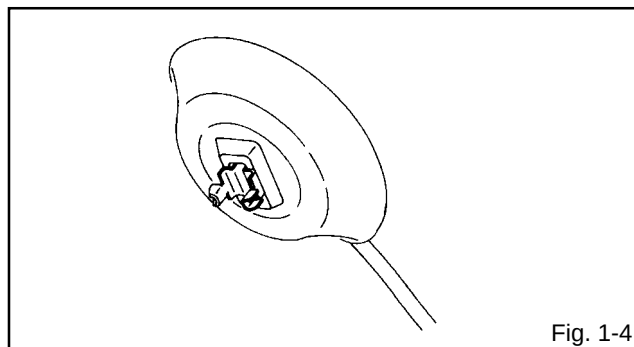


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

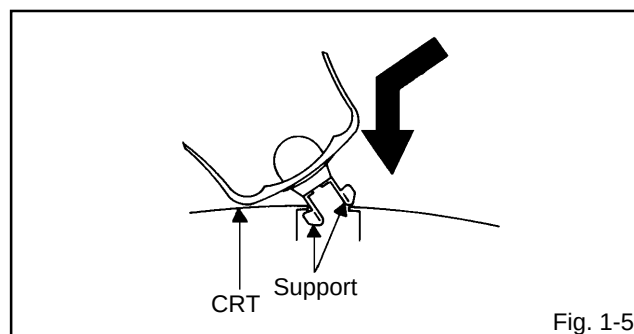


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 2-1.)**

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

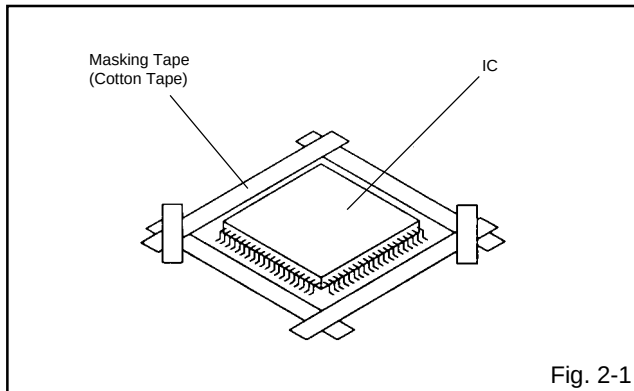

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 2-2.)**

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

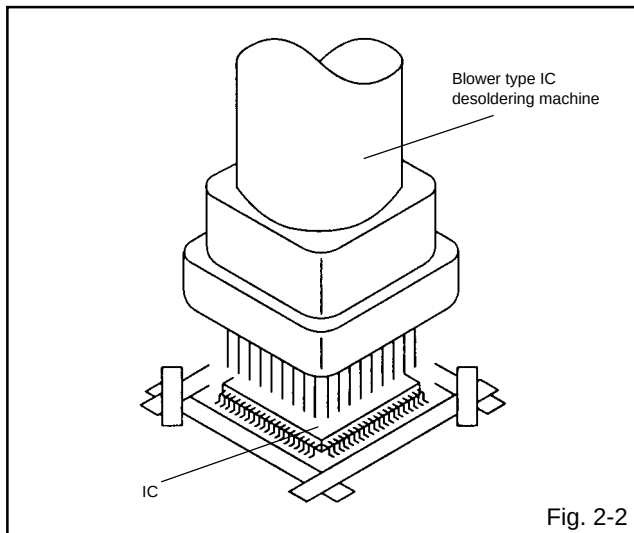

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 2-3.)**

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

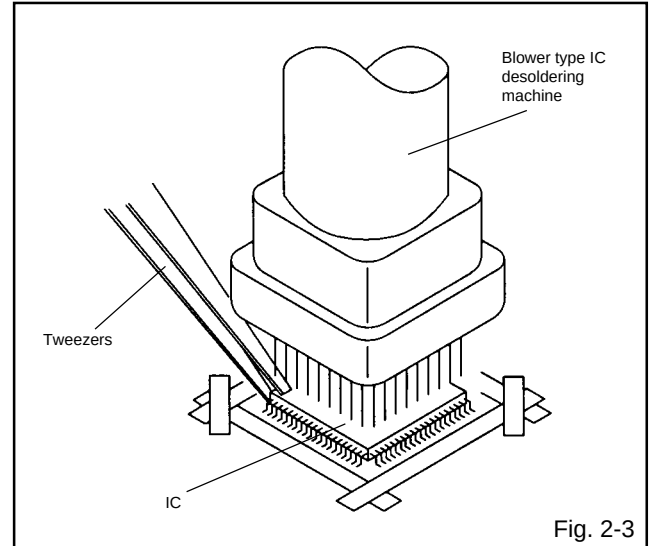

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 2-4.)**

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

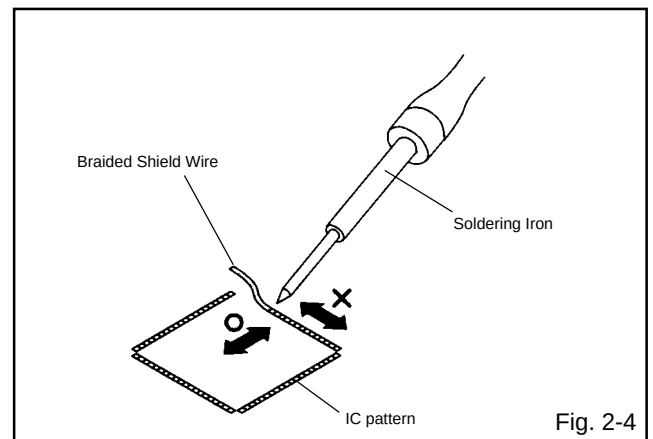


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 2-5.)**

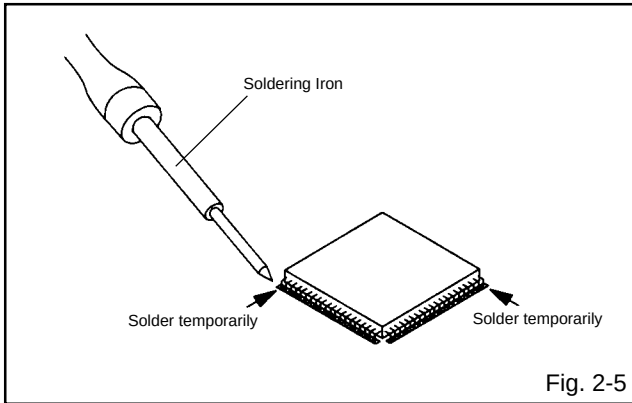


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 2-6.)**

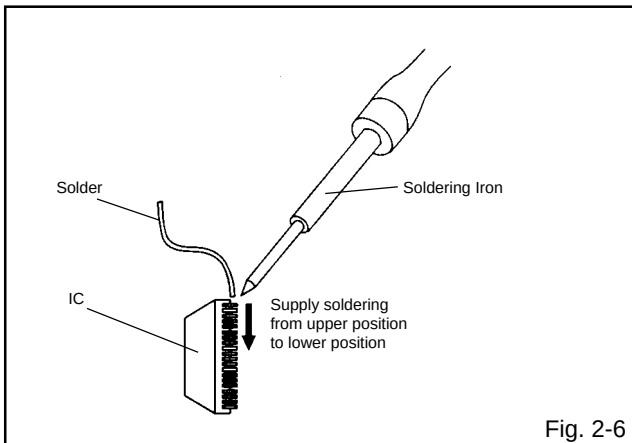


3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

NOTE

Do not absorb the solder to excess.

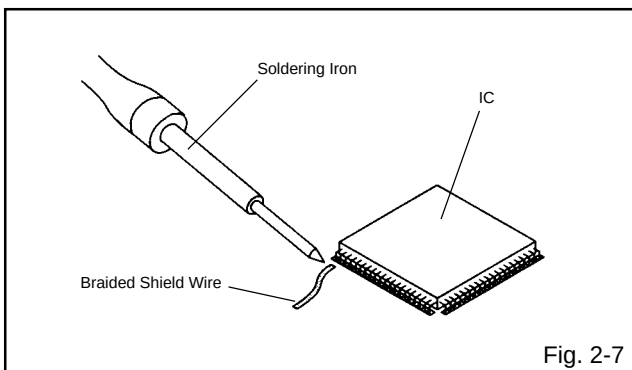

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

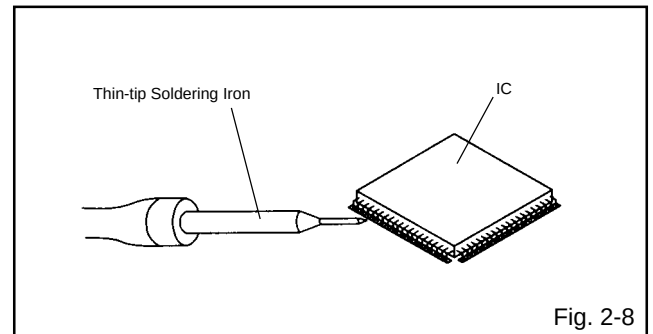

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 2 seconds.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Reset the user setting items (PICTURE, VOLUME and LANGUAGE) to the initial state for delivery.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

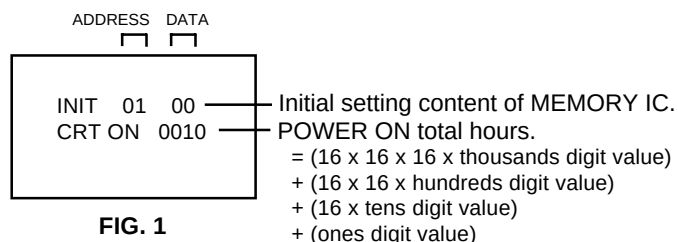


FIG. 1

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 16 due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	---	00	00	00	00	61	91	60	E6	50	73	07	03	00	06	00
10	10	00	98	98	98	BC	00	---	---	---	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
 2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.
 3. ADDRESS is now selected and should "blink". Using the VOL. +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
 4. Press OK to select DATA. When DATA is selected, it will "blink".
 5. Again, step through the DATA using VOL. +/- button until required DATA value has been selected.
 6. Pressing OK will take you back to ADDRESS for further selection if necessary.
 7. Repeat steps 3 to 6 until all data has been checked.
 8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
 9. Turn POWER on.
 10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 2 seconds.
 11. After the finishing of the initializing of shipping, the unit will turn off automatically.
- The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in Fig. 1-1.

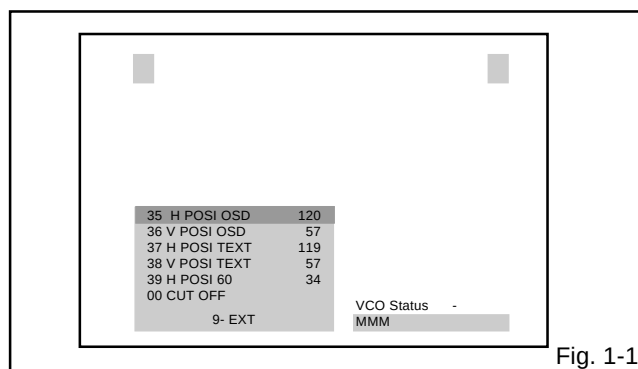


Fig. 1-1

2. Use the Channel button (0-9) or Channel UP/DOWN button on the remote control to select the options shown in Fig. 1-2.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	CUT OFF	20	TINT
01	RF AGC	21	SHARP
02	AGC GAIN	22	CONTRAST CENT
03	R DRIVE	23	CONTRAST MAX
04	R CUTOFF	24	CONTRAST MIN
05	G DRIVE	25	COLOR CENT
06	G CUTOFF	26	COLOR MAX
07	B DRIVE	27	COLOR MIN
08	H POSI (50)	28	M R CUT OFF
09	V POSI (50)	29	M G CUT OFF
10	V POSI (60)	30	M B CUT OFF
11	V SIZE (50)	31	CVBS OUT
12	V SIZE (60)	32	APR THRESHOLD
13	VCO COARSE	33	BELL FILTER
14	VCO FINE	34	BANDPASS
15	VCO COARSE L1	35	H POSI OSD
16	VCO FINE L1	36	V POSI OSD
17	BRIGHT CENT	37	H POSI TEXT
18	BRIGHT MAX	38	V POSI TEXT
19	BRIGHT MIN	39	H POSI (60)

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Connect the digital voltmeter to TP501.
3. Set condition is AV MODE without signal.
4. Adjust the VR501 until the DC voltage is $117 \pm 1.0V$.

2-2: VCO

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the oscillator (38.9MHz) to TP001.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (13) on the remote control to select "VCO COARSE".
4. Press the VOL. +/- button on the remote control until the "OK" appear on the screen. If the "OK" is not displayed, select the "+" side on the changed from "+" to "-".
5. Press the Page UP button once to set to "VCO FINE" mode.
6. Press the VOL. +/- button on the remote control to select the 5 step down point from the upper limit on the "OK".
(Example: In case of the "OK" range 30~41, select 36.)

2-3: VCO COARSE L1, VCO FINE L1

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the oscillator (33.95MHz) to TP001.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (15) on the remote control to select "VCO COARSE L1".
4. Press the VOL. +/- button on the remote control until the "OK" appear on the screen. If the "OK" is not displayed, select the "+" side on the changed from "-" to "+".
5. Press the Page UP button once to set to "VCO FINE L1" mode.
6. Press the VOL. +/- button on the remote control to select the 5 step down point from the upper limit on the "OK".
(Example: In case of the "OK" point 30~41, select 36.)

2-4: AGC VOLTAGE

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the UHF ($63 \pm 1dB$).
3. Connect the digital voltmeter to pin 5 of CP101.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "RF AGC".
5. Press the VOL. +/- button on the remote control until the digital voltmeter is $2.55 \pm 0.05V$.

2-5: FOCUS

1. Receive a 70dB monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

2-6: CUT OFF

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Place the set with Aging Test for more than 15 minutes.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (00) on the remote control to select "CUT OFF".
5. Adjust the Screen Volume until a dim raster is obtained.

ELECTRICAL ADJUSTMENTS

2-7: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "R DRIVE".
5. Press the Page UP/DOWN button on the remote control to select the "R DRIVE", "G DRIVE", "M R CUTOFF" or "M G CUTOFF".
6. Adjust the VOL. +/- button on the remote control to whiten the R DRIVE, G DRIVE, M R CUT OFF, and M G CUT OFF at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-8: HORIZONTAL POSITION

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "H POSI (50)".
4. Press the VOL. +/- button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.
5. Receive the monoscope pattern of NTSC. (Audio Video Input)
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(39)** on the remote control to select "H POSI (60)".
8. Press the VOL. +/- button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-9: VERTICAL SIZE

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(11)** on the remote control to select "V SIZE (50)".
4. Adjust by using the VOL. +/- button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
5. Receive a broadcast and check if the picture is normal.
6. Receive the monoscope pattern of NTSC. (Audio Video Input)
7. Using the remote control, set the brightness and contrast to normal position.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(12)** on the remote control to select "V SIZE (60)".
9. Adjust by using the VOL. +/- button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.

2-10: VERTICAL POSITION/VERTICAL LINEARITY

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.
4. Adjust the **VR420** until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-11: BRIGHT CENT

1. Receive the PAL black pattern*. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Place the set with Aging Test for more than 15 minutes.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRIGHT CENT".
5. Press the VOL. +/- button on the remote control until the screen begin to shine.
6. Receive the PAL black pattern*. (Audio Video Input)
7. Set to the AV mode. Then perform the above adjustments 2~5.

*The Black Pattern means the whole black raster signal. Select the "RASTER" of the pattern generator, set to the OFF position for each R, G and B.

2-12: COLOR CENT

1. Receive the PAL color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast and color to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(25)** on the remote control to select "COLOR CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 5 scales on the screen of the oscilloscope.
6. Press the VOL. +/- button on the remote control until the red color level is adjusted to $90 \pm 10\%$ of the white level. (**Refer to Fig. 2-1**)
7. Receive the PAL color bar pattern. (Audio Video Input)
8. Set to the AV mode. Then perform the above adjustments 2~6.

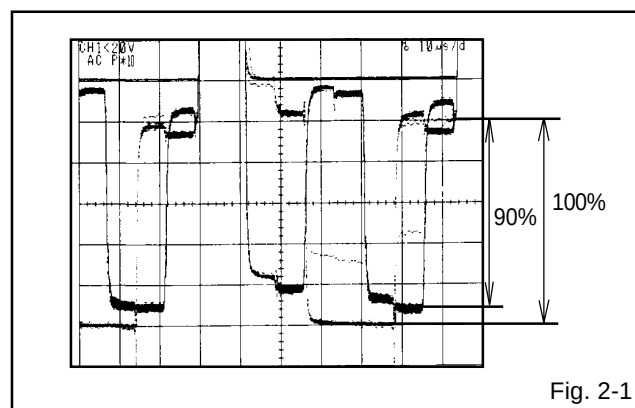


Fig. 2-1

ELECTRICAL ADJUSTMENTS

2-13: TINT

1. Receive the NTSC color bar pattern. (Audio Video Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**20**) on the remote control to select "TINT".
5. Press the VOL. +/- button on the remote control until the section "A" becomes a straight line. (**Refer to Fig. 2-2**)

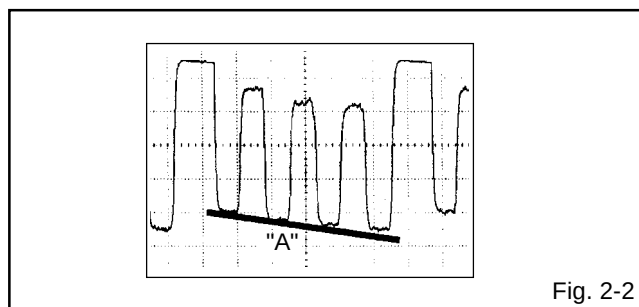


Fig. 2-2

2-14: CONTRAST CENT

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**22**) on the remote control to select "CONTRAST CENT".
2. Press the VOL. +/- button on the remote control until the contrast step No. becomes "35".
3. Receive a broadcast and check if the picture is normal.
4. Set to the AV mode. Then perform the above adjustments 1~3.

2-15: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV
02	AGC GAIN	00	---
04	R CUTOFF	00	---
06	G CUTOFF	00	---
07	B DRIVE	45	---
09	V POSI (50)	08	---
10	V POSI (60)	00	---
18	BRIGHT MAX	40	40
19	BRIGHT MIN	09	09
20	TINT	32	ADJ.
21	SHARP	02	02
23	CONTRAST MAX	50	50
24	CONTRAST MIN	10	10
26	COLOR MAX	50	50
27	COLOR MIN	10	10
30	M B CUT OFF	127	---
31	CVBS OUT	31	---
32	APR THRESHOLD	00	---
33	BELL FILTER	10	---
34	BANDPASS	00	---
35	H POSI OSD	118	---
36	V POSI OSD	50	---
37	H POSI TEXT	122	---
38	V POSI TEXT	58	---

*To check for the fixed values of the RF (60Hz), indicate the adjustment mode screen while input the 60Hz video signal.

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

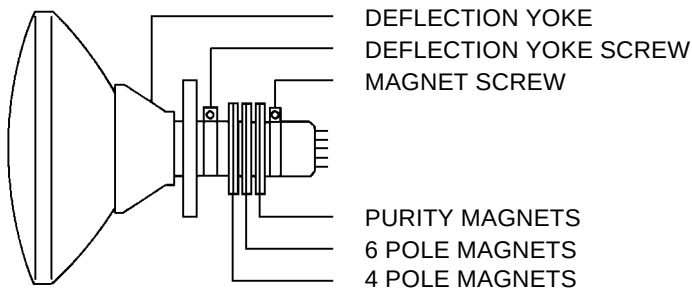


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

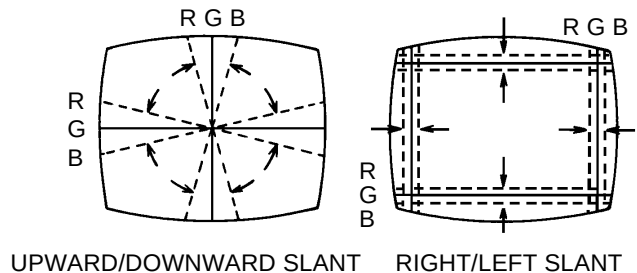


Fig. 3-2-a


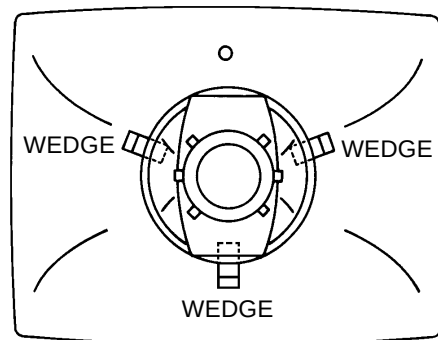



Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

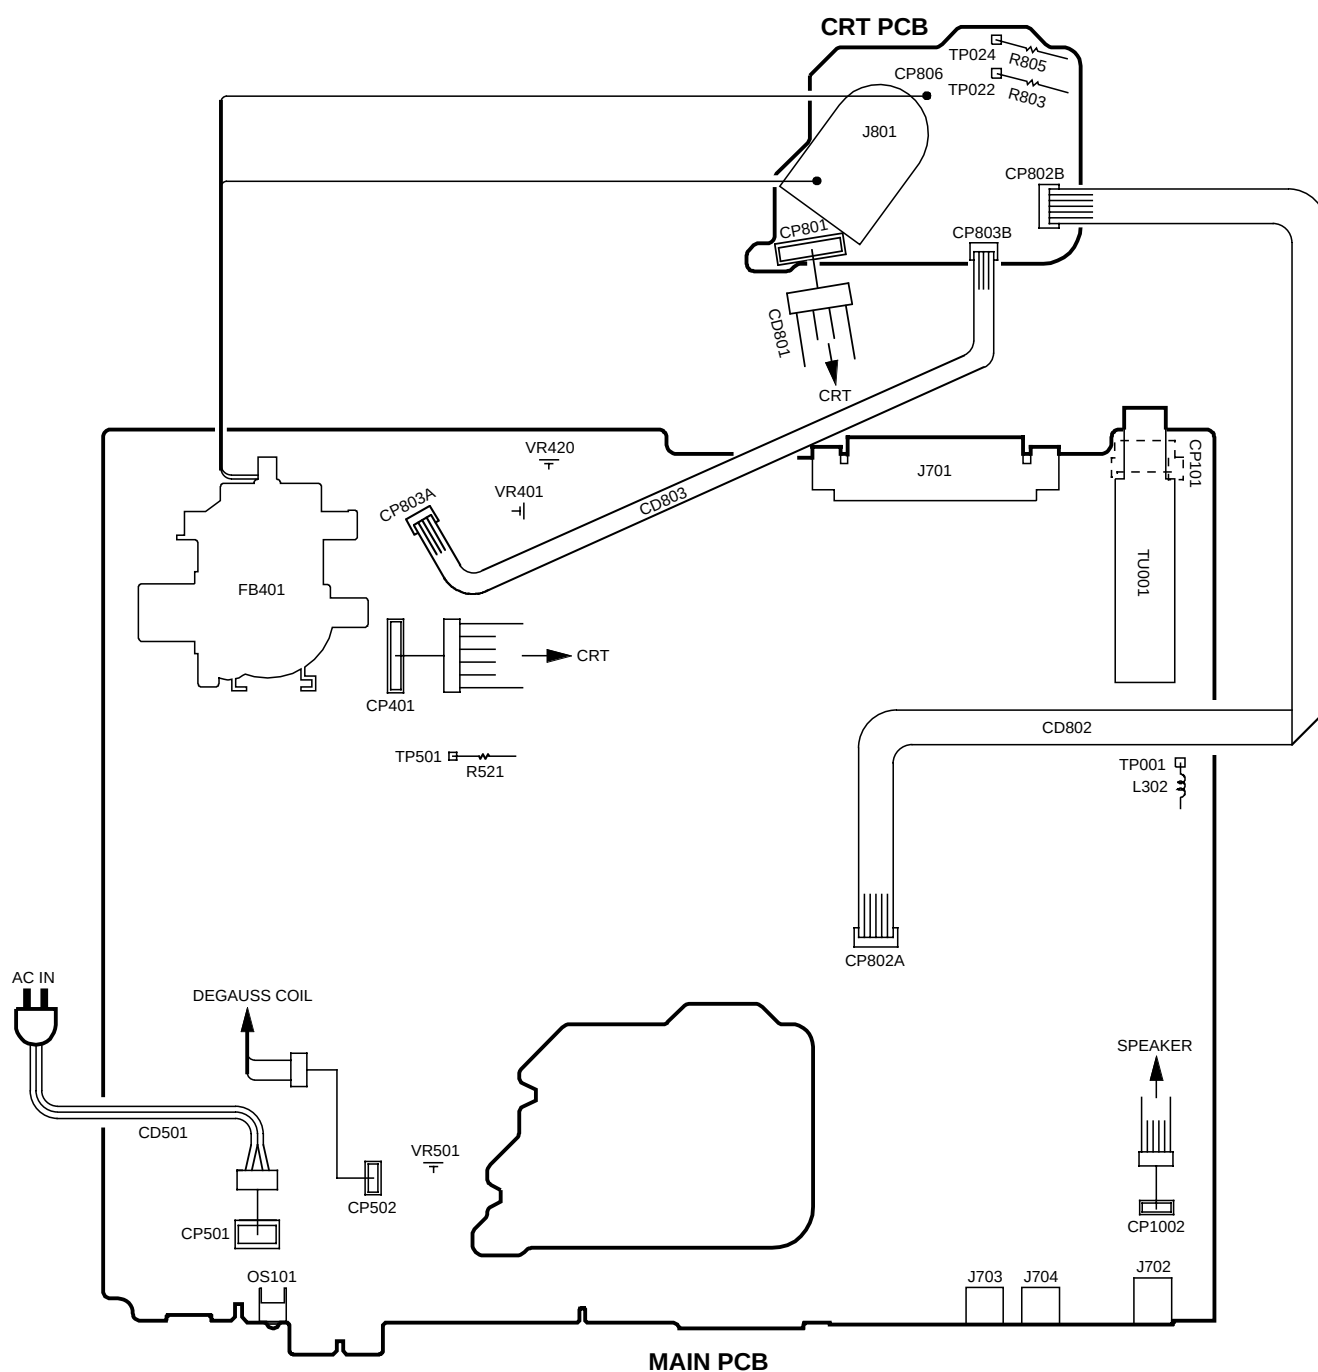


BLOCK DIAGRAM

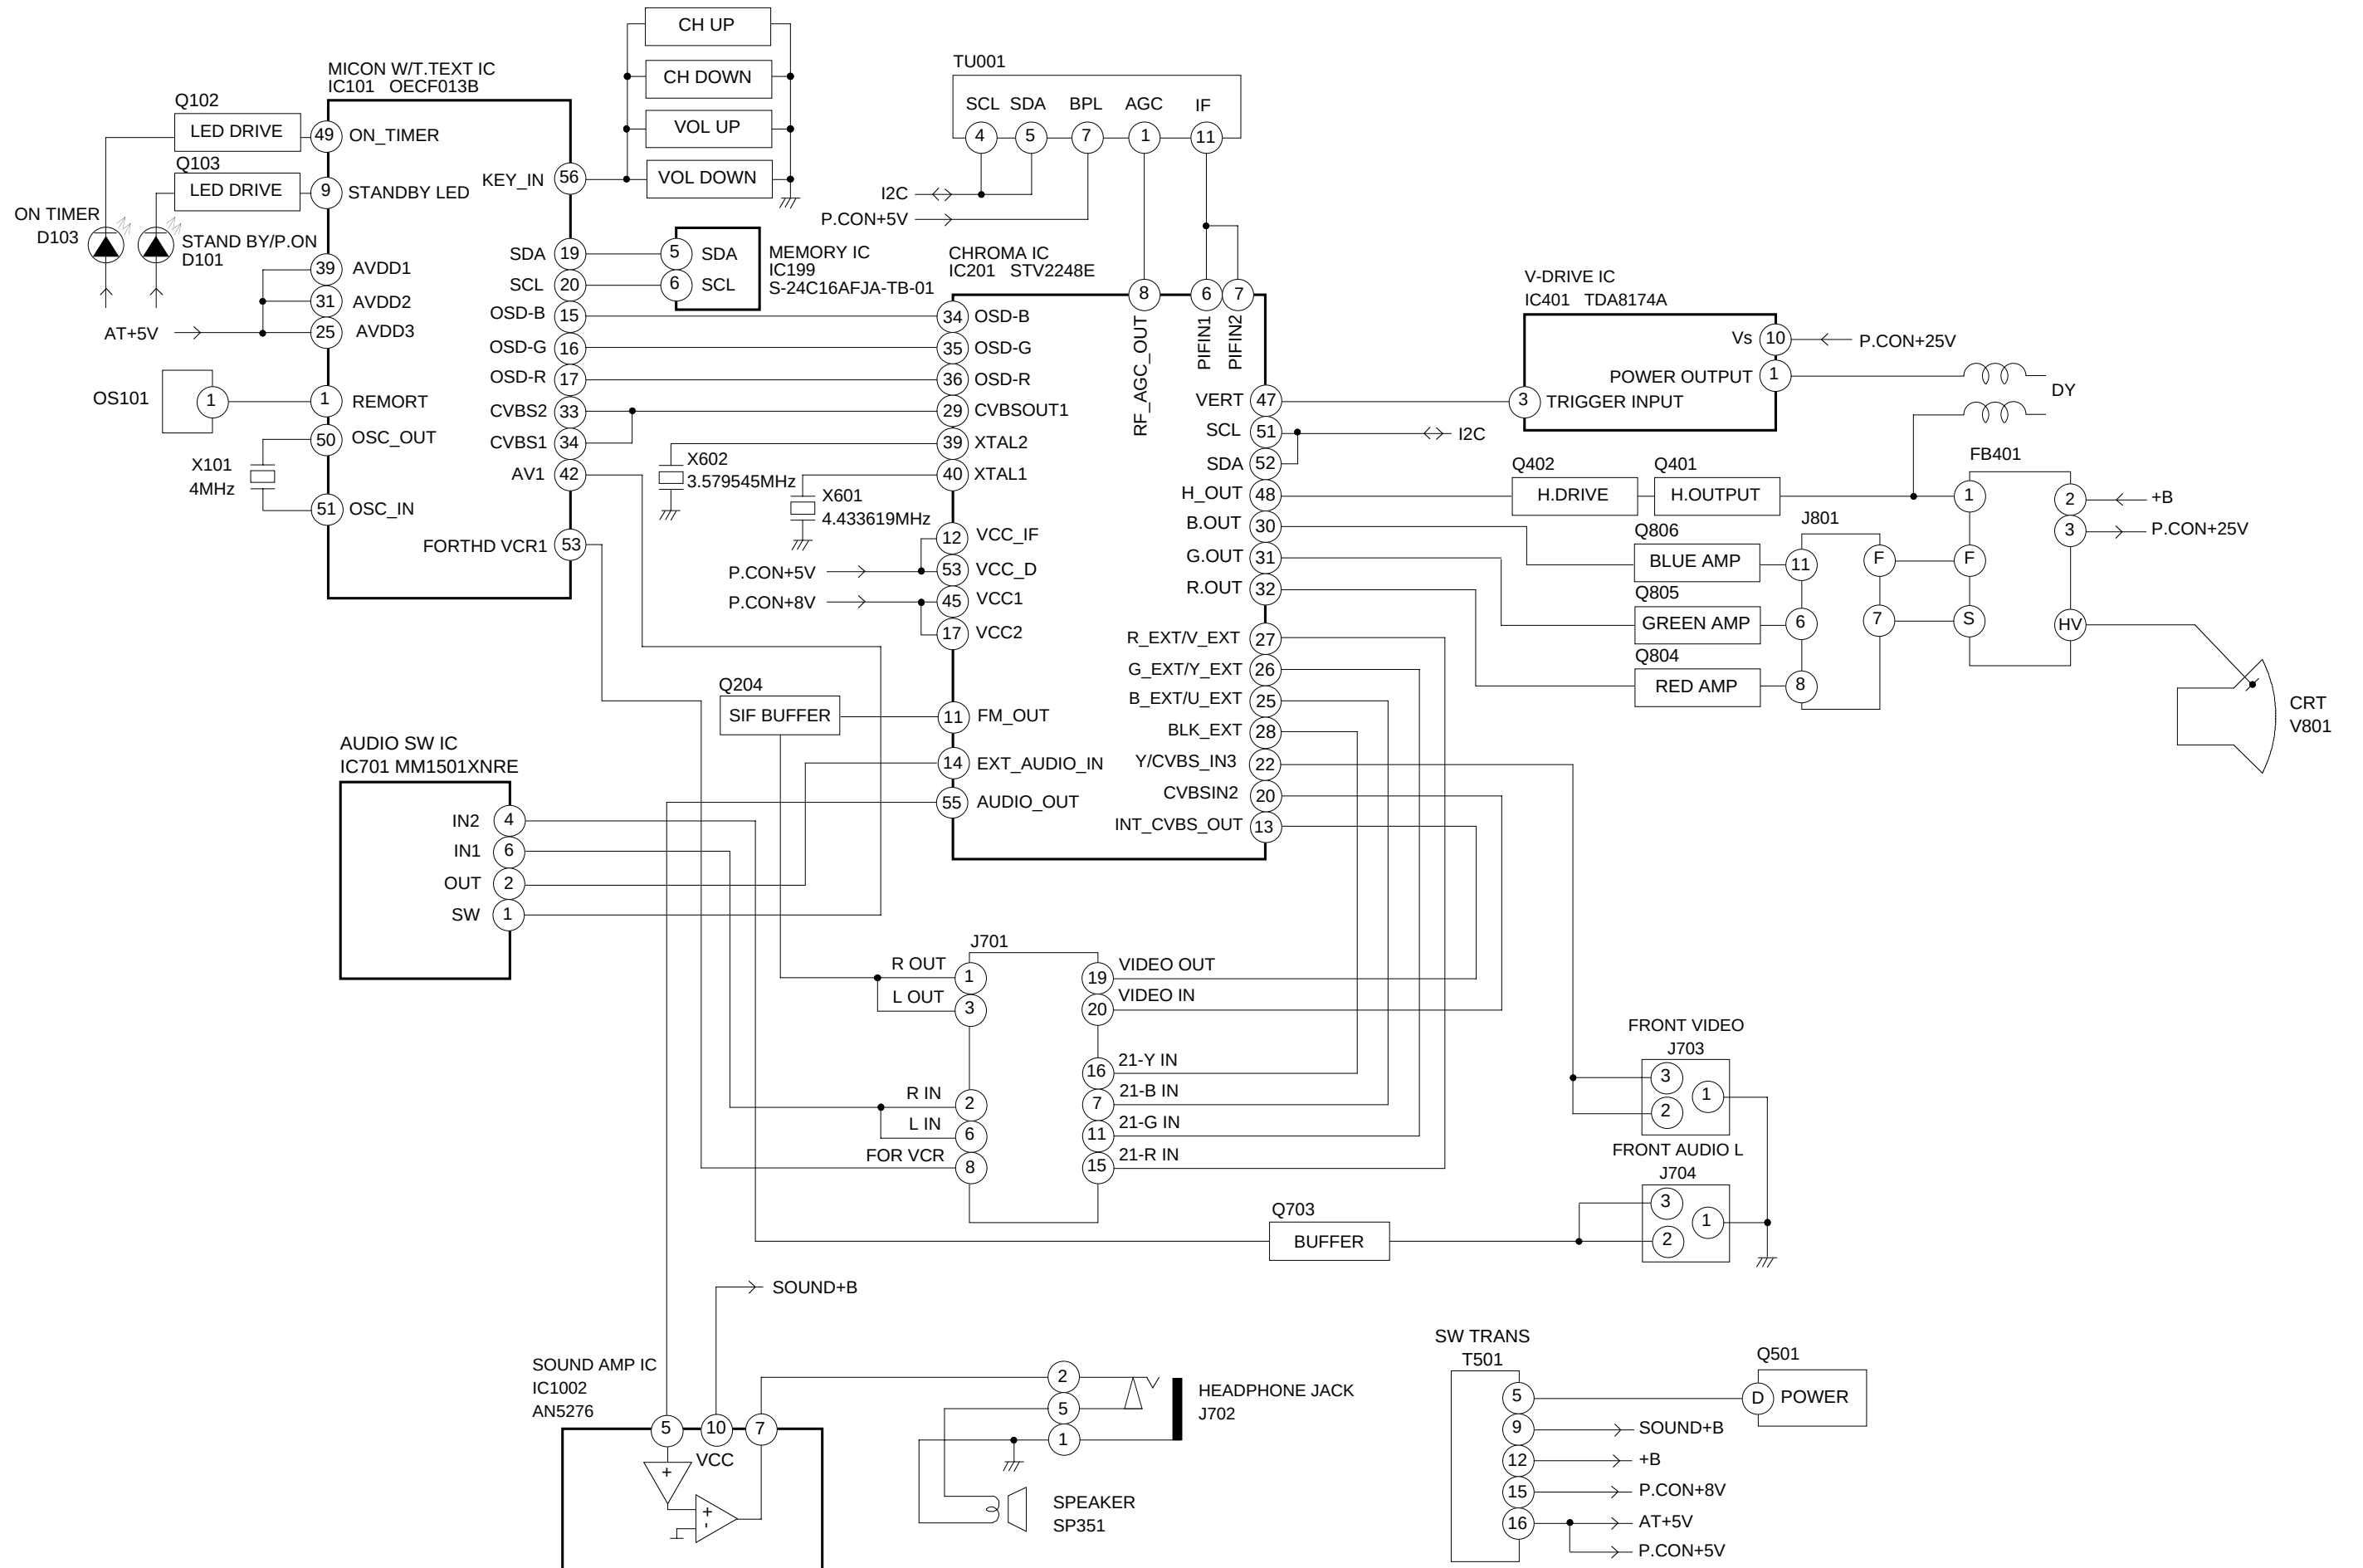

PRINTED CIRCUIT BOARDS
MAIN/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

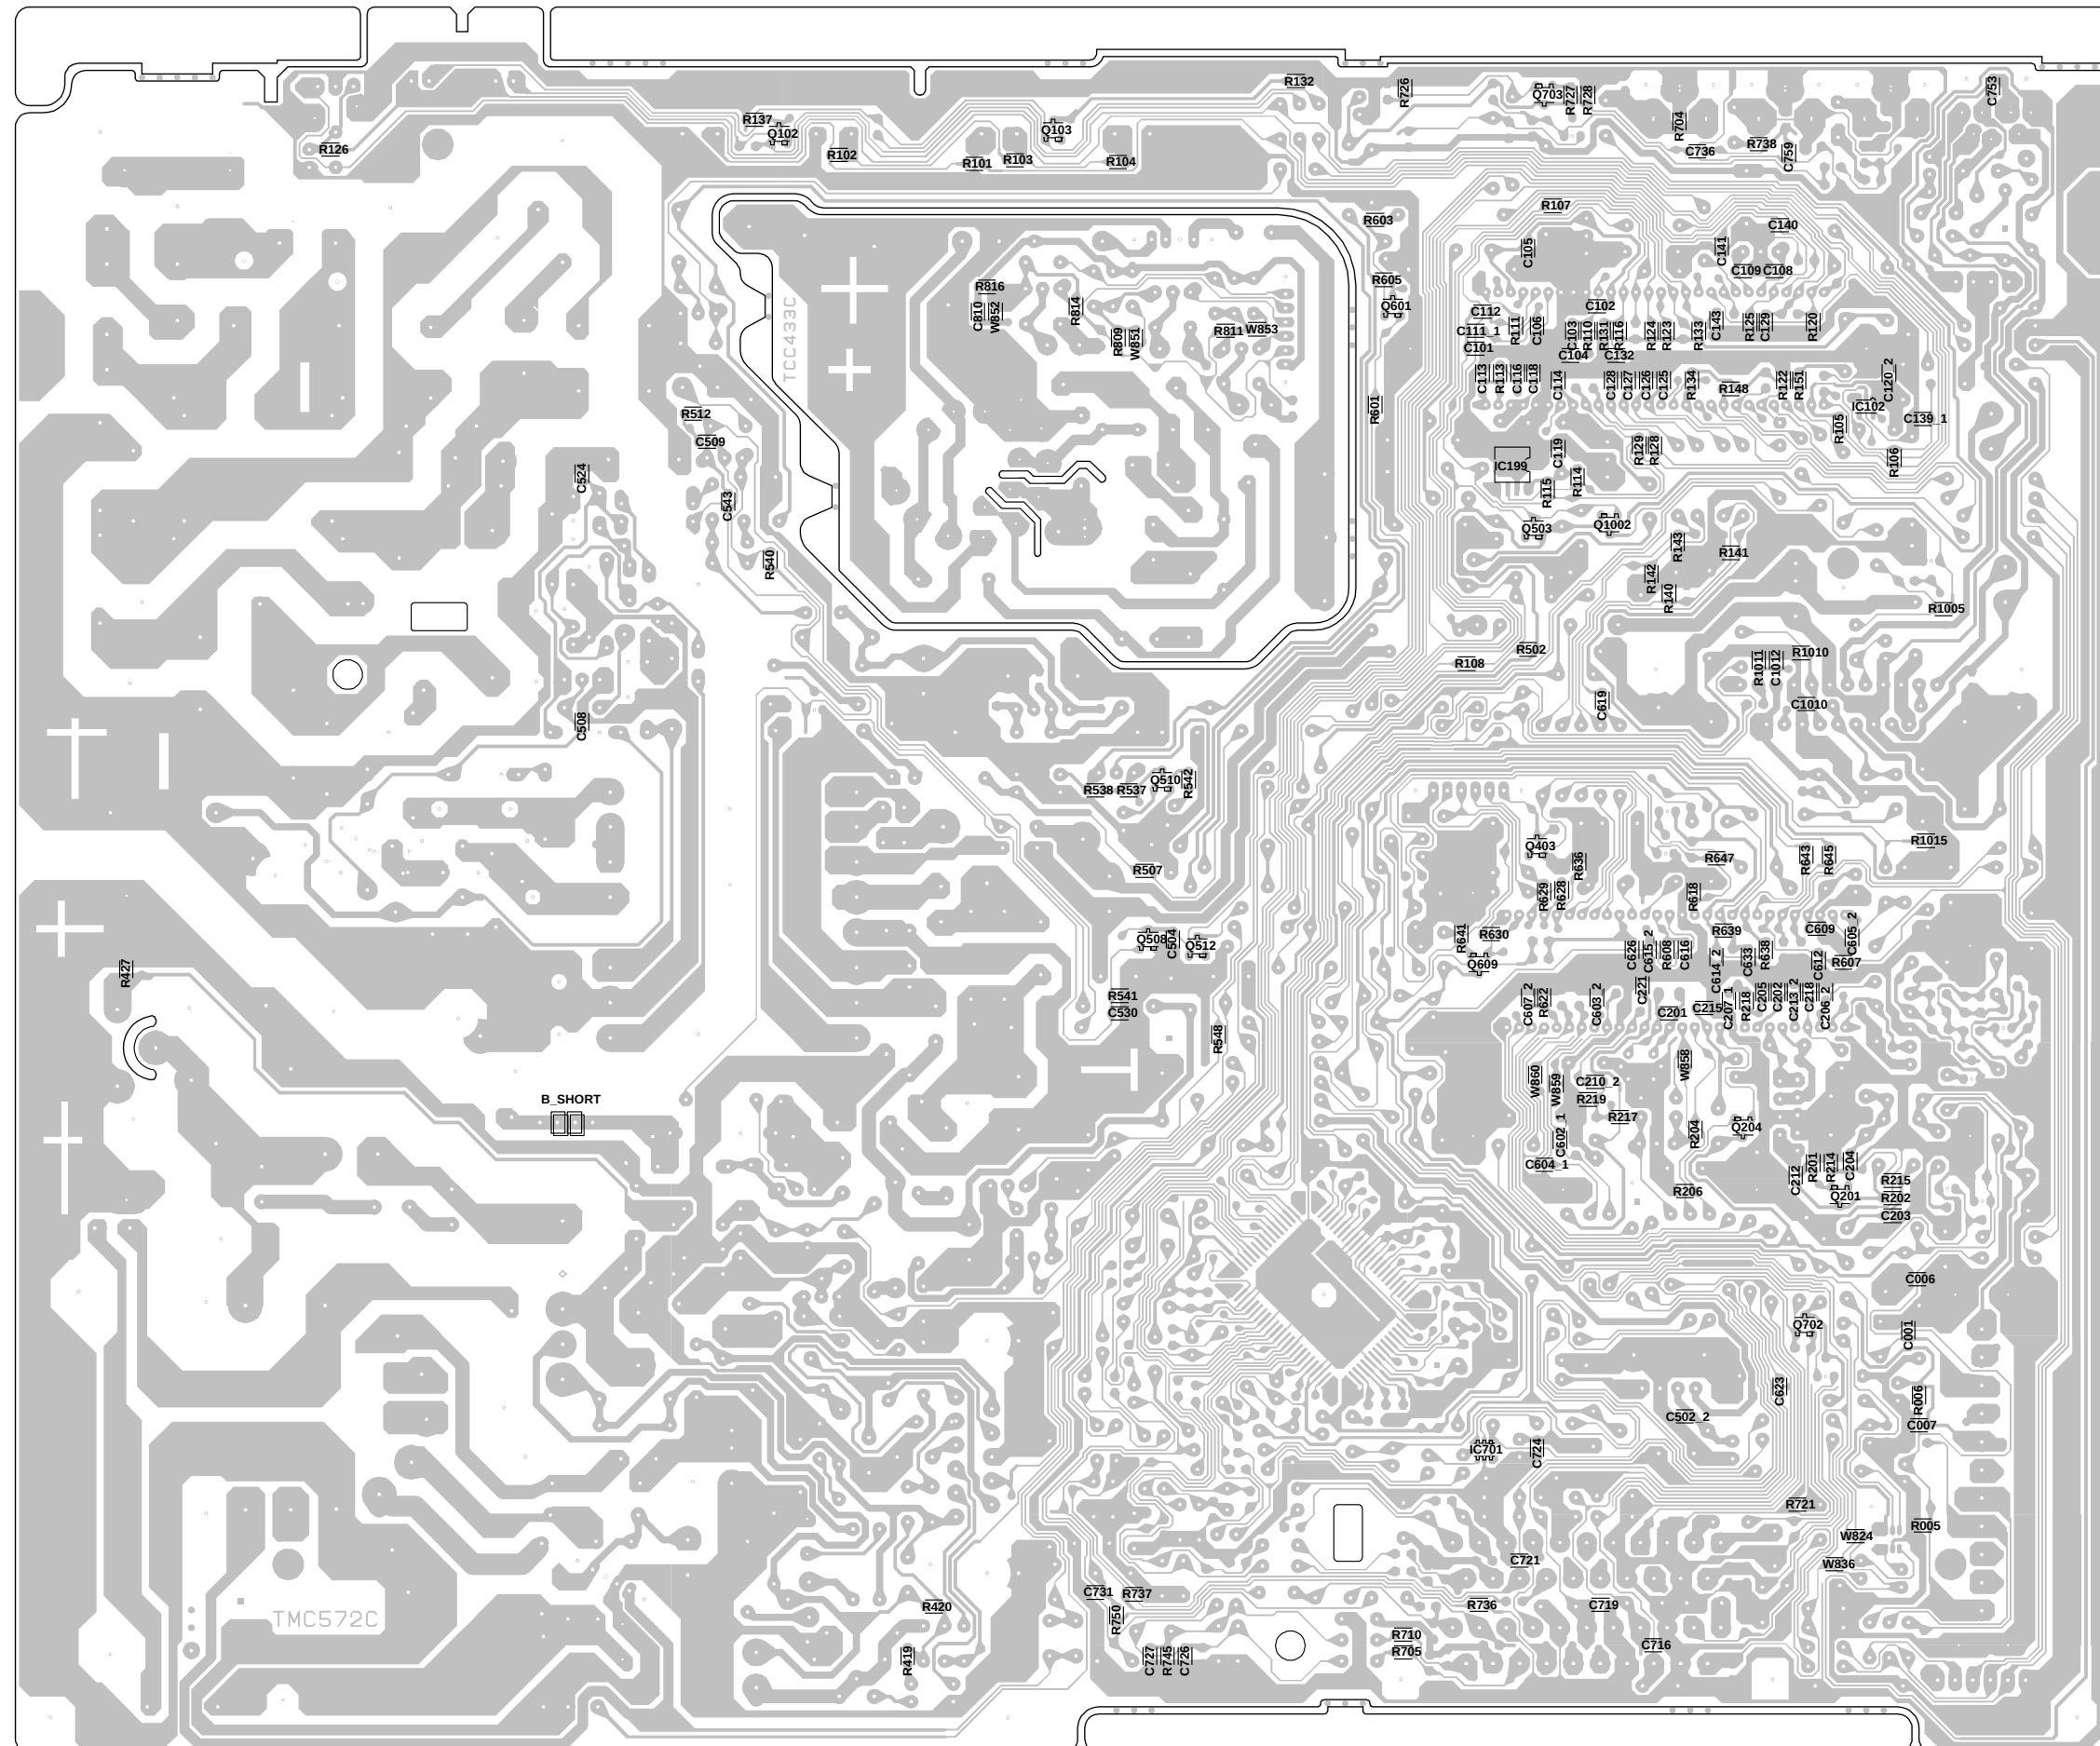


(MAIN PCB)

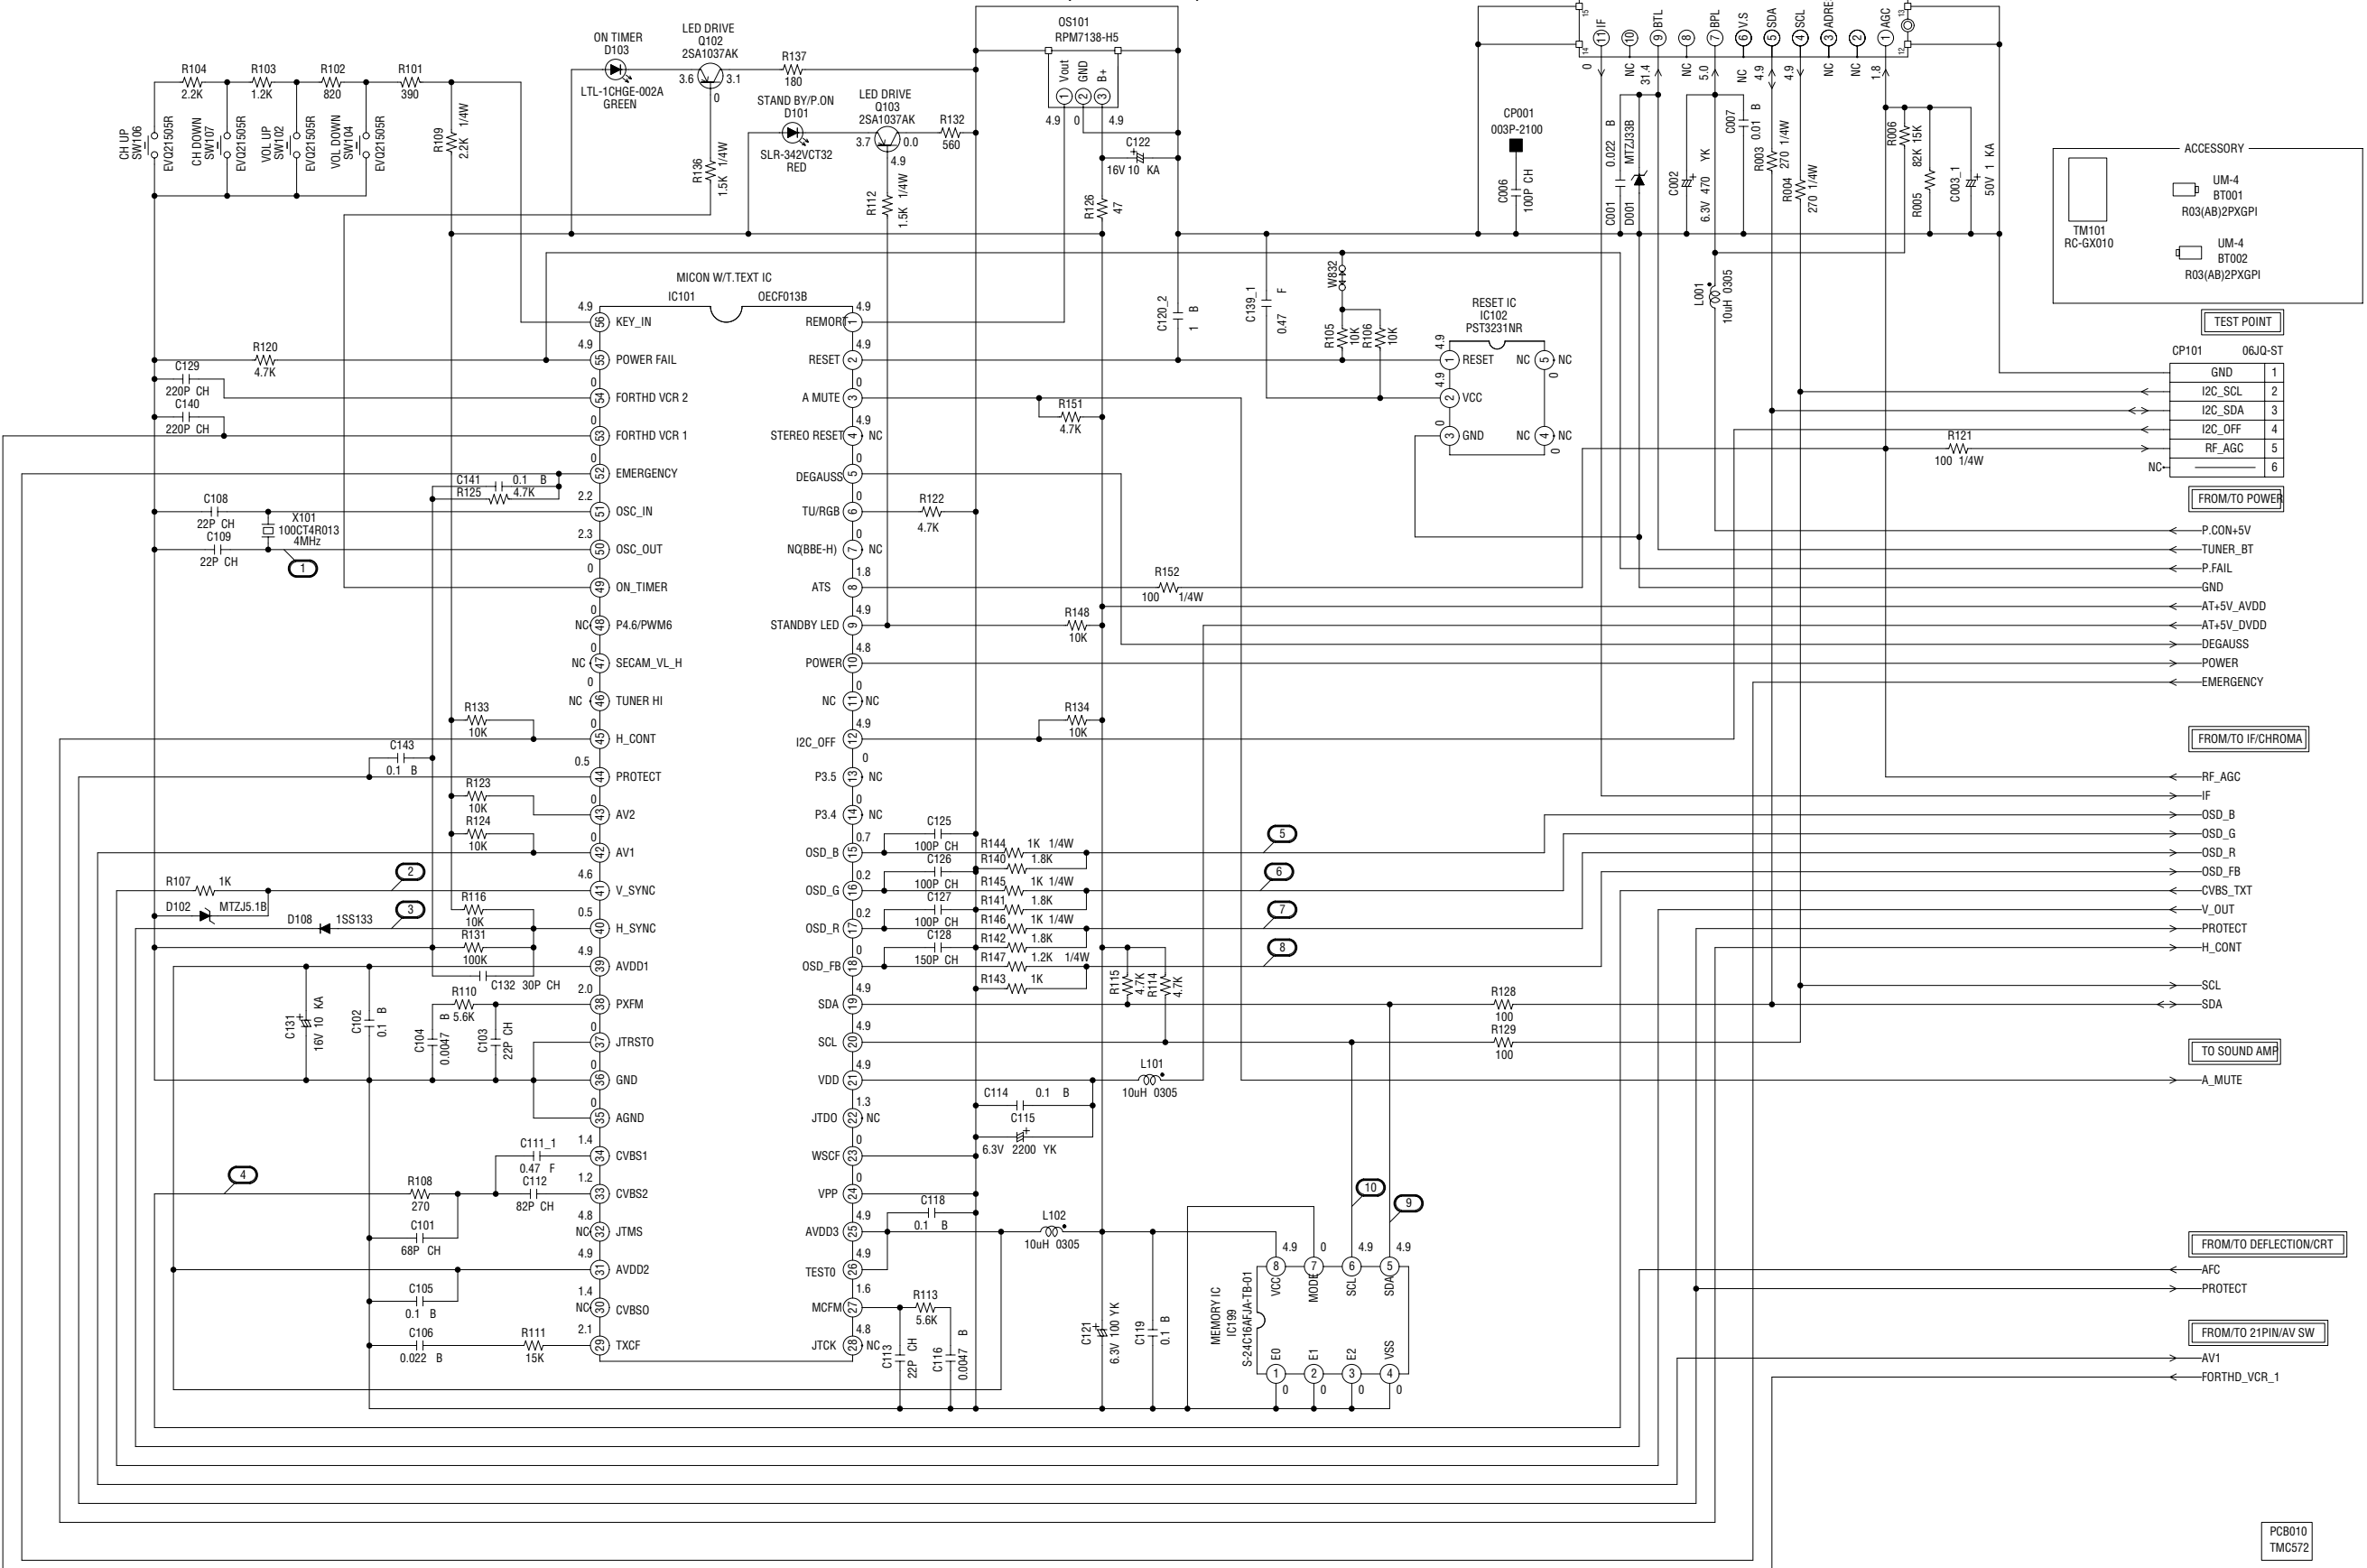

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

IF/CHROMA SCHEMATIC DIAGRAM
(MAIN PCB)

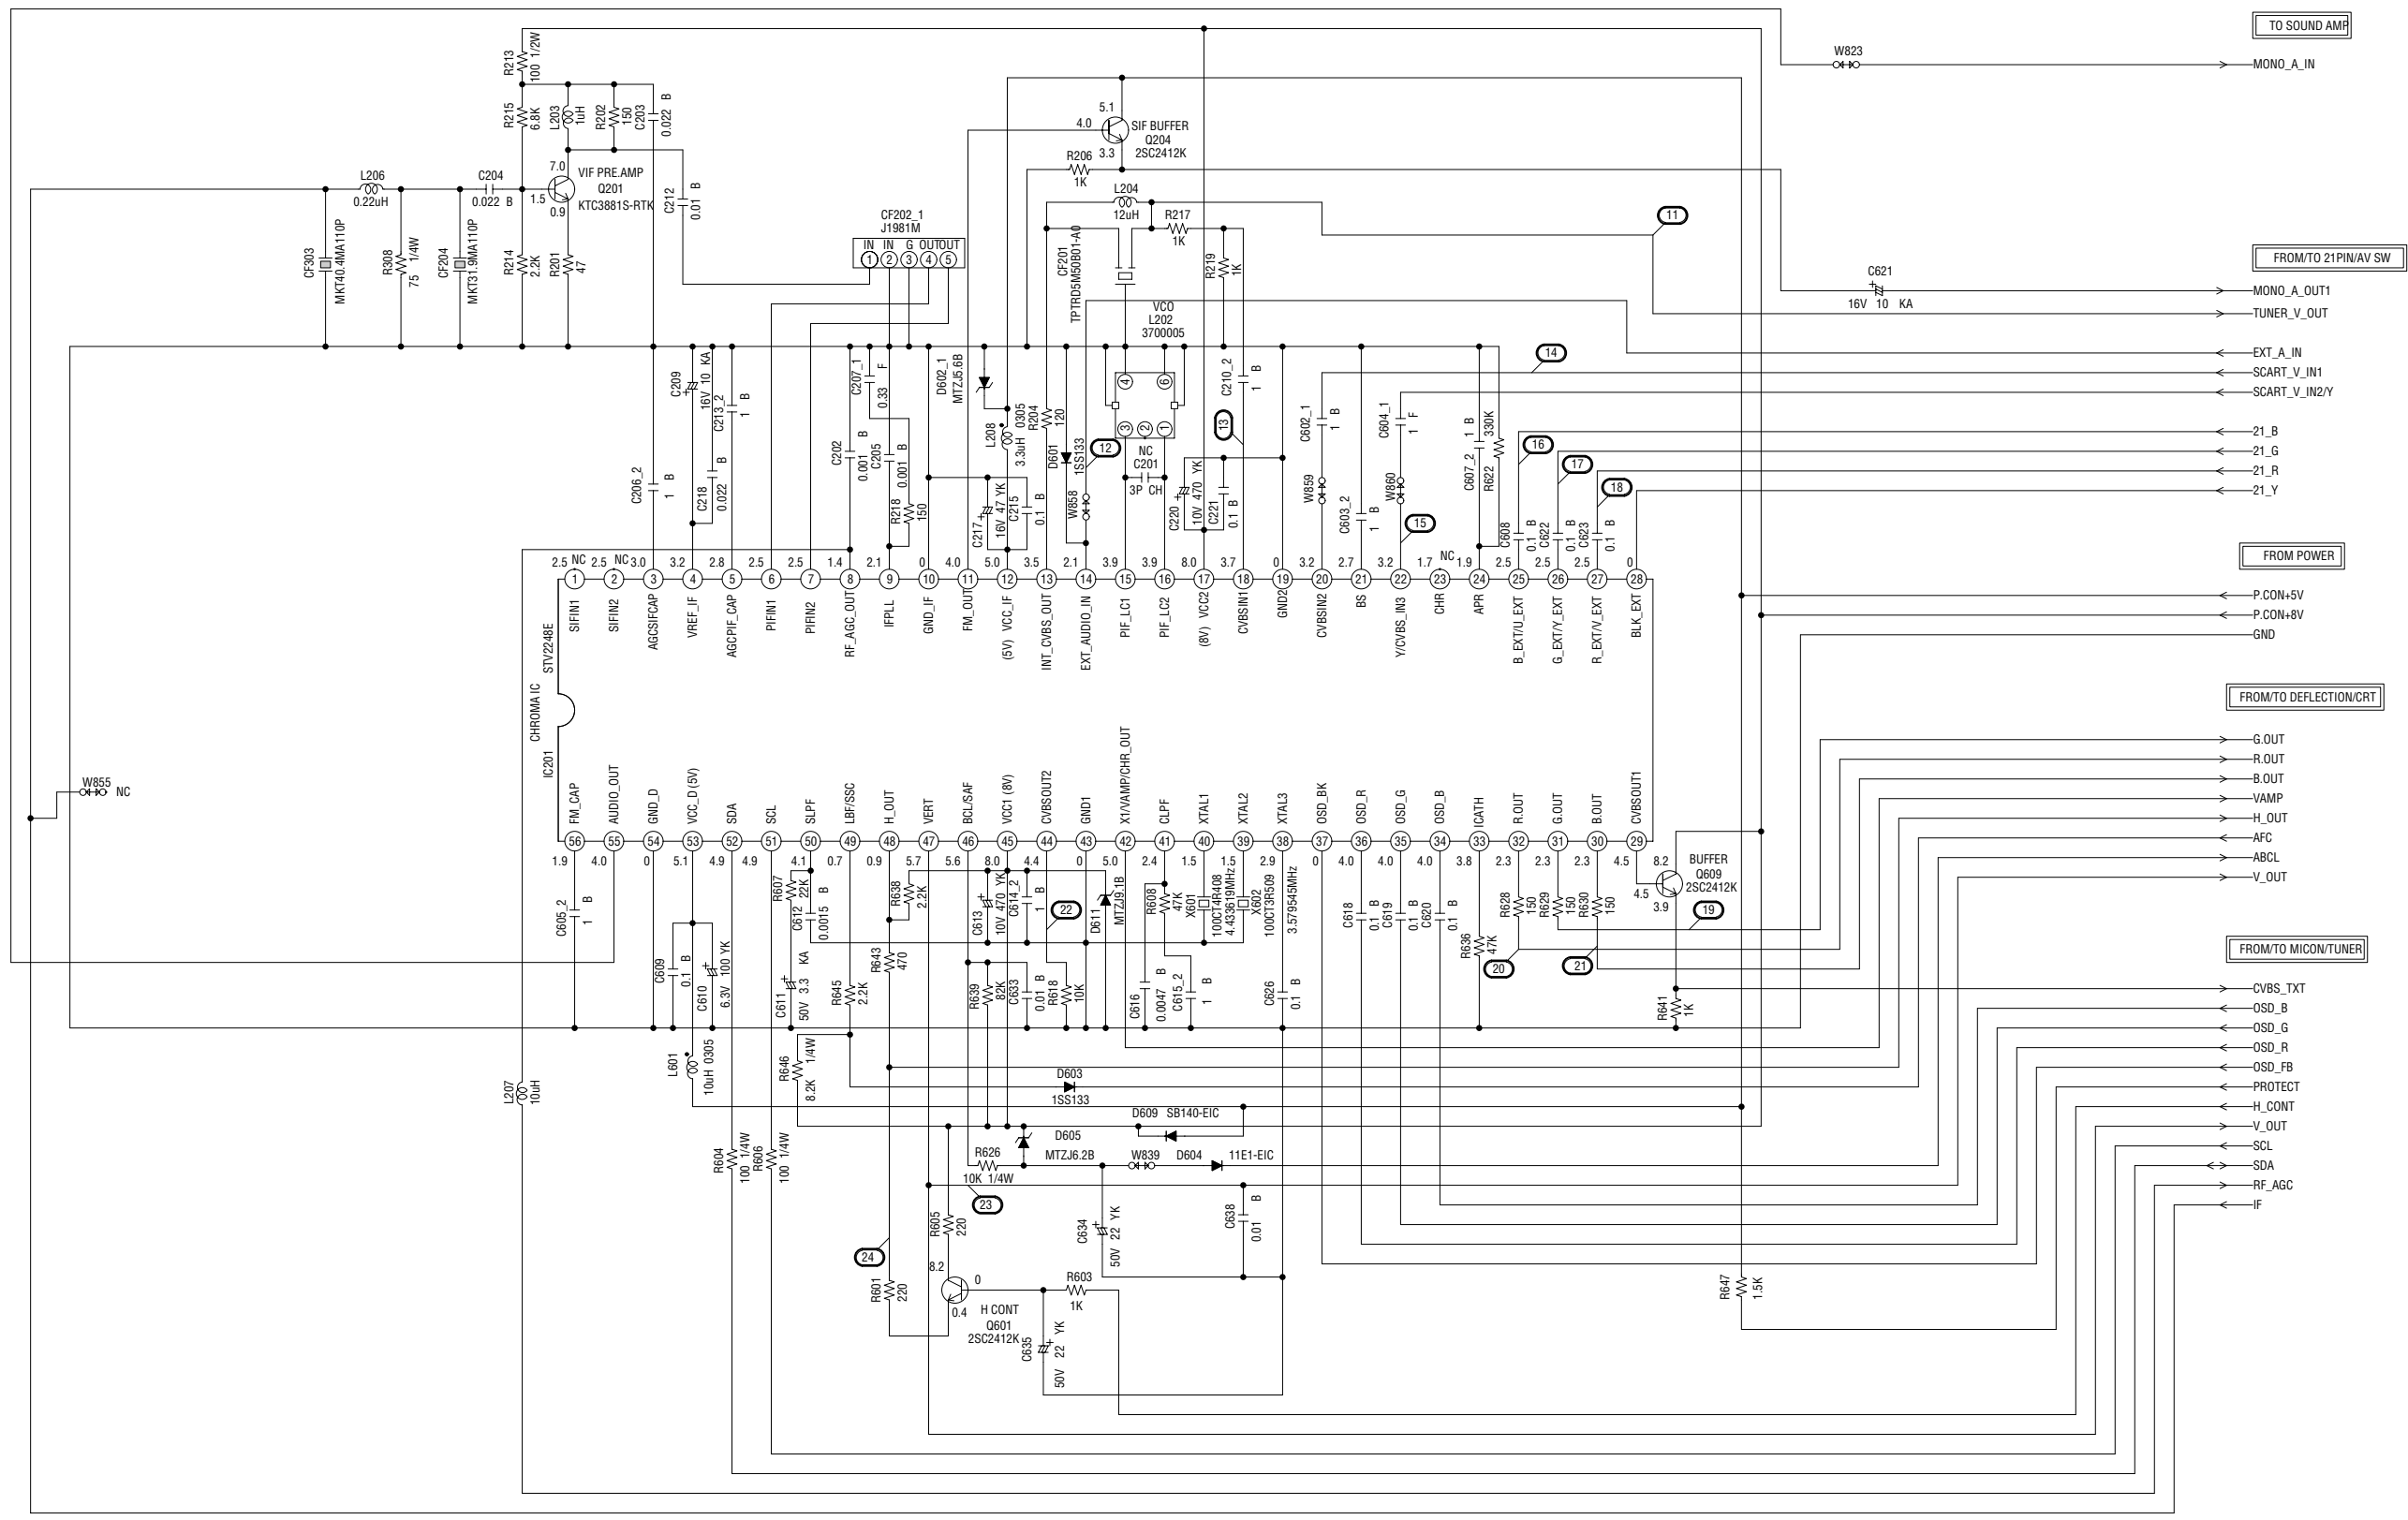

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PC8010
TMC572

(MAIN PCB)



NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

SOUND AMP SCHEMATIC DIAGRAM
(MAIN PCB)

TO 21PIN/AV SW

FRONT_A_IN_L
FRONT_V_IN3

FROM IF/CHROMA

MONO_A_IN

FROM MICON/TUNER

A_MUTE

FROM POWER

SOUND+B

SOUND_GND

P.CON+8V

GND

P.FAIL

AT+5V_AVDB

SOUND AMP IC IC1002 AN5276

CH1 IN NC 1
CH1 IN RF 2
RIPPLE FILTER 3
GND 4
CH2 IN 5
CH2 IN NC 6
CH2 OUT 7
MUTE 8
GND 9
VCC 10
STAND-BY 11
CH1 OUT 12

HS1002 763WAA0160
C1009 25V 1000 YK
C1014 35V 470 YK

D1001 1SS133
MUTE Q1002 DTA124EKA

C1008 50V 10 MHE
R1014 1.2K 1/4W

R707 100 1/2W

C757 10V 100 YK

R704 75

C758 10K

R727 100K

R728 1K

C759 0.001 B

R738 560

L715 10uH

R739 390 1/2W

B702 W4BRH3.5X6X1.0

C753 470P CH

C754 470P CH

W829

W825

CP1002 A2502WV2-2P

SPEAKER

SP351.1 R C109-47-148A 4 OHM

FRONT VIDEO J703 HTJ-032-03AY

FRONT AUDIO L J704 HTJ-032-03AW

HEADPHONE JACK J702 MSJ-2000


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


CAUTION: DIGITAL TRANSISTOR



DEFLECTION/CRT SCHEMATIC DIAGRAM (MAIN PCB)

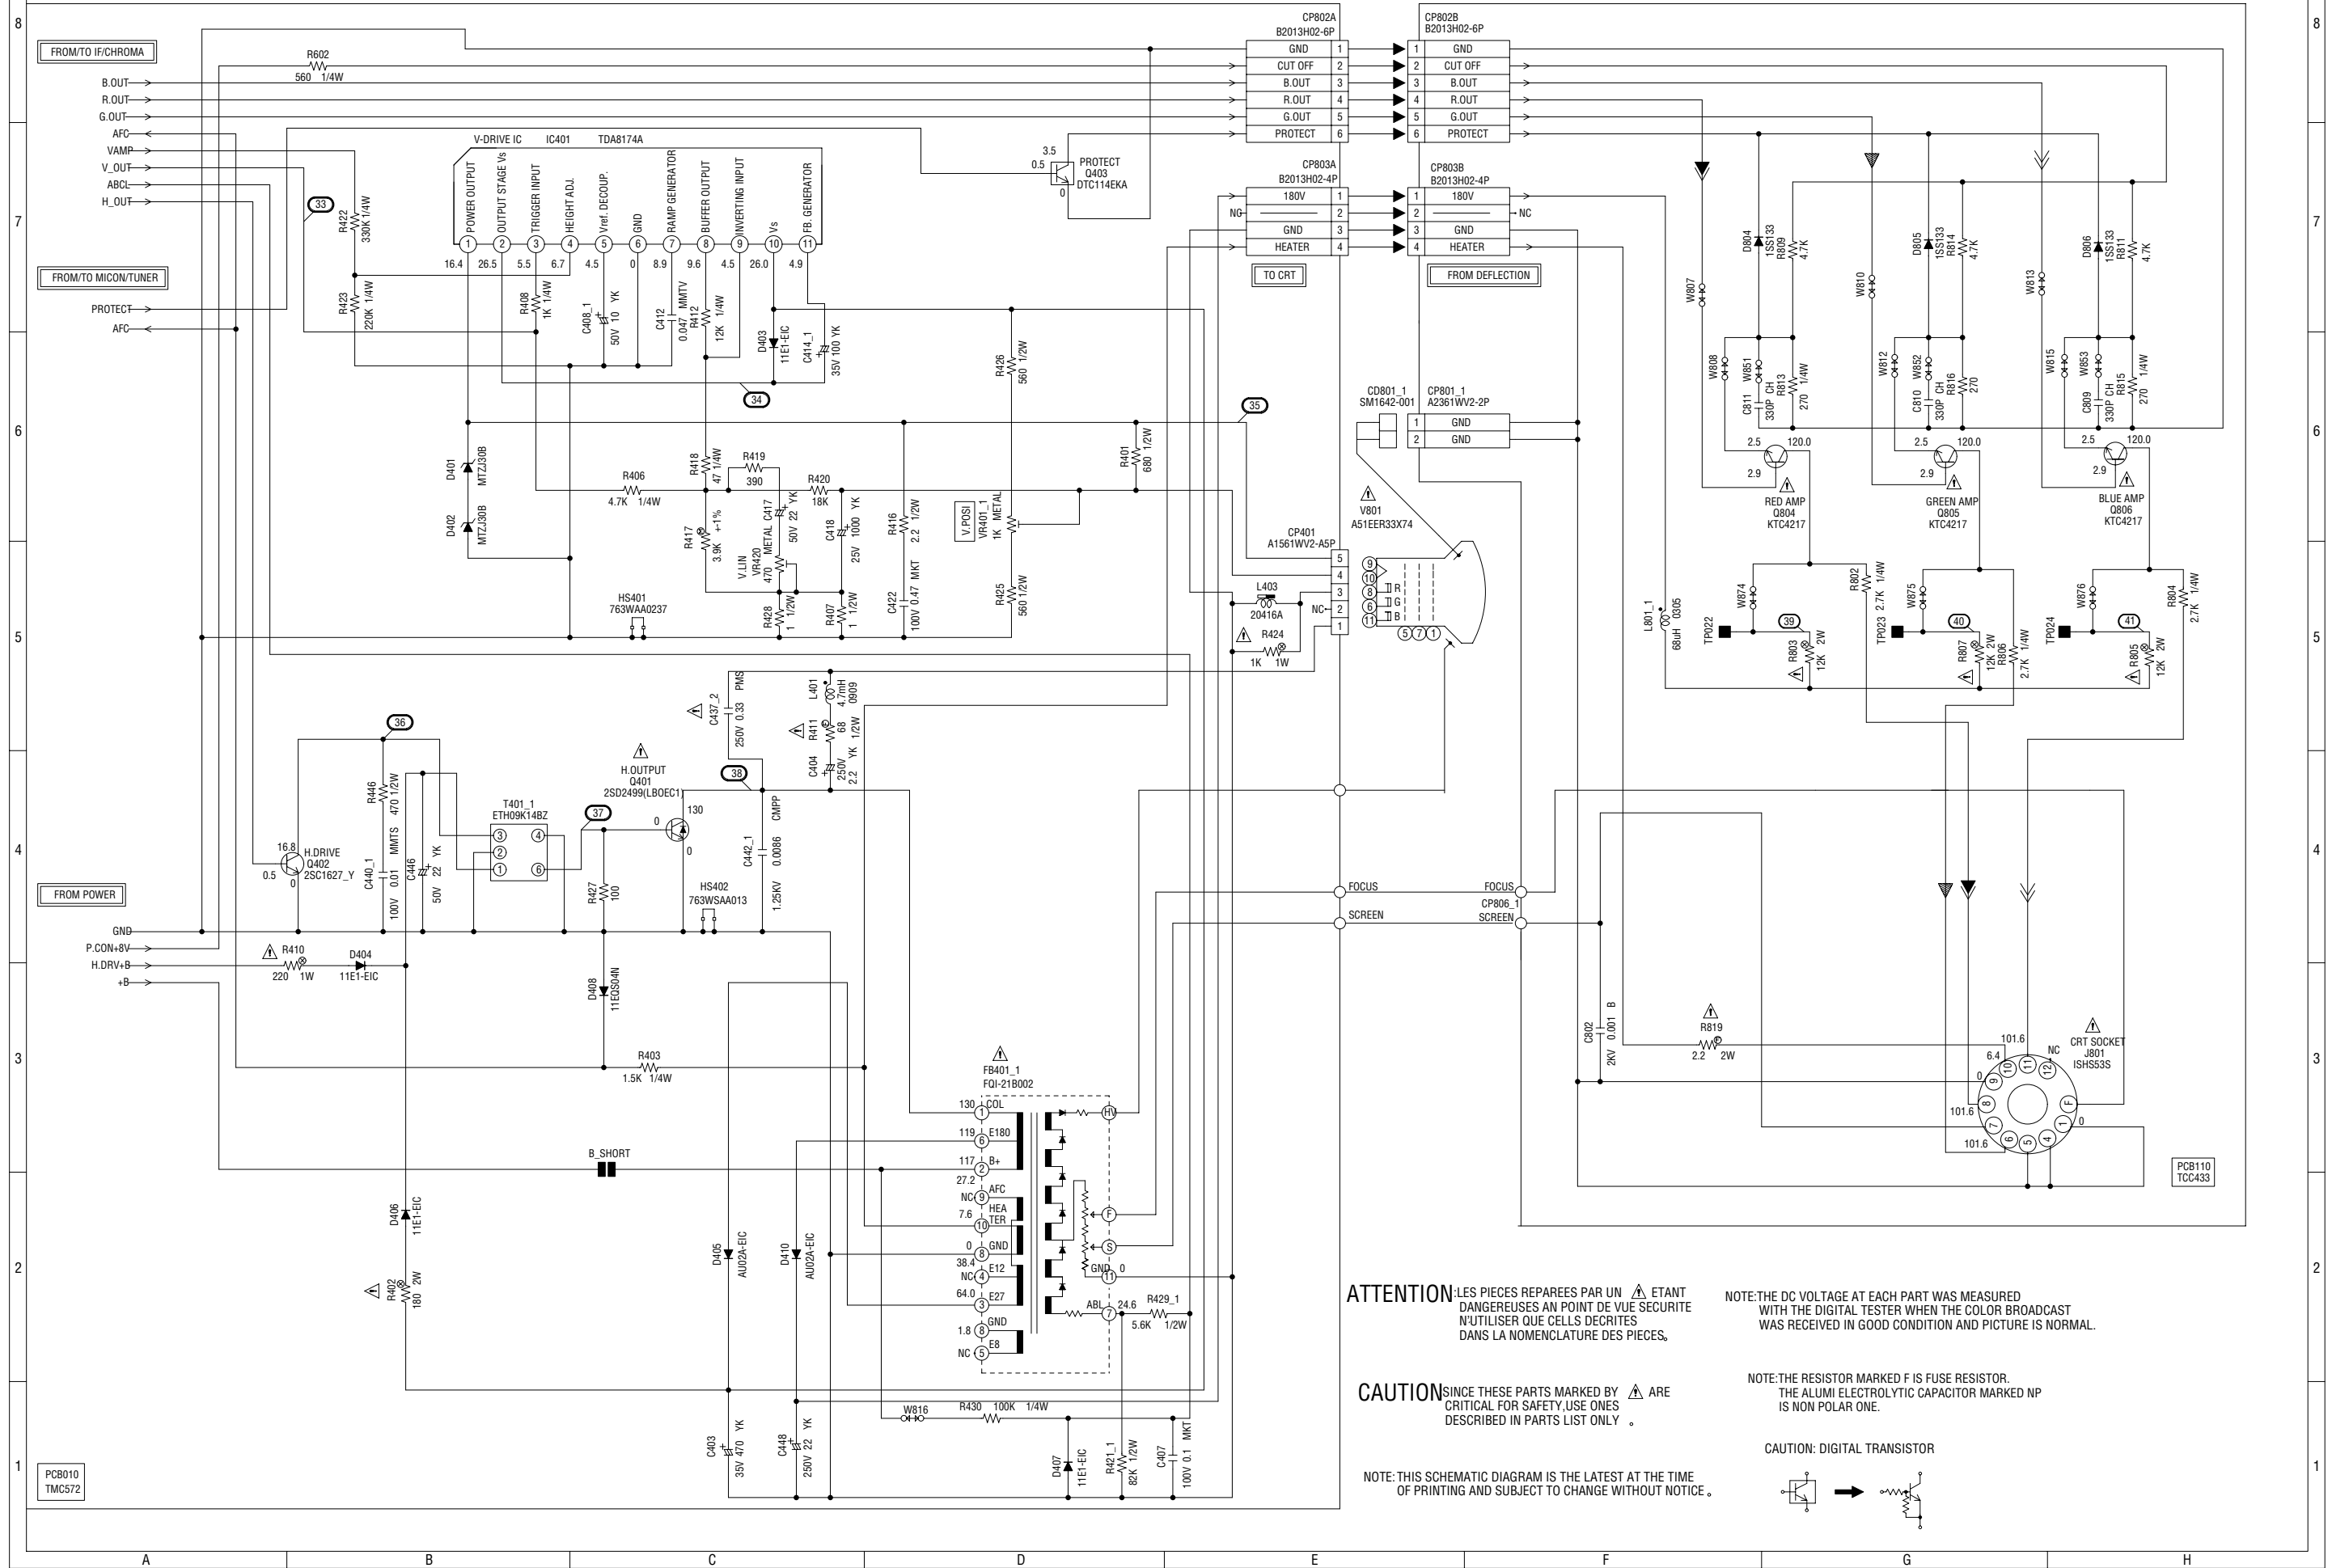

POWER SCHEMATIC DIAGRAM (MAIN PCB)

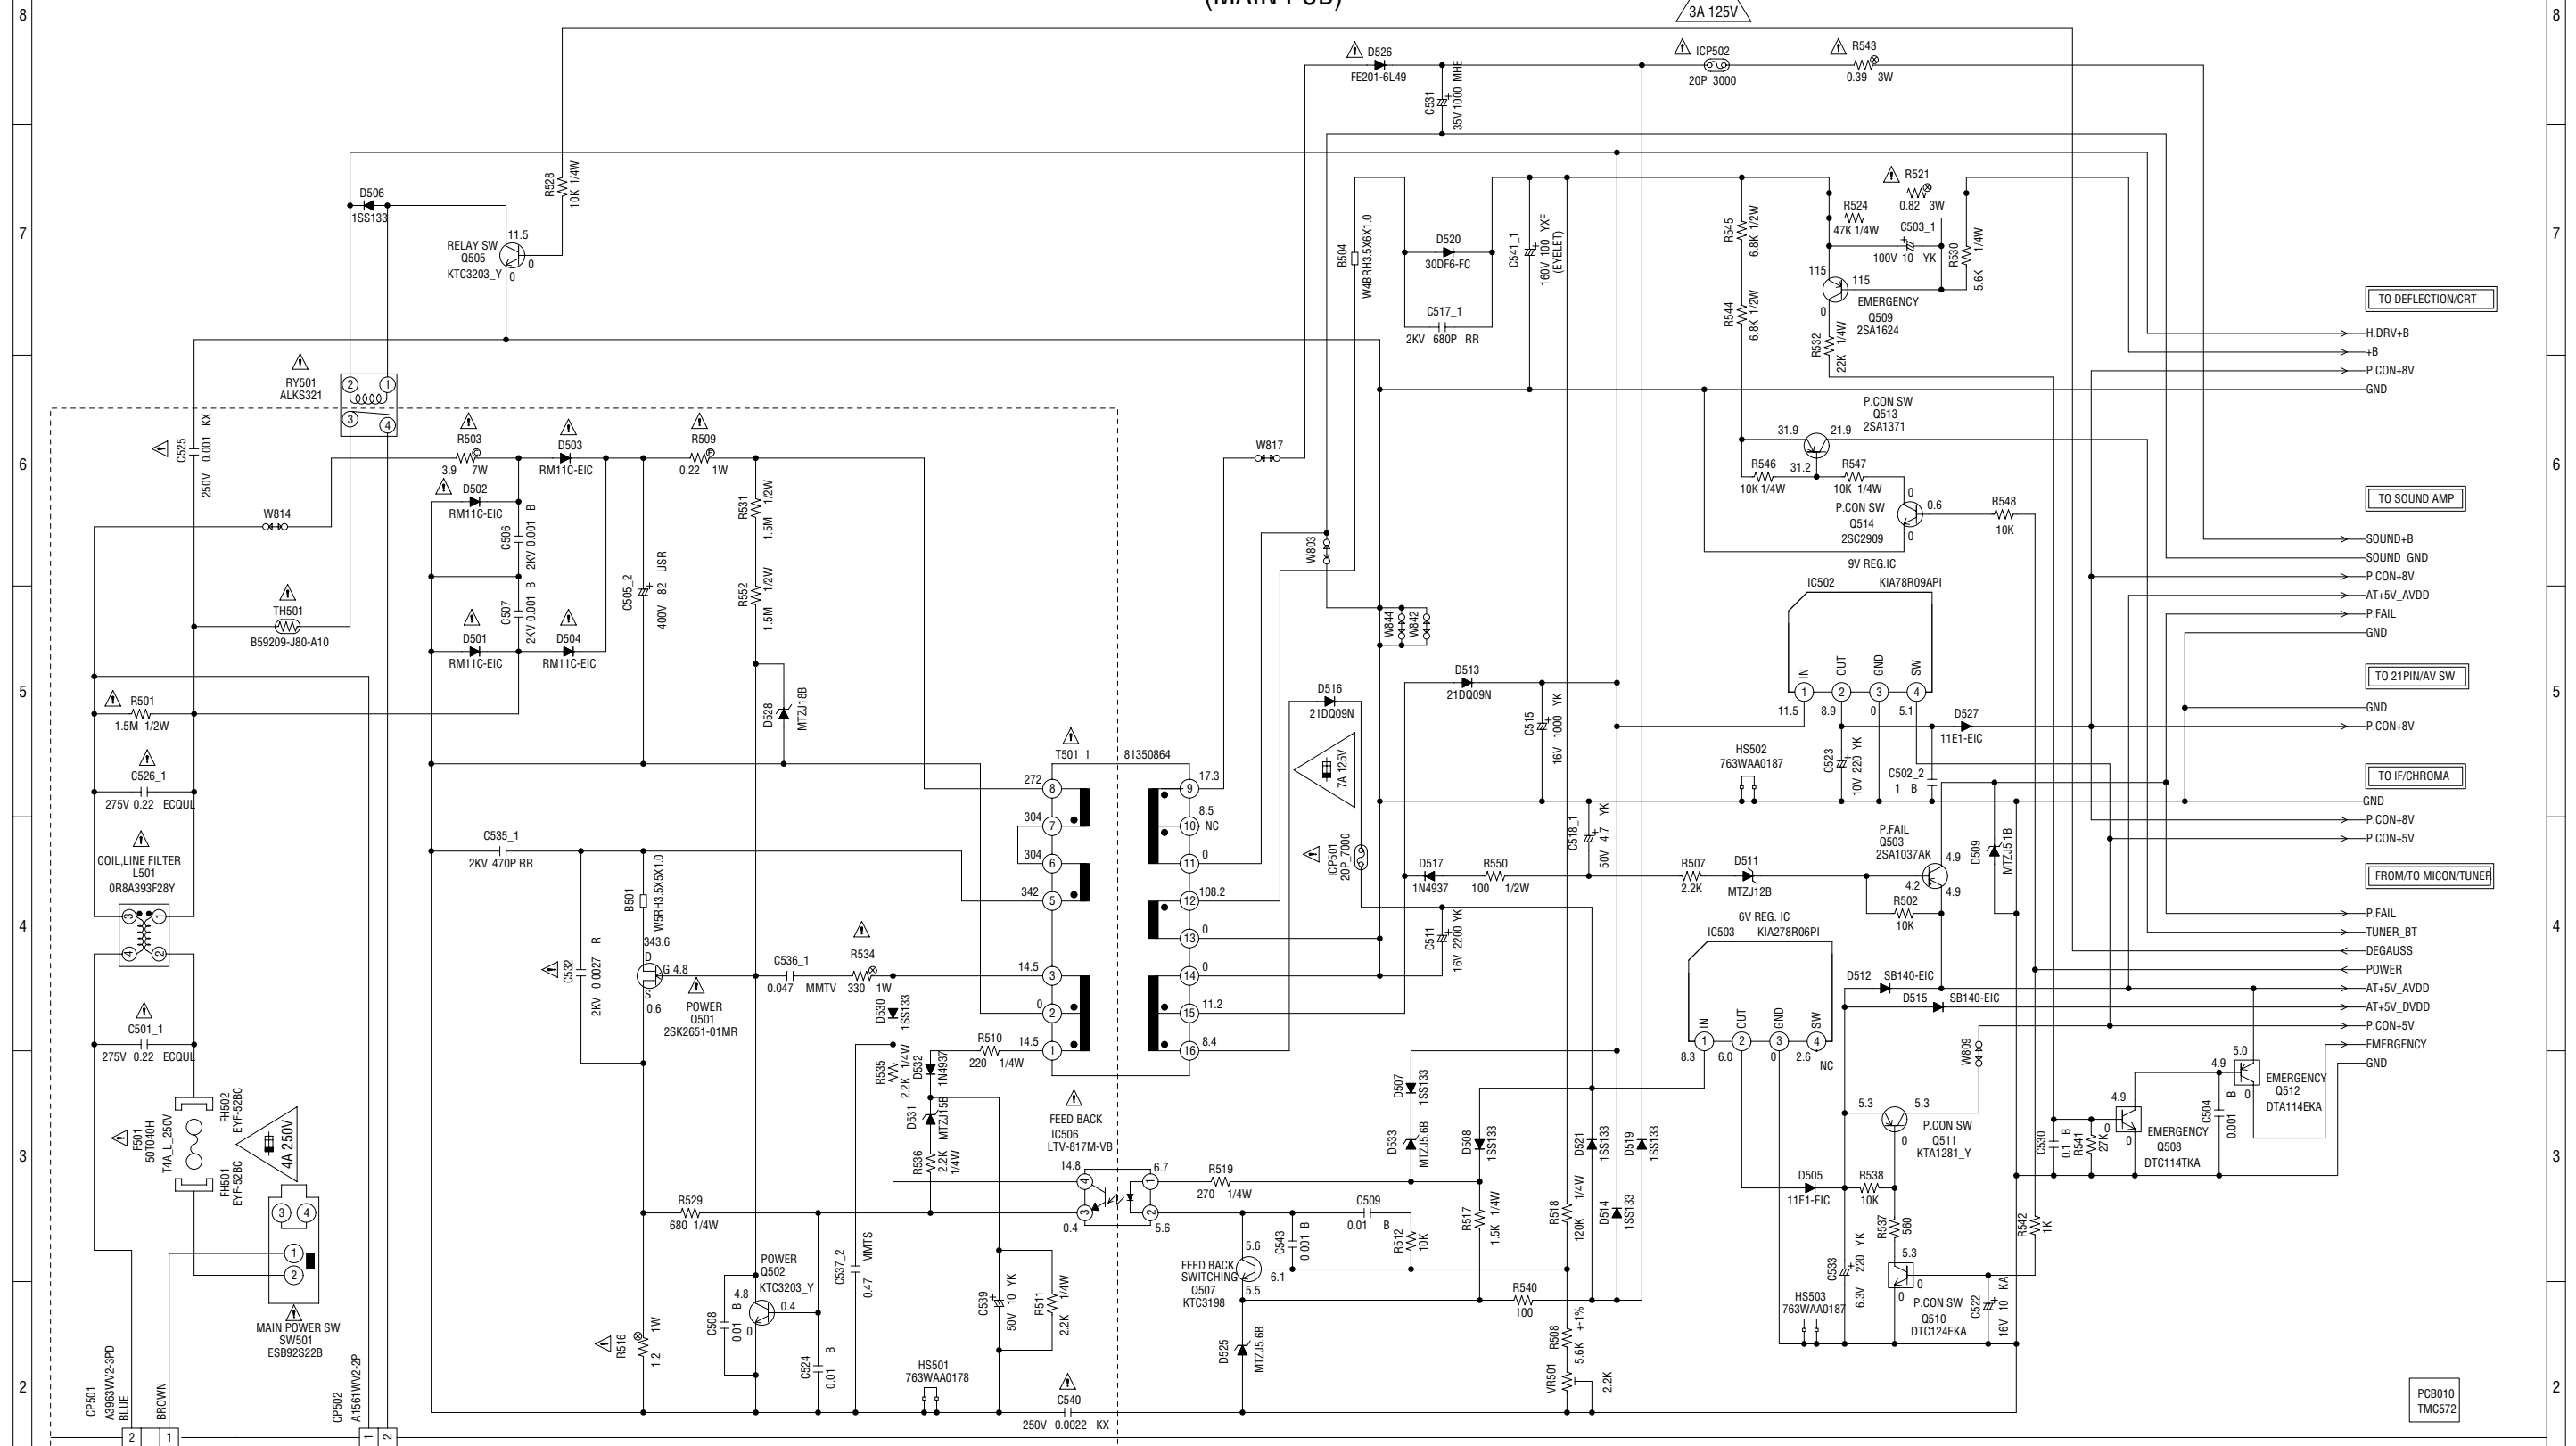

TO DEFLECTION/CRT

H.DRV+B
+B
P.CON+8V
GND

TO SOUND AMP

SOUND+B
SOUND_GND
P.CON+8V
AT+5V_AVDD
P.FAIL
GND

TO 21PIN/AV SW

GND
P.CON+8V

TO IF/CHROMA

GND
P.CON+8V
P.CON+5V

FROM/TO MICON/TUNER

P.FAIL
TUNER_BT
DEGAUSS
POWER
AT+5V_AVDD
AT+5V_DVDD
P.CON+5V
EMERGENCY
GND

EMERGENCY Q512
DTA114EKA

PC8010
TMC572

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 4A 250V(F501) AND 7A 125V(ICP501) 3A 125V(ICP502).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCENDIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 4A 250V(F501) ET 7A 125V(ICP501) AND 3A 125V(ICP502).

CAUTION: ICP501 AND ICP502 MANUFACTURED BY SKYGATE CO.LTD. TYPE 20N.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPAREES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR













CAUTION: DIGITAL TRANSISTOR








WAVEFORMS

MICON/TUNER


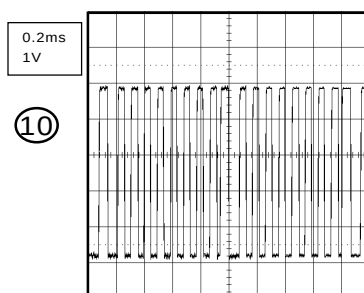
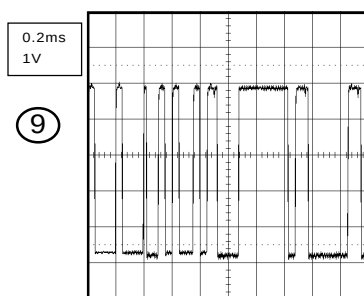
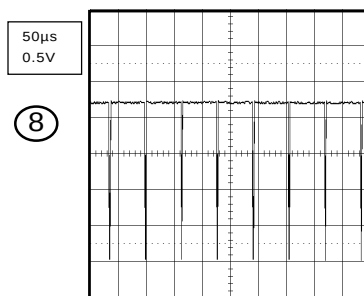
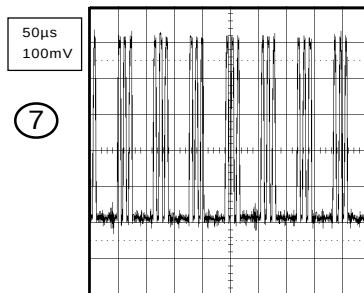
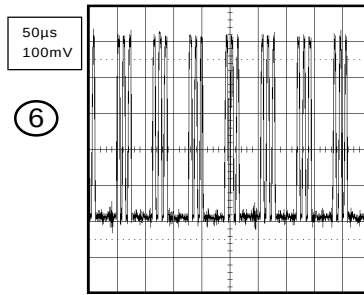
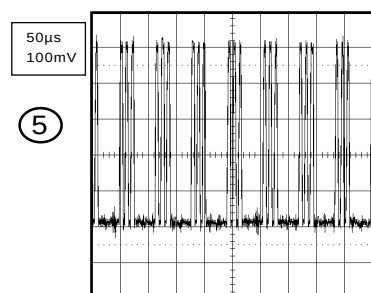
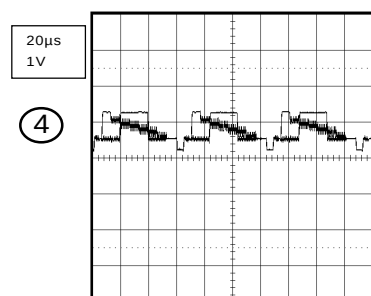
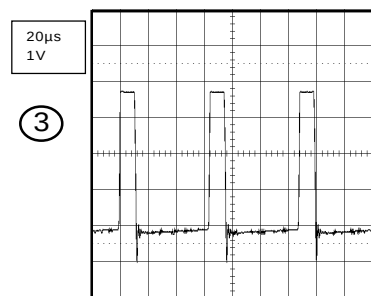
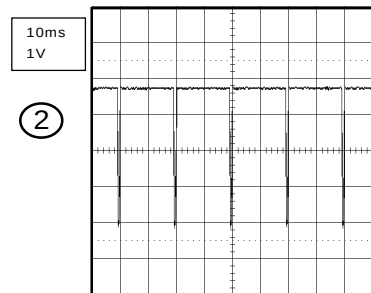
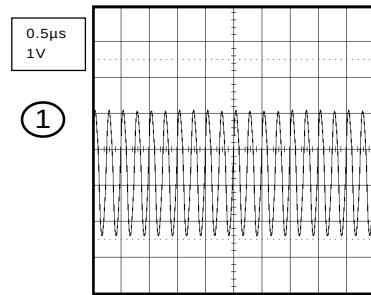


IF/CHROMA

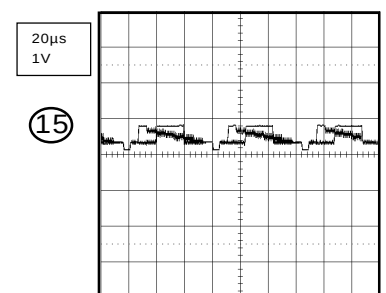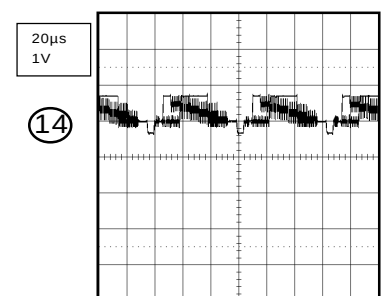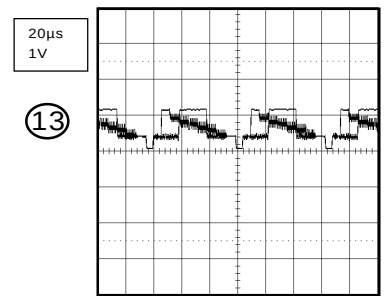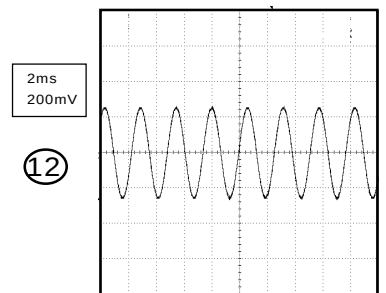
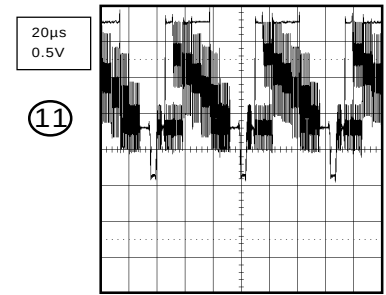


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



WAVEFORMS

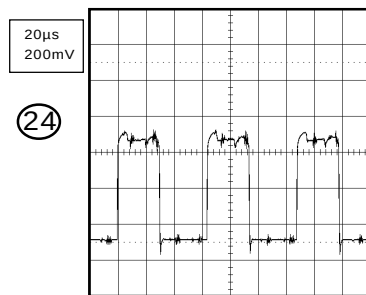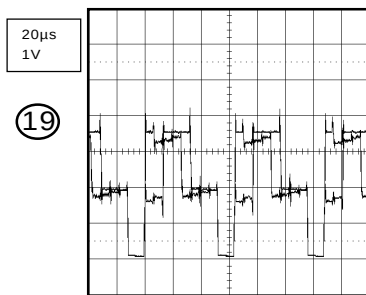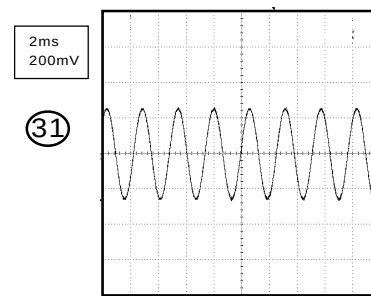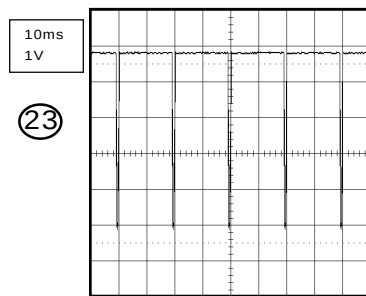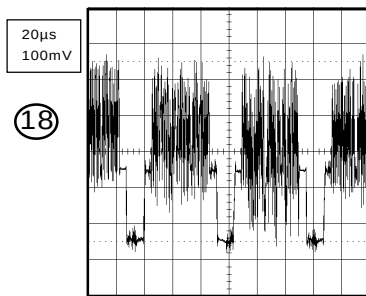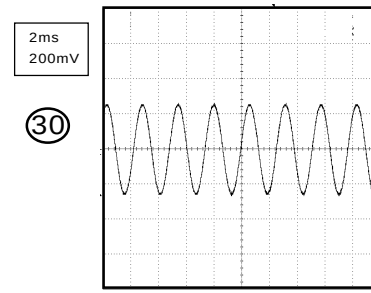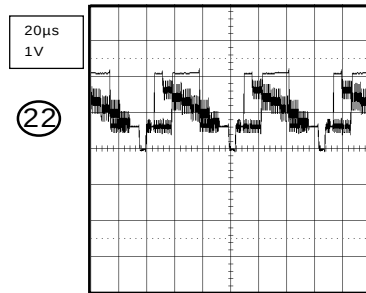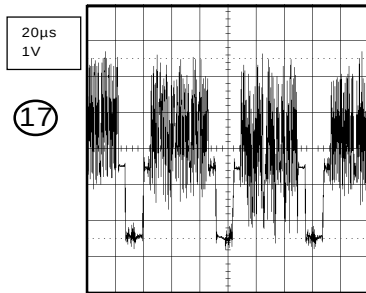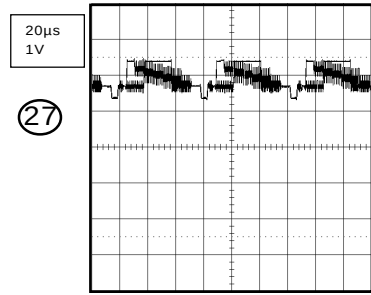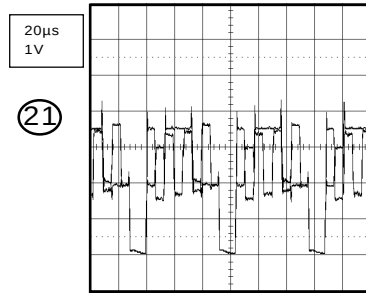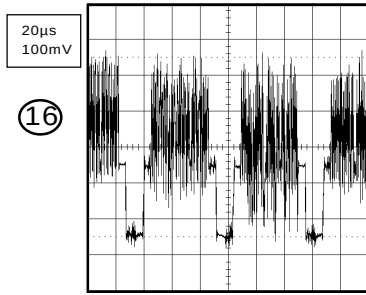

DEFLECTION/CRT








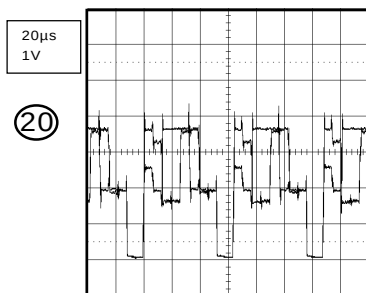
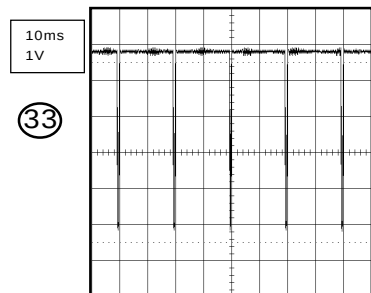


21PIN/AV SW

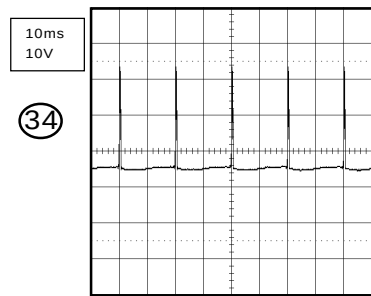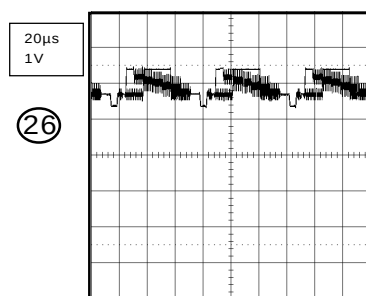

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS

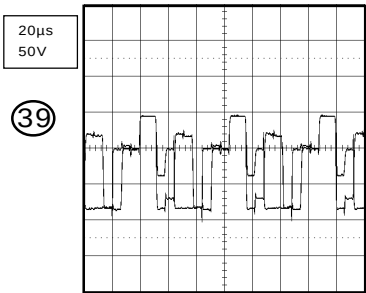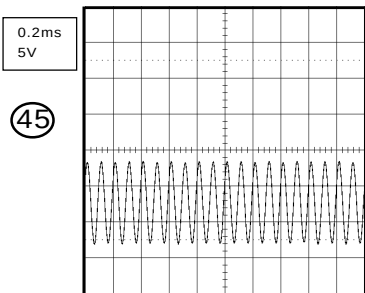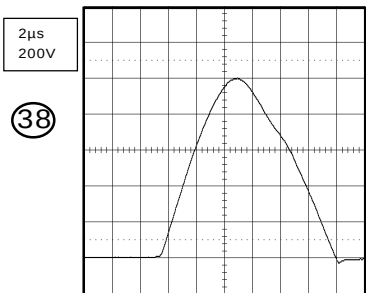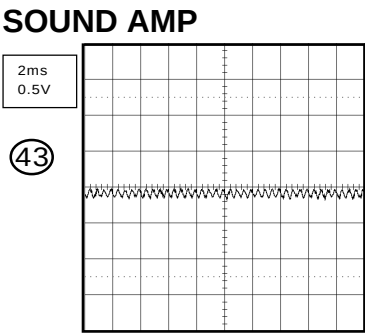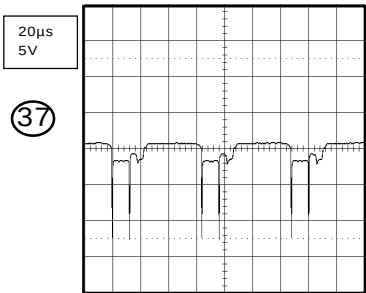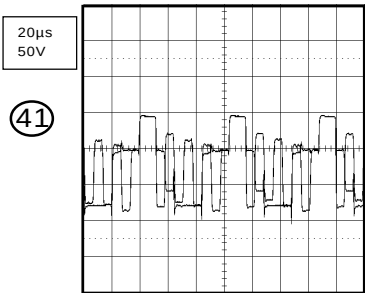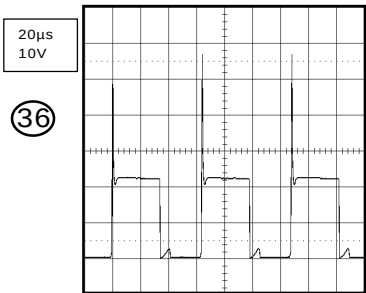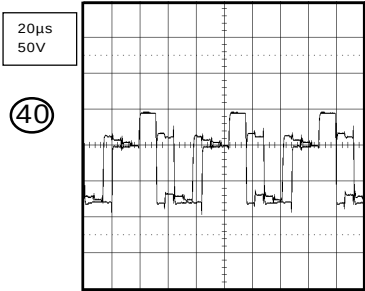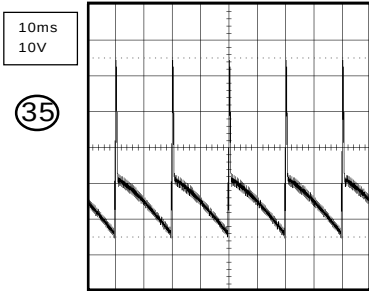

SOUND AMP

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

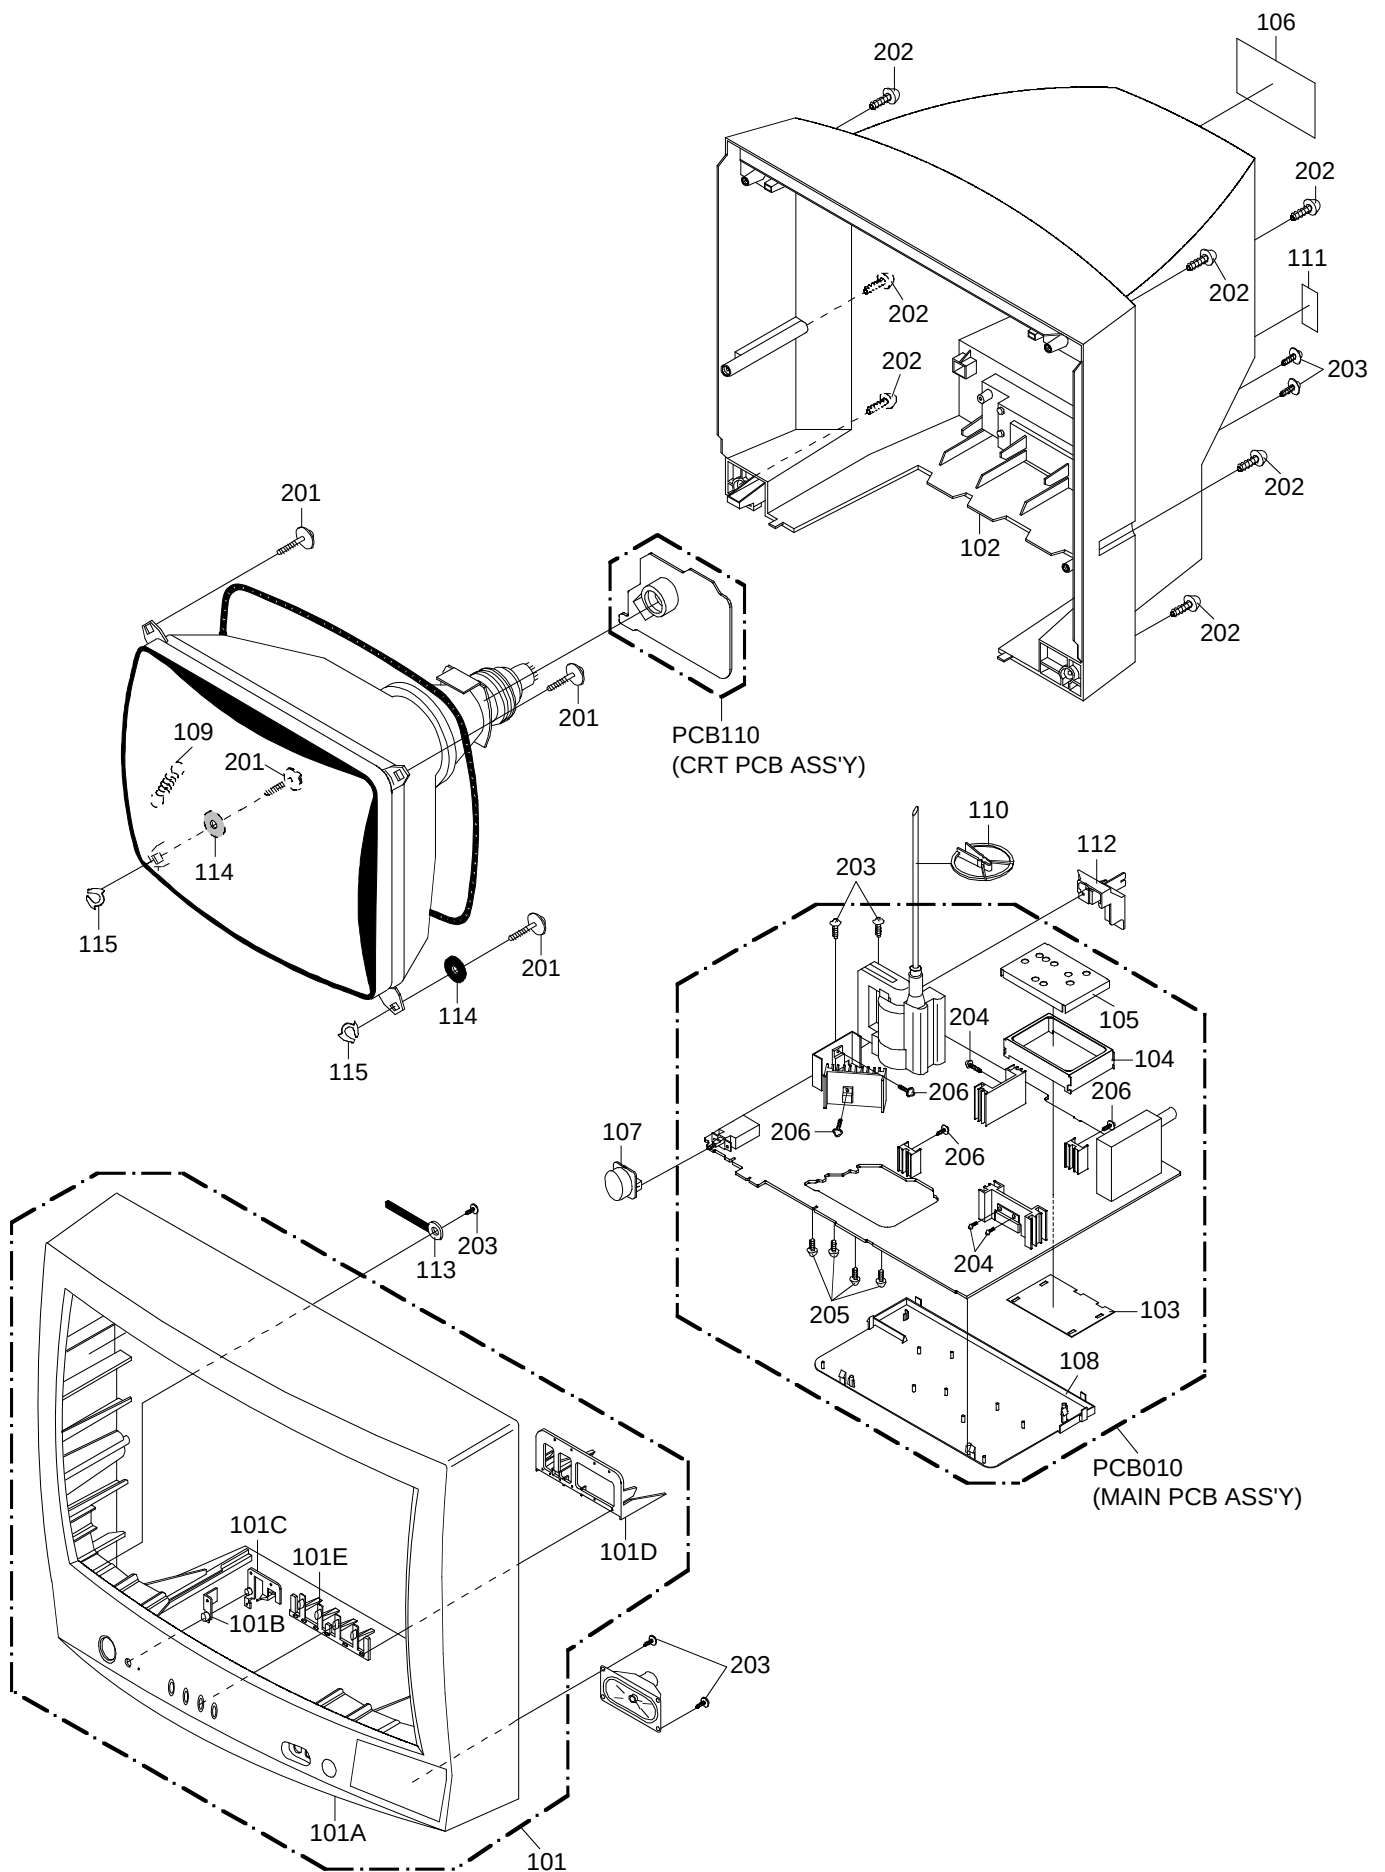

MECHANICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description	
101	A3M511G720	CABINET,FRONT ASSY	
101A	701WPJC370	CABINET,FRONT	
101B	711WPA0171	PLATE,FRONT	
101C	713WPA0214	GUIDE,REMOCON	
101D	735WPA0667	BUTTON,BASE	
101E	735WPBA659	BUTTON,FRAME	
102	A3M511G740	CABINET,BACK ASSY	
103	752WSAA006	PLATE,SHIELD	
104	752WSAA008	SHIELD,CASE	
105	752WSAA013	SHIELD,LID	
106	722549A240	SHEET,RATING	
107	735WPB0234	BUTTON,POWER	
108	755WPAA016	COVER,PCB	
109	741WUA0001	SPRING,EARTH	
110	899HV3T000	HOLDER,ANODE WIRE	
111	7230007540	SHEET,JACK	
112	761WPAA074	HOLDER,FBT	
113	8995034000	CORD CLIP UL CO.	
114	800WR0A003	SHEET,CRT SUPPORT	
115	769WSA0011	WASHER CRT T=0.5	
201	8141J50C54	SCREW,TAP TITE(P) GW22	5x35
202	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
205	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	8109130A04	SCREW,TAP TITE(B) WH7	3x10
---	723000C343	SHEET,BAR CODE	
---	791WHA0085	LAMIFILM,BAG	
---	792UHA0171	PACKAGE,TOP	
---	792UHAA048	PACKAGE BOTTOM	
---	793UCDB222	GIFT BOX	
---	A3M511N975	INSTRUCTION BOOK KIT	
---	J3M51101A	INSTRUCTION BOOK	
---	J3M51107A	QUICK SET-UP SHEET	
---	JB5XD200	POLYBAG,INSTRUCTION(RED CAUTION)	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.		Description
		RESISTORS	
R003	R002T4271J	RC	270 OHM 1/4W
R004	R002T4271J	RC	270 OHM 1/4W
R005	R801R7823J	RC	82K OHM 1/10W
R006	R801R7153J	RC	15K OHM 1/10W
R101	R801R7391J	RC	390 OHM 1/10W
R102	R801R7821J	RC	820 OHM 1/10W
R103	R801R7122J	RC	1.2K OHM 1/10W
R104	R801R7222J	RC	2.2K OHM 1/10W
R105	R801R7103J	RC	10K OHM 1/10W
R106	R801R7103J	RC	10K OHM 1/10W
R107	R801R7102J	RC	1K OHM 1/10W
R108	R801R7271J	RC	270 OHM 1/10W
R109	R002T4222J	RC	2.2K OHM 1/4W
R110	R801R7562J	RC	5.6K OHM 1/10W
R111	R801R7153J	RC	15K OHM 1/10W
R112	R002T4152J	RC	1.5K OHM 1/4W
R113	R801R7562J	RC	5.6K OHM 1/10W
R114	R801R7472J	RC	4.7K OHM 1/10W
R115	R801R7472J	RC	4.7K OHM 1/10W
R116	R801R7103J	RC	10K OHM 1/10W
R120	R801R7472J	RC	4.7K OHM 1/10W
R121	R002T4101J	RC	100 OHM 1/4W
R122	R801R7472J	RC	4.7K OHM 1/10W
R123	R801R7103J	RC	10K OHM 1/10W
R124	R801R7103J	RC	10K OHM 1/10W
R125	R801R7472J	RC	4.7K OHM 1/10W
R126	R801R7470J	RC	47 OHM 1/10W
R128	R801R7101J	RC	100 OHM 1/10W
R129	R801R7101J	RC	100 OHM 1/10W
R131	R801R7104J	RC	100K OHM 1/10W
R132	R801R7561J	RC	560 OHM 1/10W
R133	R801R7103J	RC	10K OHM 1/10W
R134	R801R7103J	RC	10K OHM 1/10W
R136	R002T4152J	RC	1.5K OHM 1/4W
R137	R801R7181J	RC	180 OHM 1/10W
R140	R801R7182J	RC	1.8K OHM 1/10W
R141	R801R7182J	RC	1.8K OHM 1/10W
R142	R801R7182J	RC	1.8K OHM 1/10W
R143	R801R7102J	RC	1K OHM 1/10W
R144	R002T4102J	RC	1K OHM 1/4W
R145	R002T4102J	RC	1K OHM 1/4W
R146	R002T4102J	RC	1K OHM 1/4W
R147	R002T4122J	RC	1.2K OHM 1/4W
R148	R801R7103J	RC	10K OHM 1/10W
R151	R801R7472J	RC	4.7K OHM 1/10W
R152	R002T4101J	RC	100 OHM 1/4W
R201	R801R7470J	RC	47 OHM 1/10W
R202	R801R7151J	RC	150 OHM 1/10W
R204	R801R7121J	RC	120 OHM 1/10W
R206	R801R7102J	RC	1K OHM 1/10W
R213	R002T2101J	RC	100 OHM 1/2W
R214	R801R7222J	RC	2.2K OHM 1/10W
R215	R801R7682J	RC	6.8K OHM 1/10W
R217	R801R7102J	RC	1K OHM 1/10W
R218	R801R7151J	RC	150 OHM 1/10W
R219	R801R7102J	RC	1K OHM 1/10W
R308	R002T4750J	RC	75 OHM 1/4W
R401	R002T2681J	RC	680 OHM 1/2W
△R402	R3X18A181J	R,METAL OXIDE	180 OHM 2W
R403	R002T4152J	RC	1.5K OHM 1/4W
R406	R002T4472J	RC	4.7K OHM 1/4W
R407	R002T2010J	RC	1 OHM 1/2W
R408	R002T4102J	RC	1K OHM 1/4W
△R410	R3X181221J	R,METAL OXIDE	220 OHM 1W
△R411	R635U2680J	R,FUSE	68 OHM 1/2W
R412	R002T4123J	RC	12K OHM 1/4W
R416	R002T22R2J	RC	2.2 OHM 1/2W
R417	R4X5T6392F	R,METAL	3.9K OHM 1/6W
R418	R002T4470J	RC	47 OHM 1/4W
R419	R801R7391J	RC	390 OHM 1/10W
R420	R801R7183J	RC	18K OHM 1/10W
R421	R00202823J	RC	82K OHM 1/2W
	R002T2823J	RC	82K OHM 1/2W
R422	R002T4334J	RC	330K OHM 1/4W
R423	R002T4224J	RC	220K OHM 1/4W
△R424	R3X181102J	R,METAL OXIDE	1K OHM 1W
R425	R002T2561J	RC	560 OHM 1/2W

or

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
	RESISTORS	
R426	R002T2561J RC	560 OHM 1/2W
R427	R801R7101J RC	100 OHM 1/10W
R428	R002T2010J RC	1 OHM 1/2W
R429	R002T2562J RC	5.6K OHM 1/2W
R430	R002T4104J RC	100K OHM 1/4W
R446	R002T2471J RC	470 OHM 1/2W
△ R501	R002T2155J RC	1.5M OHM 1/2W
R502	R801R7103J RC	10K OHM 1/10W
△ R503	R5X2AE3R9J R,CEMENT	3.9 OHM 7W
R507	R801R7222J RC	2.2K OHM 1/10W
R508	R4X5T6562F R,METAL	5.6K OHM 1/6W
△ R509	R63581R22J R,FUSE	0.22 OHM 1W
R510	R002T4221J RC	220 OHM 1/4W
R511	R002T4222J RC	2.2K OHM 1/4W
R512	R801R7103J RC	10K OHM 1/10W
△ R516	R3X1811R2J R,METAL OXIDE	1.2 OHM 1W
R517	R002T4152J RC	1.5K OHM 1/4W
R518	R002T4124J RC	120K OHM 1/4W
R519	R002T4271J RC	270 OHM 1/4W
△ R521	R3X28BR82J R,METAL OXIDE	0.82 OHM 3W
R524	R002T4473J RC	47K OHM 1/4W
R528	R002T4103J RC	10K OHM 1/4W
R529	R002T4681J RC	680 OHM 1/4W
R530	R002T4562J RC	5.6K OHM 1/4W
R531	R002T2155J RC	1.5M OHM 1/2W
R532	R002T4223J RC	22K OHM 1/4W
△ R534	R3X181331J R,METAL OXIDE	330 OHM 1W
R535	R002T4222J RC	2.2K OHM 1/4W
R536	R002T4222J RC	2.2K OHM 1/4W
R537	R801R7561J RC	560 OHM 1/10W
R538	R801R7103J RC	10K OHM 1/10W
R540	R801R7101J RC	100 OHM 1/10W
R541	R801R7273J RC	27K OHM 1/10W
R542	R801R7102J RC	1K OHM 1/10W
△ R543	R3X28BR39J R,METAL OXIDE	0.39 OHM 3W
R544	R002T2682J RC	6.8K OHM 1/2W
R545	R002T2682J RC	6.8K OHM 1/2W
R546	R002T4103J RC	10K OHM 1/4W
R547	R002T4103J RC	10K OHM 1/4W
R548	R801R7103J RC	10K OHM 1/10W
R550	R002T2101J RC	100 OHM 1/2W
R552	R002T2155J RC	1.5M OHM 1/2W
R601	R801R7221J RC	220 OHM 1/10W
R602	R002T4561J RC	560 OHM 1/4W
R603	R801R7102J RC	1K OHM 1/10W
R604	R002T4101J RC	100 OHM 1/4W
R605	R801R7221J RC	220 OHM 1/10W
R606	R002T4101J RC	100 OHM 1/4W
R607	R801R7223J RC	22K OHM 1/10W
R608	R801R7473J RC	47K OHM 1/10W
R618	R801R7103J RC	10K OHM 1/10W
R622	R801R7334J RC	330K OHM 1/10W
R626	R002T4103J RC	10K OHM 1/4W
R628	R801R7151J RC	150 OHM 1/10W
R629	R801R7151J RC	150 OHM 1/10W
R630	R801R7151J RC	150 OHM 1/10W
R636	R801R7473J RC	47K OHM 1/10W
R638	R801R7222J RC	2.2K OHM 1/10W
R639	R801R7823J RC	82K OHM 1/10W
R641	R801R7102J RC	1K OHM 1/10W
R643	R801R7471J RC	470 OHM 1/10W
R645	R801R7222J RC	2.2K OHM 1/10W
R646	R002T4822J RC	8.2K OHM 1/4W
R647	R801R7152J RC	1.5K OHM 1/10W
R703	R002T4221J RC	220 OHM 1/4W
R704	R801R7750J RC	75 OHM 1/10W
R705	R801R7822J RC	8.2K OHM 1/10W
R706	R002T2391J RC	390 OHM 1/2W
R707	R002T2101J RC	100 OHM 1/2W
R710	R801R7822J RC	8.2K OHM 1/10W
R713	R002T4750J RC	75 OHM 1/4W
R714	R002T4680J RC	68 OHM 1/4W
R715	R002T4750J RC	75 OHM 1/4W
R716	R002T4750J RC	75 OHM 1/4W
R719	R002T4750J RC	75 OHM 1/4W
R720	R00204750J RC	75 OHM 1/4W
R721	R903N8102J RC	1K OHM 1/8W

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
RESISTORS		
R725	R002T2391J RC	390 OHM 1/2W
R726	R801R7102J RC	1K OHM 1/10W
R727	R801R7104J RC	100K OHM 1/10W
R728	R801R7104J RC	100K OHM 1/10W
R736	R801R7103J RC	10K OHM 1/10W
R737	R801R7563J RC	56K OHM 1/10W
R738	R801R7561J RC	560 OHM 1/10W
R745	R801R7104J RC	100K OHM 1/10W
R750	R801R7101J RC	100 OHM 1/10W
R802	R002T4272J RC	2.7K OHM 1/4W
△ R803	R3X18A123J R,METAL OXIDE	12K OHM 2W
R804	R002T4272J RC	2.7K OHM 1/4W
△ R805	R3X18A123J R,METAL OXIDE	12K OHM 2W
R806	R002T4272J RC	2.7K OHM 1/4W
△ R807	R3X18A123J R,METAL OXIDE	12K OHM 2W
R809	R801R7472J RC	4.7K OHM 1/10W
R811	R801R7472J RC	4.7K OHM 1/10W
R813	R002T4271J RC	270 OHM 1/4W
R814	R801R7472J RC	4.7K OHM 1/10W
R815	R002T4271J RC	270 OHM 1/4W
R816	R801R7271J RC	270 OHM 1/10W
△ R819	R6358A2R2J R,FUSE	2.2 OHM 2W
R1004	R002T4682J RC	6.8K OHM 1/4W
R1005	R801R7222J RC	2.2K OHM 1/10W
R1010	R801R7103J RC	10K OHM 1/10W
R1011	R801R7103J RC	10K OHM 1/10W
R1014	R002T4122J RC	1.2K OHM 1/4W
R1015	R801R7123J RC	12K OHM 1/10W
CAPACITORS		
C001	CS0RB04H4K CC	0.022 UF 50V B
C002	E02LU0471M CE	470 UF 6.3V
C003	E50HU5010M CE	1 UF 50V
C006	CS0RCH412J CC	100 PF 50V CH
C007	CS0RB0414K CC	0.01 UF 50V B
C101	CS0RCH4U1J CC	68 PF 50V CH
C102	CS0RB0315K CC	0.1 UF 25V B
C103	CS0RCH4H1J CC	22 PF 50V CH
C104	CS0RB04Q3K CC	0.0047UF 50V B
C105	CS0RB0315K CC	0.1 UF 25V B
C106	CS0RB04H4K CC	0.022 UF 50V B
C108	CS0RCH4H1J CC	22 PF 50V CH
C109	CS0RCH4H1J CC	22 PF 50V CH
C111	CS0RF02Q5Z CC	0.47 UF 16V F
C112	CS0RCH4W1J CC	82 PF 50V CH
C113	CS0RCH4H1J CC	22 PF 50V CH
C114	CS0RB0315K CC	0.1 UF 25V B
C115	E02LT0222M CE	2200 UF 6.3V
C116	CS0RB04Q3K CC	0.0047UF 50V B
C118	CS0RB0315K CC	0.1 UF 25V B
C119	CS0RB0315K CC	0.1 UF 25V B
C120	CS0RB0216K CC	1 UF 16V B
C121	E02LU0101M CE	100 UF 6.3V
C122	E50HU2100M CE	10 UF 16V
C125	CS0RCH412J CC	100 PF 50V CH
C126	CS0RCH412J CC	100 PF 50V CH
C127	CS0RCH412J CC	100 PF 50V CH
C128	CS0RCH4E2J CC	150 PF 50V CH
C129	CS0RCH4H2J CC	220 PF 50V CH
C131	E50HU2100M CE	10 UF 16V
C132	CS0RCH431J CC	30 PF 50V CH
C139	CS0RF02Q5Z CC	0.47 UF 16V F
C140	CS0RCH4H2J CC	220 PF 50V CH
C141	CS0RB0315K CC	0.1 UF 25V B
C143	CS0RB0315K CC	0.1 UF 25V B
C201	CS0RCH430C CC	3 PF 50V CH
C202	CS0RB0413K CC	0.001 UF 50V B
C203	CS0RB04H4K CC	0.022 UF 50V B
C204	CS0RB04H4K CC	0.022 UF 50V B
C205	CS0RB0413K CC	0.001 UF 50V B
C206	CS0RB0216K CC	1 UF 16V B
C207	CS0RF04L5Z CC	0.33 UF 50V F
C209	E50HU2100M CE	10 UF 16V
C210	CS0RB0216K CC	1 UF 16V B
C212	CS0RB0414K CC	0.01 UF 50V B
C213	CS0RB0216K CC	1 UF 16V B
C215	CS0RB0315K CC	0.1 UF 25V B
C217	E02LU2470M CE	47 UF 16V

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.		Description
CAPACITORS			
C218	CS0RB04H4K	CC	0.022 UF 50V B
C220	E02LU1471M	CE	470 UF 10V
C221	CS0RB0315K	CC	0.1 UF 25V B
C403	E02LT4471M	CE	470 UF 35V
C404	E02LTD2R2M	CE	2.2 UF 250V
C407	P235W1104J	CMP	0.1 UF 100V MKT
C408	E02LU5100M	CE	10 UF 50V
C412	P232T0473J	CMPL	0.047 UF 50V MMTV
△C414	E02LU4101M	CE	100 UF 35V
C417	E02LU5220M	CE	22 UF 50V
C418	E02LF3102M	CE	1000 UF 25V
C422	P235W1474J	CMP	0.47 UF 100V MKT
C437	P4J7F3334J	CMPP	0.33 UF 250V PMS
C440	P232W1103J	CMP	0.01 UF 100V MMTS
C442	P4N8FJ862H	CMPP	0.0086UF 1.25KV
△C446	E02LU5220M	CE	22 UF 50V
△C448	E0ELFD220M	CE	22 UF 250V
△C501	P2122B224M	CMP	0.22 UF 275V ECQUL
C502	CS0RB0216K	CC	1 UF 16V B
C503	E02LT8100M	CE	10 UF 100V
C504	CS0RB0413K	CC	0.001 UF 50V B
△C505	E52DHH820M	CE	82 UF 400V
C506	C0JBB0713K	CC	0.001 UF 2KV B
C507	C0JBB0713K	CC	0.001 UF 2KV B
C508	CS0RB0414K	CC	0.01 UF 50V B
C509	CS0RB0414K	CC	0.01 UF 50V B
C511	E02LF2222M	CE	2200 UF 16V
C515	E02LT2102M	CE	1000 UF 16V
C517	C0PLRR7U2K	CC	680 PF 2KV R
C518	E02LU54R7M	CE	4.7 UF 50V
C522	E50HU2100M	CE	10 UF 16V
C523	E02LU1221M	CE	220 UF 10V
C524	CS0RB0414K	CC	0.01 UF 50V B
△C525	CD39E0M13M	CC	0.001 UF 250V
△C526	P2122B224M	CMP	0.22 UF 275V ECQUL
C530	CS0RB0315K	CC	0.1 UF 25V B
△C531	E5EZF4102M	CE	1000 UF 35V
C532	C03L0R7K3K	CC	0.0027UF 2KV R
C533	E02LU0221M	CE	220 UF 6.3V
C535	C0PLRR7Q2K	CC	470 PF 2KV R
C536	P232T0473J	CMPL	0.047 UF 50V MMTV
C537	P232W0474J	CMPL	0.47 UF 50V MMTS
C539	E02LU5100M	CE	10 UF 50V
△C540	CD39E0MH3M	CC	0.0022UF 250V
C541	E62NFB101M	CE	100 UF 160V
C543	CS0RB0413K	CC	0.001 UF 50V B
C602	CS0RB0216K	CC	1 UF 16V B
C603	CS0RB0216K	CC	1 UF 16V B
C604	CS0RF0316Z	CC	1 UF 25V F
C605	CS0RB0216K	CC	1 UF 16V B
C607	CS0RB0216K	CC	1 UF 16V B
C608	CQGTB0415K	CC	0.1 UF 50V B
C609	CS0RB0315K	CC	0.1 UF 25V B
C610	E02LU0101M	CE	100 UF 6.3V
C611	E50HU53R3M	CE	3.3 UF 50V
C612	CS0RB04E3K	CC	0.0015UF 50V B
C613	E02LU1471M	CE	470 UF 10V
C614	CS0RB0216K	CC	1 UF 16V B
C615	CS0RB0216K	CC	1 UF 16V B
C616	CS0RB04Q3K	CC	0.0047UF 50V B
C618	CQGTB0415K	CC	0.1 UF 50V B
C619	CS0RB0315K	CC	0.1 UF 25V B
C620	CQGTB0415K	CC	0.1 UF 50V B
C621	E50HU2100M	CE	10 UF 16V
C622	CQGTB0415K	CC	0.1 UF 50V B
C623	CS0RB0315K	CC	0.1 UF 25V B
C626	CS0RB0315K	CC	0.1 UF 25V B
C633	CS0RB0414K	CC	0.01 UF 50V B
C634	E02LU5220M	CE	22 UF 50V
C635	E02LU5220M	CE	22 UF 50V
C638	CQGTB0414K	CC	0.01 UF 50V B
C711	E02LU2221M	CE	220 UF 16V
C715	E50HU2100M	CE	10 UF 16V
C716	CS0RCH412J	CC	100 PF 50V CH
C719	CS0RCH412J	CC	100 PF 50V CH
C721	CS0RCH412J	CC	100 PF 50V CH
C724	CS0RB0414K	CC	0.01 UF 50V B

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
CAPACITORS		
C725	E02LU1101M CE	100 UF 10V
C726	CS0RCH4Q2J CC	470 PF 50V CH
C727	CS0RCH4Q2J CC	470 PF 50V CH
C731	CS0RB0414K CC	0.01 UF 50V B
C736	CS0RB0216K CC	1 UF 16V B
C741	E50HU2100M CE	10 UF 16V
C742	E50HU2100M CE	10 UF 16V
C753	CS0RCH4Q2J CC	470 PF 50V CH
C754	CQGTCH4Q2J CC	470 PF 50V CH
C757	E02LU1101M CE	100 UF 10V
C759	CS0RB0413K CC	0.001 UF 50V B
C802	C0JBB0713K CC	0.001 UF 2KV B
C809	CQGTCH4L2J CC	330 PF 50V CH
C810	CS0RCH4L2J CC	330 PF 50V CH
C811	CQGTCH4L2J CC	330 PF 50V CH
C1003	E00NU52R2M CE	2.2 UF 50V
C1004	E02LU5220M CE	22 UF 50V
C1008	E5EZU5100M CE	10 UF 50V
C1009	E02LF3102M CE	1000 UF 25V
C1010	CS0RB0414K CC	0.01 UF 50V B
C1012	CS0RB04U3K CC	0.0068UF 50V B
C1013	E02LU4101M CE	100 UF 35V
C1014	E02LT4471M CE	470 UF 35V
DIODES		
D001	D97U03301B	DIODE,ZENER MTZJ33B T-77
D101	0021721150	LED SLR-342VCT32
D102	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D103	0021E5Q210	LED LTL-1CHGE-002A
D108	D1VT001330	DIODE,SILICON 1SS133T-77
D401	D97U03001B	DIODE,ZENER MTZJ30B T-77
D402	D97U03001B	DIODE,ZENER MTZJ30B T-77
D403	D2WT011E10	DIODE,SILICON 11E1-EIC
D404	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D405	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D406	D2WT011E10	DIODE,SILICON 11E1-EIC
D407	D2WT011E10	DIODE,SILICON 11E1-EIC
D408	D28XQS04N0	DIODE,SCHOTTKY 11EQS04N-TA2B5
△ D410	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△ D501	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D502	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D503	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D504	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D505	D2WT011E10	DIODE,SILICON 11E1-EIC
D506	D1VT001330	DIODE,SILICON 1SS133T-77
D507	D1VT001330	DIODE,SILICON 1SS133T-77
D508	D1VT001330	DIODE,SILICON 1SS133T-77
D509	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D511	D97U01201B	DIODE,ZENER MTZJ12B T-77
D512	D2WXS01400	DIODE,SCHOTTKY SB140-EIC
D513	D28T21DQ09	DIODE,SCHOTTKY 21DQ09N-TA2B1
D514	D1VT001330	DIODE,SILICON 1SS133T-77
D515	D2WXS01400	DIODE,SCHOTTKY SB140-EIC
D516	D28T21DQ09	DIODE,SCHOTTKY 21DQ09N-TA2B1
D517	D2WXS049370	DIODE,SILICON 1N4937
D519	D1VT001330	DIODE,SILICON 1SS133T-77
D520	D28F30DF60	DIODE,RECTIFIER 30DF6-FC
D521	D1VT001330	DIODE,SILICON 1SS133T-77
D525	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△ D526	D2CF2016L0	DIODE,SILICON FE201-6L49
D527	D2WT011E10	DIODE,SILICON 11E1-EIC
D528	D97U01801B	DIODE,ZENER MTZJ18B T-77
D530	D1VT001330	DIODE,SILICON 1SS133T-77
D531	D97U01501B	DIODE,ZENER MTZJ15B T-77
D532	D2WXS049370	DIODE,SILICON 1N4937
D533	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D601	D1VT001330	DIODE,SILICON 1SS133T-77
D602	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D603	D1VT001330	DIODE,SILICON 1SS133T-77
D604	D2WT011E10	DIODE,SILICON 11E1-EIC
D605	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D609	D2WXS01400	DIODE,SCHOTTKY SB140-EIC
D611	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D712	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D804	D1VT001330	DIODE,SILICON 1SS133T-77
D805	D1VT001330	DIODE,SILICON 1SS133T-77
D806	D1VT001330	DIODE,SILICON 1SS133T-77
D1001	D1VT001330	DIODE,SILICON 1SS133T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.		Description
		ICS	
IC101	I5PD0F013B	IC	OECF013B
IC102	I9UF032310	IC	PST3231NR
IC199	A3M511N015	IC	S-24C16AFJA-TB-01
IC201	I0WDE2248E	IC	STV2248E
△ IC401	I0WTD81740	IC	TDA8174A
IC502	I1KA98R09A	IC	KIA78R09API
IC503	I1KA98R060	IC	KIA278R06PI
△ IC506	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC701	I0UF015010	IC	MM1501XNRE
IC1002	I0FSP52760	IC	AN5276
		TRANSISTORS	
Q102	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q103	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q201	T8AA03881S	TRANSISTOR,SILICON	KTC3881S-RTK
Q204	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q401	TDUU024990	TRANSISTOR,SILICON	2SD2499(LB0EC1)
Q402	TC5T01627Y	TRANSISTOR,SILICON	2SC1627_Y(TPE2)
Q403	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146
△ Q501	T41F026510	TRANSISTOR, FIELD EFFECT	2SK2651-01MR
△ Q502	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q503	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q505	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q507	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q508	TNYJJ05001	COMPOUND TRANSISTOR	DTC114TKAT146
Q509	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q510	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q511	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y
Q512	TPYJB05001	COMPOUND TRANSISTOR	DTA114EKAT146
Q513	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q514	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
Q601	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q609	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q702	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q703	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
△ Q804	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△ Q805	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△ Q806	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
Q1002	TPYJC05001	COMPOUND TRANSISTOR	DTA124EKAT146
		COILS & TRANSFORMERS	
L001	02167F100J	COIL	10 UH
L101	02167F100J	COIL	10 UH
L102	02167F100J	COIL	10 UH
L202	033700005R	COIL, VIDEO IFT	3700005
L203	021LA61R0M	COIL	1 UH
L204	021LA6120K	COIL	12 UH
L206	021LA6R22M	COIL	0.22 UH
L207	021LA6100J	COIL	10 UH
L208	02167F3R3J	COIL	3.3 UH
L401	021679472K	COIL	4.7 MH
L403	022800033A	COIL, LINEARITY	20416A
△ L501	029T000091	COIL, LINE FILTER	0R8A393F28Y
L502	02AHB9A972	CORE, FERRITE	W5T29X7.5X19
△ L503	028R200015	COIL, DEGAUSS	8R200015
L601	02167F100J	COIL	10 UH
L704	021LA6220J	COIL	22 UH
L706	021LA6220J	COIL	22 UH
L707	021LA6220J	COIL	22 UH
L708	021LA6220J	COIL	22 UH
L711	021LA6220J	COIL	22 UH
L713	021LA6150K	COIL	15 UH
L715	021LA6100J	COIL	10 UH
L717	021LA6100J	COIL	10 UH
L801	02167F680J	COIL	68 UH
T401	045009003J	TRANS, HORIZONTAL DRIVE	ETH09K14BZ
△ T501	0481350864	TRANSFORMER, SWITCHING	81350864
		JACKS	
J701	063G100042	SOCKET, 21PIN	0350_9982_05
J702	060J131015	HEADPHONE JACK	MSJ-2000
J703	060G401047	RCA JACK	HTJ-032-03AY
J704	060G401046	RCA JACK	HTJ-032-03AW
△ J801	066F130020	SOCKET, CATHODE RAY, TUBE	ISHS53S
		SWITCHES	
SW102	0504101T34	SWITCH, TACT	EVQ21505R
SW104	0504101T34	SWITCH, TACT	EVQ21505R
SW106	0504101T34	SWITCH, TACT	EVQ21505R
SW107	0504101T34	SWITCH, TACT	EVQ21505R

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
SWITCHES		
△ SW501	0530105019	SWITCH
	VARIABLE RESISTORS	
VR401	V1K6313BTE	VOLUME,SEMI FIXED
VR420	V1K62Q2BT8	VOLUME,SEMI FIXED
VR501	V1163H3BTC	VOLUME,SEMI FIXED
	P.C.BOARD ASSEMBLIES	
PCB010	A3M511G010K	PCB ASS'Y
PCB110	A3M511G110K	PCB ASS'Y
	MISCELLANEOUS	
B501	024HT03553	CORE,BEADS
B504	024HT03564	CORE,BEADS
B701	024HT03564	CORE,BEADS
B702	024HT03564	CORE,BEADS
BT001	1412004013	BATTERY,MANGAN
BT002	1412004013	BATTERY,MANGAN
△ CD501	1206655823	CORD,AC BUSH
CD801	1278210014	BRAIDED WIRE
CD802	WDL6042038	FLAT CABLE AWM2468 A
CD803	WBL6034038	FLAT CABLE AWM2468 A
CF201	1012T5R512	FILTER,CERAMIC TRAP
CF202	102E238R9E	FILTER,SAW
CF204	1012T03101	FILTER,CERAMIC TRAP
CF303	1012T04001	FILTER,CERAMIC TRAP
CP001	069W01001A	CONNECTOR PCB SIDE
CP101	069X160379	CONNECTOR PCB SIDE
CP401	069S450089	CONNECTOR PCB SIDE
CP501	069S320419	CONNECTOR PCB SIDE
CP502	069S420110	CONNECTOR PCB SIDE
CP801	069S320010	CONNECTOR PCB SIDE
CP1002	069S120419	CONNECTOR PCB SIDE
CP802A	067U006049	WIRE HOLDER
CP802B	067U006049	WIRE HOLDER
CP803A	067U004029	WIRE HOLDER
CP803B	067U004029	WIRE HOLDER
EL001	124116281A	EYE LET
EL002	124120301A	EYE LET
△ F501	080NT04004	FUSE
△ FB401	043221012F	TRANSFORMER,FLYBACK
FH501	06710T0006	HOLDER,FUSE
FH502	06710T0006	HOLDER,FUSE
ICP501	0845T07003	IC PROTECTOR
ICP502	0845T03003	IC PROTECTOR
OS101	0773071001	REMOTE RECEIVER
RY501	0560V20115	RELAY
△ SP351	070C434001	SPEAKER
△ TH501	D8E080A100	DEGAUSS ELEMENT
TM101	076N0GX010	TRANSMITTER
TU001	0145517007	TUNER,VHF-UHF
△ V801	098A210440	CRT W/DY
X101	100CT4R013	CRYSTAL
X601	100CT4R408	CRYSTAL
X602	100CT3R509	CRYSTAL
RESISTOR		
	RC.....	CARBON RESISTOR
CAPACITORS		
	CC.....	CERAMIC CAPACITOR
	CE.....	ALUMI ELECTROLYTIC CAPACITOR
	CP.....	POLYESTER CAPACITOR
	CPP.....	POLYPROPYLENE CAPACITOR
	CPL.....	PLASTIC CAPACITOR
	CMP.....	METAL POLYESTER CAPACITOR
	CMPL.....	METAL PLASTIC CAPACITOR
	CMPP.....	METAL POLYPROPYLENE CAPACITOR

TOSHIBA Information Systems (UK) Ltd
Consumer Products Division, European Service Centre, Admiralty Way, Camberley, Surrey. GU15 3DT